

350 EXC-F US

ITEM NO.: 3240242EN



Congratulations on your decision to purchase a KTM motorcycle. You are now the owner of a state-of-the-art, sporty motorcycle that you will continue to enjoy for a long time if you maintain it properly.

We hope you enjoy your bike and have a safe journey at all times!

You can enter the serial numbers of your vehicle below to find the serial numbers more quickly if required:

Vehicle identification number  (p. 19)	Dealer stamp
Engine number  (p. 19)	

The owner's manual contained the latest information for this model series at the time of publication. Slight deviations resulting from continuing development and design of the motorcycles cannot, however, be completely excluded.

All specifications are non-binding. KTM Sportmotorcycle GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. KTM accepts no liability for delivery options, differences from illustrations and descriptions, misprints, and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of delivery.

© 2025 KTM Sportmotorcycle GmbH, Mattighofen Austria

All rights reserved. Figures: Mitterbauer / Visus Studios / KISKA / KTM

Written permission from the copyright owner is required before any duplication or reproduction.

ISO 9001

KTM applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.



12 100 6061

Issuing institution:

TÜV SÜD Management Service GmbH

KTM Sportmotorcycle GmbH
Stallhofnerstraße 3
5230 Mattighofen, Austria

This document is valid for:
350 EXC-F US (F8275Z9)



3240242en

24/07/2025

1	Means of representation	9	6	Controls	21
1.1	Conventions.....	9	6.1	Clutch lever	21
1.1.1	Icons	9	6.2	Handbrake lever	21
1.1.2	Formatting	9	6.3	Throttle grip	21
1.1.3	Abbreviations	9	6.4	Horn button	21
2	Safety	10	6.5	Light switch	22
2.1	Safety instructions	10	6.6	Turn signal switch	22
2.2	Reporting safety defects	10	6.7	Electric starter	22
2.3	Noise emission warranty	10	6.8	Kill switch	23
2.4	Operating noise warning	11	6.9	Overview of indicator lights	23
2.5	Manufacturer warranty for the exhaust monitoring system	11	6.10	Ignition lock	23
2.6	Consumer rights	11	6.11	Opening the fuel tank cap	24
2.7	Warning against tampering with the machine	11	6.12	Closing the fuel tank cap	25
2.8	Safe use	12	6.13	Cold start button	25
2.9	Protective clothing	12	6.14	Idle speed adjustment screw	25
2.10	Work rules	12	6.15	Gear shift lever	26
2.11	Environment	13	6.16	Brake pedal	27
2.12	Owner's manual	13	6.17	Side stand	27
2.13	Use definition – intended use	13	6.18	Steering lock	27
2.14	Improper use	14	6.19	Locking the steering	28
2.15	Safety markings on the motorcycle	14	6.20	Unlocking the steering	28
2.15.1	Overview of labels	14	7	Dashboard	29
2.15.2	Label in detail	14	7.1	Combination instrument overview	29
3	Important notes	16	7.2	activation and testing	29
3.1	Manufacturer's warranty, implied warranty	16	7.2.1	Activating combination instrument	29
3.2	Auxiliary material, operating material	16	7.2.2	Display test	29
3.3	Spare parts, accessories	16	7.2.3	WS (wheel size)	30
3.4	Service	16	7.3	Setting kilometers or miles	30
3.5	Figures	16	7.4	Setting the combination instrument	31
3.6	Customer service	16	7.5	Setting the clock	31
4	View of the vehicle	17	7.6	Viewing the lap time	32
4.1	View of vehicle, left side (example)	17	7.7	Display mode SPEED (speed)	32
4.2	View of vehicle, rear right (example)	18	7.8	Display mode SPEED/H (operating hours)	32
5	Serial number	19	7.9	Setup menu	33
5.1	Vehicle identification number	19	7.10	Adjusting the unit of measurement	34
5.2	Type approval label	19	7.11	Display mode SPEED/CLK (time)	34
5.3	Key number	19	7.12	Setting the clock	35
5.4	Engine number	19	7.13	Display mode SPEED/LAP (lap time)	35
5.5	Fork part number	20	7.14	Viewing the lap time	36
5.6	Shock absorber part number	20	7.15	Display mode SPEED/ODO (odometer)	36
			7.16	Display mode SPEED/TR1 (trip master 1)	37
			7.17	Display mode SPEED/TR2 (trip master 2)	37
			7.18	Adjusting TR2 (trip master 2)	38

7.19	Display mode SPEED/A1 (average speed 1)	38	11.5	Adjusting the rebound damping of the shock absorber	57
7.20	Display mode SPEED/A2 (average speed 2)	39	11.6	Measuring the dimension of the unloaded rear wheel	58
7.21	Display mode SPEED/S1 (stop watch 1)	39	11.7	Checking the static sag of the shock absorber	59
7.22	Display mode SPEED/S2 (stop watch 2)	40	11.8	Checking the rider sag of the shock absorber	59
7.23	Table of functions	40	11.9	Adjusting the preload for the shock absorber 	60
7.24	Table of conditions and menu activation	42	11.10	Adjusting the rider sag 	61
8	Preparing for use	43	11.11	Checking the basic setting of the fork	62
8.1	Notes on preparing for first use	43	11.12	Adjusting the compression damping of the fork	62
8.2	Running in the engine	44	11.13	Adjusting the rebound damping of the fork	62
8.3	Starting performance of lithium-ion batteries at low temperatures	44	11.14	Handlebar position	63
8.4	Preparing the vehicle for difficult operating conditions	45	11.15	Adjusting the handlebar position 	63
8.5	Preparing the vehicle for rides on dry sand	45	12	Service work on the chassis	65
8.6	Preparing the vehicle for rides on wet sand	46	12.1	Raising the motorcycle with a lift stand	65
8.7	Preparing for rides on wet and muddy surfaces	46	12.2	Removing the motorcycle from the lift stand	65
8.8	Preparing vehicle for rides at high temperature or slow speed	47	12.3	Bleeding the fork legs	65
8.9	Preparing the vehicle for low temperatures or snow	47	12.4	Cleaning the dust boots of the fork legs	66
9	Riding instructions	48	12.5	Removing the fork protector	67
9.1	Checks and maintenance measures when preparing for use	48	12.6	Installing the fork protector	67
9.2	Starting the vehicle	48	12.7	Removing the frame protector	67
9.3	Starting off	49	12.8	Installing the frame protector	68
9.4	Shifting, riding	49	12.9	Removing the fork legs 	68
9.5	Braking	50	12.10	Installing the fork legs 	69
9.6	Stop, park	50	12.11	Removing the lower triple clamp 	69
9.7	Transportation	51	12.12	Installing the lower triple clamp 	70
9.8	Refueling	51	12.13	Checking the steering head bearing play	72
10	Service schedule	53	12.14	Adjusting the steering head bearing play 	73
10.1	Service schedule	53	12.15	Lubricating the steering head bearing 	74
11	Tuning the chassis	56	12.16	Removing the front top fender	74
11.1	Checking the basic chassis setting with the rider's weight	56	12.17	Installing the front top fender	75
11.2	Compression damping of the shock absorber	56	12.18	Removing the shock absorber 	75
11.3	Adjusting the low-speed compression damping of the shock absorber	56	12.19	Installing the shock absorber 	76
11.4	Adjusting the high-speed compression damping of the shock absorber	57	12.20	Removing the seat	78
			12.21	Mounting the seat	78
			12.22	Removing air filter box cover	79
			12.23	Installing air filter box cover	80

12.24	Removing the air filter 	80	13.11	Adding brake fluid for the rear brake 	106
12.25	Installing the air filter 	81	13.12	Checking that the brake pads of the rear brake are secured	107
12.26	Cleaning the air filter and air filter box 	81	13.13	Changing the rear brake pads 	107
12.27	Preparing the air filter box cover for securing 	82	14	Wheels, tires	110
12.28	Removing the muffler	82	14.1	Removing the front wheel 	110
12.29	Installing muffler	83	14.2	Installing the front wheel 	111
12.30	clean spark arrestor 	83	14.3	Removing the rear wheel 	111
12.31	Changing the damping material on the main silencer 	85	14.4	Installing the rear wheel 	112
12.32	Removing the fuel tank 	85	14.5	Checking the tire condition	113
12.33	Installing the fuel tank 	87	14.6	Checking the tire pressure	114
12.34	Checking the chain for dirt	89	14.7	Checking the spoke tension	115
12.35	Cleaning the chain	89	15	Electrics	116
12.36	Checking the chain tension	90	15.1	Removing the 12 V battery 	116
12.37	Adjusting the chain tension	91	15.2	Installing the 12 V battery 	117
12.38	Checking the chain, rear sprocket, front sprocket, and chain guide	92	15.3	Charging the 12 V battery 	118
12.39	Checking the frame 	94	15.4	Changing the main fuse	121
12.40	Checking the swingarm 	94	15.5	Removing the headlight mask with the headlight	122
12.41	Checking the throttle cable routing	94	15.6	Installing the headlight mask with the headlight	122
12.42	Checking the hand grip	95	15.7	Changing the headlight bulb	123
12.43	Checking/correcting the fluid level of hydraulic clutch	96	15.8	Checking the headlight setting	123
12.44	Adjusting the basic position of the clutch lever	97	15.9	Adjusting the headlight range	124
12.45	Changing the hydraulic clutch fluid 	97	15.10	Changing the turn signal bulb	124
13	Brake system	99	15.11	combination instrument battery, changing	125
13.1	Checking the free travel on the hand brake lever	99	15.12	Diagnostic connector	126
13.2	Adjusting the free travel of the handbrake lever	99	15.13	OCU	126
13.3	Checking the brake discs	99	16	Cooling system	128
13.4	Checking the brake fluid level for the front brake	100	16.1	Cooling system	128
13.5	Adding brake fluid for the front brake 	100	16.2	Checking the frost protection and coolant level	128
13.6	Checking that the brake pads of the front brake are secured	101	16.3	Checking the coolant level	129
13.7	Changing the brake pads of the front brake 	102	16.4	Draining the coolant 	130
13.8	Checking the free travel of the brake pedal	104	16.5	Refilling the coolant 	130
13.9	Adjusting the basic position of the brake pedal 	104	16.6	Changing the coolant	131
13.10	Checking the brake fluid level for the rear brake	105	17	Tuning the engine	133
			17.1	Checking the play in the throttle cable	133
			17.2	Adjusting the throttle cable play 	133
			17.3	Adjusting the characteristic map of the throttle response 	134
			17.4	Adjusting the idle speed 	135

17.5	Teaching the throttle valve position	136	A	Technical terms	167
17.6	Checking the basic position of the gear shift lever	137	B	Fuels.....	168
17.7	Adjusting the basic position of the gear shift lever 	137	C	Operating supplies.....	169
18	Service work on the engine	138	D	Cleaning agents.....	172
18.1	Changing the fuel screen 	138	E	Icons.....	173
18.2	Checking the engine oil level	139	E.1	Symbol colors	173
18.3	Changing the engine oil and oil filter, cleaning the oil screens 	140	E.1.1	Yellow and orange symbols	173
18.4	Adding engine oil	142	E.1.2	Green and blue symbols	173
19	Cleaning, care	144		Index	174
19.1	Cleaning the motorcycle	144			
19.2	Checks and maintenance steps for winter operation	145			
20	Storage	147			
20.1	Storage	147			
20.2	Preparing for use after storage	148			
21	Troubleshooting	149			
21.1	troubleshooting	149			
22	Flash code	151			
22.1	Flash codes	151			
23	Technical specifications	154			
23.1	Engine	154			
23.1.1	Technical data - engine	154			
23.1.2	Capacities - engine	155			
23.2	Chassis	155			
23.2.1	Technical data - chassis	155			
23.2.2	Technical data - tires	156			
23.2.3	Capacities - vehicle	156			
23.3	Electrics	157			
23.3.1	Battery	157			
23.3.2	Fuses	157			
23.3.3	Lamps	157			
23.4	Fork	157			
23.4.1	Technical data - fork	157			
23.4.2	Capacities - fork	158			
23.5	Shock absorber	158			
23.5.1	Technical data - shock absorber	158			
23.5.2	Capacities - shock absorber	159			
23.6	Tightening torque	159			
23.6.1	Engine tightening torques	159			
23.6.2	Chassis tightening torques	162			
Notes		167			

1.1 Conventions

1.1.1 Icons



Indicates a desired result (e.g. of a work step or a function).



Indicates an undesired result (e.g. of a work step or a function).



All work marked with this symbol requires specialist knowledge and technical understanding. Ensure that this work is carried out or supervised by trained personnel from an authorized KTM workshop, and that any special tools required are used.



Indicates a page reference.



Indicates information with more details.



Indicates a tip, e.g. to simplify work.



Indicates the result from a test step.



Indicates the end of an activity, including any rework.

1.1.2 Formatting

Proprietary name	Indicates a proprietary name.
Name[®]	Indicates a protected name.
Brand[™]	Indicates a brand available on the open market.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms that are explained in the glossary.

1.1.3 Abbreviations

2-pc.	two-part
Part no.	Part number
or	respectively
approx.	circa
etc.	et cetera
poss.	possibly/possible
if necessary	if necessary
cmpl.	complete
min.	at least
no.	number
no fig.	no figure
s.	see
among others	among others/not limited to
and the like	and the like
etc.	et cetera
cf.	compare
e.g.	for example

2.1 Safety instructions

Function of the safety instruction

Safety instruction brings attention to dangers when handling the product. Hazards are classified, named, described, and supplemented with information on how to avoid them.

- If there is a safety instruction before a list of instructions, the danger exists throughout the entire activity.
- If there is a safety instruction immediately before an instruction, the next step presents a danger.

Safety instruction layout

All safety instructions are identified by a signal word and a warning symbol. The combination of signal word and warning symbol determines the degree of danger.



DANGER

Indicates an imminent danger that leads to serious injury or death.



WARNING

Indicates a potentially imminent danger that could lead to serious injury or death.



CAUTION

Indicates a potentially imminent danger that can lead to minor or slight injuries.



NOTE

Indicates a situation that can lead to damage to the product or the product environment.



NOTE

Indicates a situation that can lead to environmental damage.

2.2 Reporting safety defects

If you believe that your vehicle has a defect which could cause an accident resulting in injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying KTM North America, Inc.

If the NHTSA receives multiple similar complaints, it may open an investigation. and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or KTM North America, Inc.

You can contact the NHTSA via the toll-free "Auto Safety Hotline" on 1-888-327-4236, visit the www.nhtsa.dot.gov website, or write to: NHTSA Headquarters, 1200 New Jersey Avenue, SE, West Building, Washington, DC 20590, USA. You can also obtain other information about motor vehicle safety from the hotline.

2.3 Noise emission warranty

KTM warrants that this exhaust system, at the time of sale, meets all applicable U.S. EPA Federal noise standards.

This manufacturer's warranty extends to the first person who purchases this exhaust system for purposes other than resale, and to all subsequent buyers.

Warranty claims should be directed to:

KTM North America, Inc., Customer Support, 1119 Milan Ave., Amherst, OH 44001, USA

Phone: (440) 985-3553

www.ktmusa.com

KTM Canada, Inc., Customer Support, 8701 Rue Samuel-Hatt, Chambly, QC J3L 6V4, Canada

Phone: (450) 441-4451

www.ktmcanada.com

2.4 Operating noise warning

This product should be checked for necessary repair or replacement parts if the motorcycle noise has increased significantly through use. Otherwise, the owner may become subject to penalties under the applicable ordinances.

2.5 Manufacturer warranty for the exhaust monitoring system

KTM North America, Inc. guarantees that, at the time of sale, the exhaust monitoring system complies with all the standards of the US Environmental Protection Agency (EPA) and the California Air Resources Board (CARB). This manufacturer warranty applies in respect of the first owner of the motorcycle and all subsequent owners.

Your exhaust monitoring system may include parts, such as the fuel injection system, ignition, catalytic converter, control units, hoses, connectors and other emission related assemblies, fuel tank, crankcase breather, fuel tank lid for vehicles with fuel evaporation monitoring, oil filler cap, pressure control valve, fuel/vapor separator, canister, ignition coils, ignition wire, capacitors and spark plugs, if a fault occurs before the first scheduled replacement; it may also include the hoses, fittings, and pipes that are used directly in these components.

If the warranty conditions are met, KTM will repair your motorcycle for you free of charge, including diagnosis, parts, and labor.

As the owner of the motorcycle, you are responsible for the required maintenance specified in the Owner's Manual.

Please note that KTM is entitled to reject warranty claims if your motorcycle or a part fails due to misuse, negligence, an accident, participation in racing or similar events, improper maintenance or unauthorized modifications.

Scope of the manufacturer's warranty

- Five (5) years or 30,000 kilometers (18,641 miles), whichever occurs first.

If you have any questions regarding the manufacturer warranty for the exhaust monitoring system, please address these to:

KTM North America, Inc. Customer Support, 1119 Milan Ave., Amherst, OH 44001, USA

Phone: (888) 985-6090

U.S. Environmental Protection Agency, 2000 Traverwood Drive, Ann Arbor, MI 48105, USA

California Air Resources Board, 1001 "I" Street, Sacramento, CA 95814, USA

2.6 Consumer rights

Warranty claims must be submitted to an authorized KTM workshop. If you are not satisfied, please contact:

KTM North America, Inc., Customer Support, 1119 Milan Ave., Amherst, OH 44001, USA

Phone: (440) 985-3553

www.ktmusa.com

KTM Canada, Inc., Customer Support, 8701 Rue Samuel-Hatt, Chambly, QC J3L 6V4, Canada

Phone: (450) 441-4451

www.ktmcanada.com

Different rights may apply, according to national or regional legislation.

2.7 Warning against tampering with the machine

Tampering with the noise control system is prohibited. Federal law prohibits the following acts or the causing thereof:

1. The removal or rendering inoperative by any person other than for purposes of servicing, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or
2. the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

1. Removing or drilling through rear mufflers, baffle plates, manifolds, or other components that conduct exhaust gases.
2. Removing or puncturing parts of the intake system.
3. Lack of proper maintenance.
4. Replacing moving parts of the vehicle, or parts of the exhaust system or intake system, with parts other than those specified by the manufacturer.

2.8 Safe use



DANGER

Danger of accidents A rider who is not fit to ride poses a danger to themselves and to others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs, or medication.
- Do not operate the vehicle if you are physically or mentally incapable of doing so.



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.



WARNING

Danger of burns Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
- Allow the vehicle parts to cool down before performing any work on the vehicle.

The vehicle should only be used when it is in perfect technical condition, for its intended purpose, and in a safe and environmentally-friendly manner.

An appropriate driver's license is needed to drive the vehicle on public roads.

Have malfunctions that impair safety promptly eliminated by an authorized KTM workshop.

Observe the information and warning stickers on the vehicle.

2.9 Protective clothing



WARNING

Risk of injury Missing or inadequate protective clothing increases the risk of injury.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as pants and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.

2.10 Work rules

Unless specified otherwise, the ignition must be switched off during all work (models with ignition lock, models with transponder key) or the engine must be at a standstill (models without ignition lock or transponder key).

Special tools are required for some work. The tools are not part of the vehicle, but can be ordered using the number in parentheses. Example: bearing puller (15112017000)

Unless otherwise noted, normal conditions apply to all tasks and descriptions.

Ambient temperature	20 °C (68.0 °F)
Ambient air pressure	1,013 mbar (14.69 psi)

Relative air humidity	60 ±5 %
-----------------------	---------

During assembly, use new parts to replace parts which cannot be reused (e.g. self-locking screws and nuts, expansion screws, seals, sealing rings, O-rings, pins, and lock washers).

A thread lock (e.g. **Loctite®**) is required for some screw connections. Observe the manufacturer's specific instructions for use.

If thread lock (e.g. **Precote®**) has already been applied to a new part, do not apply any additional thread lock.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Replace damaged or worn parts.

After completing a repair or service, check the operating safety of the vehicle.

2.11 Environment

Handling the vehicle responsibly reduces the risk of conflict with other road users and the surrounding area. The future of motorcycling also depends on using motorcycles legally, being environmentally conscious and respecting the rights of others.

When disposing of used oil, other operating and auxiliary fluids, and used components, the laws and regulations of the respective country must be observed.

As motorcycles are not subject to the EU regulations governing the disposal of end-of-life vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. More information is available from authorized KTM dealers.

2.12 Owner's manual

Read this owner's manual carefully and in full before riding off for the first time. The owner's manual contains information and tips on how to operate, handle, and service your vehicle, as well as advice on optimum tuning and how to avoid injuries.



Tip

Save this owner's manual on your smartphone, for example, so that you can access it at any time.

An authorized KTM dealer will be happy to assist you if you are unsure.

The owner's manual is an important component of the vehicle. If the vehicle is sold, the owner's manual must be downloaded again by the new owner.

The owner's manual can be downloaded multiple times using the QR code or the link on the delivery certificate.

The owner's manual is also available for download from your authorized KTM dealer and on the KTM website. A physical copy can also be ordered from your authorized KTM dealer.

International KTM Website: <https://www.ktm.com>

2.13 Use definition – intended use

This vehicle has been designed and built to withstand the normal stresses and strains of offroad leisure use.



Note

This vehicle is homologated and approved for use on public roads.


No homologation-relevant components may be removed or modified.

2.14 Improper use

The vehicle may only be used as intended.
Improper use can result in danger to people, property and the environment.
Any use of the vehicle beyond the intended and defined use constitutes misuse.
Improper use includes the use of operating and auxiliary materials that do not meet the required specifications for the respective use.

2.15 Safety markings on the motorcycle

2.15.1 Overview of labels

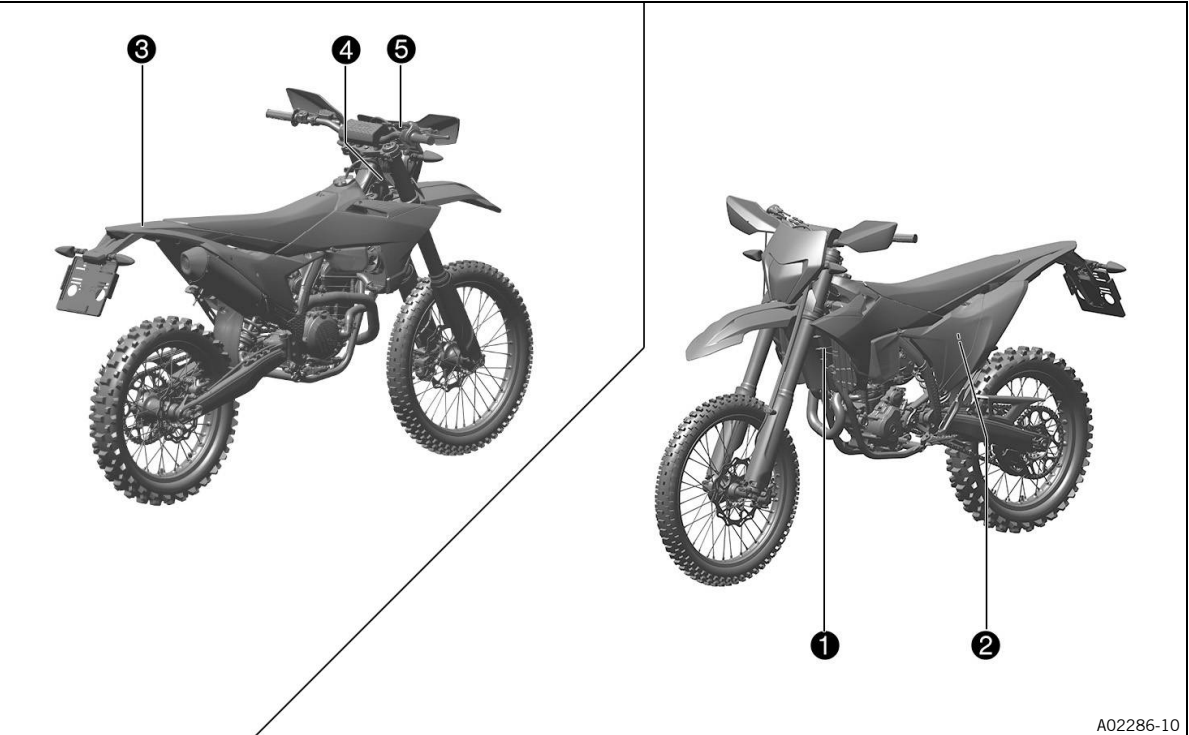

- 1

Type label USA/CAN
- 2

Information on chain tension
- 3

Information on preparations for use
- 4


Information on emissions control
- 5

Information on noise emissions

2.15.2 Label in detail

MANUFACTURED BY/FABRIQUÉ PAR: KTM AG AUSTRIA							
GVWR / PNBV: 739 lbs 335 kg				Type:	Date: 07/25		
WHEEL ROUE	GAWR / PNBE:		TIRE PNEU	RIM JANTE	COLD INFLATION PRESSURE PRESSION DE GONFLAGE À FROID		
	lbs	kg			psi/LPC	kPa	bar
FRONT/1st	320	145	90/90-21	1.60x21	29	200	2.0
REAR/2nd	419	190	140/80-18	2.15x18	29	200	2.0
THIS VEHICLE CONFIRMS TO ALL APPLICABLE U.S. FEDERAL MOTOR VEHICLE SAFETY STANDARDS IN EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE							
VIN/NIV: DUMMY*							
THIS VEHICLE CONFIRMS TO ALL APPLICABLE STANDARDS PRESCRIBED UNDER THE CANADIAN MOTOR VEHICLE SAFETY REGULATIONS IN EFFECT ON THE DATE OF MANUFACTURE - CE VEHICULE EST CONFORME A TOUTES LES NORMES QUI LUI SONT, APPLICABLES EN VERTU DU RÉGLEMENT SUR LA SÉCURITÉ DES VÉHICULES AUTOMOBILES DU CANADA EN VIGUEUR À LA DATE DE SA FABRICATION							

Type label USA/CAN

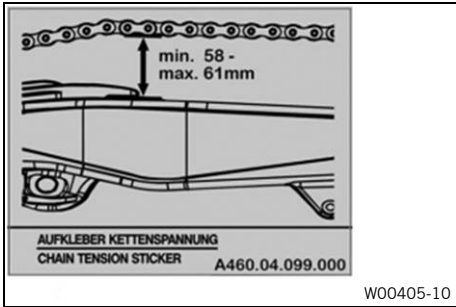

Information on chain tension

W00405-10



Information on preparations for use

W00404-10

VEHICLE EMISSION CONTROL INFORMATION			
MANUFACTURER: KTM AG, Mattighofen, Austria			
IMPORTER: KTM NORTH AMERICA, INC.			
ENGINE DISPLACEMENT	350 cc	ENGINE EXHAUST EMISSION CONTROL SYSTEM:	TBI, H2O2
ENGINE FAMILY	TKTXC-300E9F		
EVAPORATIVE FAMILY	TKTXB00143LE		
PERMEATION FAMILY	TKTXPP5048P7	MODEL NAME	350 EXC-F
THIS VEHICLE CONFORMS WITH US EPA AND CALIFORNIA REGULATIONS APPLICABLE TO			
2026 MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO			
0.9 G/M HC+NOK, 12 G/M CO EXHAUST EMISSION STANDARDS IN CALIFORNIA.			
ENGINE TUNEUP SPECIFICATIONS:			
IGNITION TIMING:	NON ADJUSTABLE		
IDLE SPEED:	2000 +/- 50	RPM IN NEUTRAL	
IDLE MIXTURE:	NON ADJUSTABLE		
VALVE CLEARANCE:	0.08 - 0.15 mm INTAKE	0.12 - 0.19 mm EXHAUST	
SPARK PLUG:	NGK LMAR3A-10		
SPARK PLUG GAP:	1.0 mm		
FUEL:	UNLEADED GASOLINE ONLY - 91 (R+M)/2 OCTANE OR HIGHER		
OIL:	SAE 10 W 50		

Information on emissions control

A02290-10

MOTORCYCLE NOISE EMISSION CONTROL INFORMATION	
KTM AG, AUSTRIA	
THIS 2026 KTM4700350 MOTORCYCLE, A490.05.182.000 MEETS EPA	
NOISE EMISSION REQUIREMENTS OF 80 dBA AT 7200 RPM BY THE	
FEDERAL TEST PROCEDURE. MODIFICATIONS WHICH CAUSE THIS	
MOTORCYCLE TO EXCEED FEDERAL NOISE STANDARDS ARE	
PROHIBITED BY U.S. FEDERAL LAW. SEE OWNER'S MANUAL.	

A02291-10

Information on noise emissions

3 Important notes

3.1 Manufacturer's warranty, implied warranty

The work prescribed in the service schedule must be carried out in an authorized KTM workshop only and confirmed in the electronic proof of service, since otherwise no warranty claims will be recognized. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the manufacturer's warranty.

3.2 Auxiliary material, operating material

Use operating materials and auxiliary materials in accordance with the operating instructions and specifications.

3.3 Spare parts, accessories

For safety reasons, only spare parts and accessories approved by KTM may be used. Installation must be carried out in an authorized KTM workshop. KTM accepts no liability for other products and any resulting damage or loss. Certain spare parts and accessory products are specified in parentheses in the descriptions. Authorized KTM dealers will be happy to help.

The current **KTM PowerParts** are listed for each vehicle on the KTM website.

International KTM Website: <https://www.ktm.com>

3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the owner's manual. An incorrect suspension setting can lead to damage and breakage of chassis components.

Use of the vehicle under arduous conditions, such as on sand or on wet, dusty and muddy surfaces, can result in significantly increased wear of components, such as the powertrain, brake system, air filter, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service interval.

Please adhere to the prescribed run-in times and service intervals at all times. Strictly adhering to this will ensure a much longer service life for your motorcycle.

The relevant mileage or time interval is whichever occurs first.

3.5 Figures

Some of the figures in this document contain optional extras.

For clarity, some components may be shown disassembled or may not be shown at all. Disassembly is not always absolutely necessary in order to carry out the activities described. The textual information takes precedence.


3.6 Customer service

Authorized KTM dealers will be happy to answer questions about the vehicle and KTM.

A list of authorized KTM dealers can be found on the KTM website.

International KTM Website: <https://www.ktm.com>

4.1 View of vehicle, left side (example)

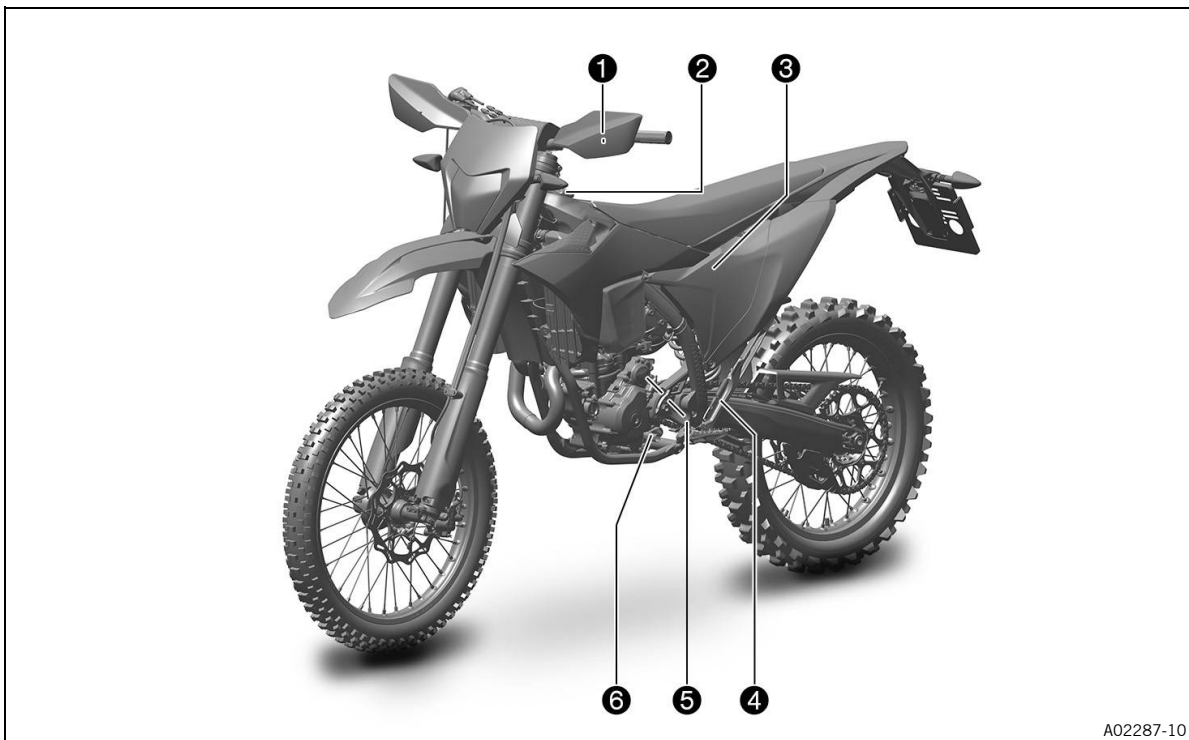

A02287-10

❶ Clutch lever 📖 (p. 21)

❷ Fuel tank cap

❸ Air filter box cover

❹ Side stand 📖 (p. 27)

❺ Engine number 📖 (p. 19)

❻ Gear shift lever 📖 (p. 26)

4 View of the vehicle


4.2 View of vehicle, rear right (example)



A02288-10


- | | |
|--|--|
| ① Horn button  (p. 21) | ③ Throttle grip  (p. 21) |
| ① Light switch  (p. 22) | ④ Handbrake lever  (p. 21) |
| ① Turn signal switch  (p. 22) | ⑤ Fork part number  (p. 20) |
| ② Electric starter  (p. 22) | ⑥ Brake pedal  (p. 27) |
| ② Kill switch  (p. 23) | ⑦ Level viewer for brake fluid, rear |

5.1 Vehicle identification number

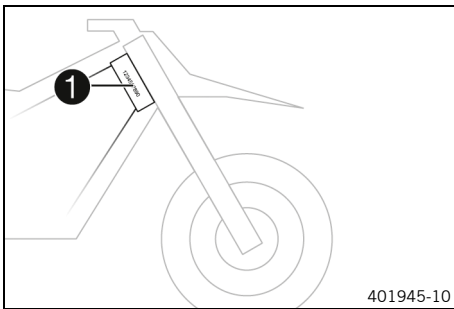


The vehicle identification number ❶ is stamped on the right-hand side of the steering head.

5.2 Type approval label

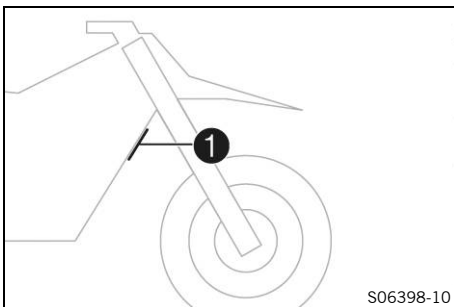

The type approval label for the USA and Canada ❶ is fixed to the front of the frame breast pipe.

5.3 Key number

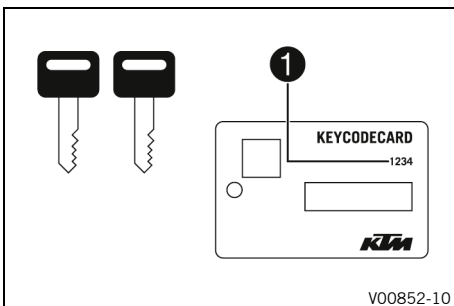


Key number ❶ for the ignition and steering lock is indicated on the key card.



Note

The key number is required to order a spare key and should therefore be kept in a safe place.


5.4 Engine number

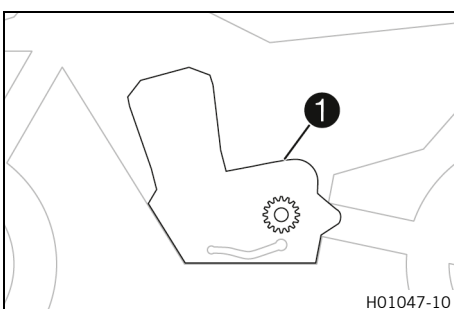

The engine number ❶ is stamped on the left side of the engine above the front sprocket.


5 Serial number

5.5 Fork part number

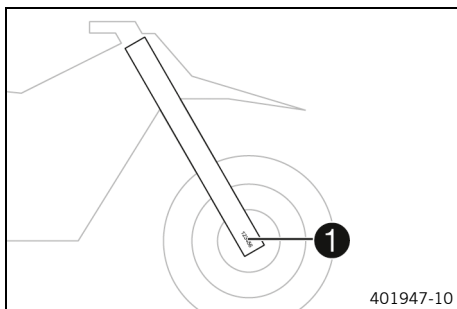

Fork part number ❶ is stamped on the inside of the fork shoe.

5.6 Shock absorber part number

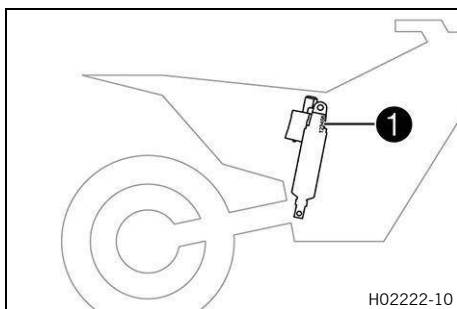


Shock absorber part number ❶ is stamped on the top right of the shock absorber.

6.1 Clutch lever




Clutch lever **1** is fitted on the left side of the handlebar. The clutch is activated hydraulically and adjusts itself automatically.

6.2 Handbrake lever

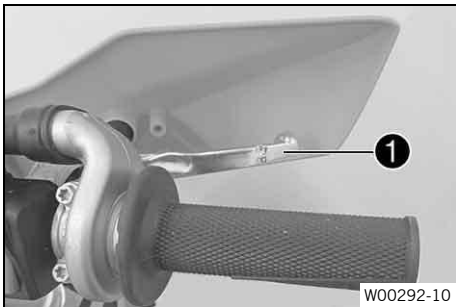


Hand brake lever **1** is fitted on the right side of the handlebar. The front brake is engaged using the hand brake lever.

6.3 Throttle grip

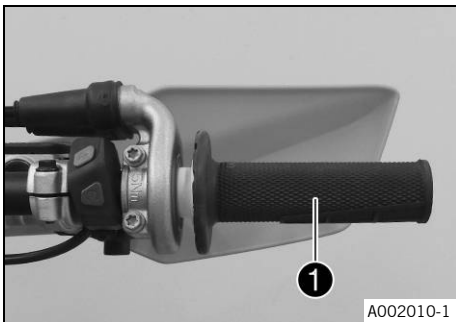

The throttle twist grip **1** is fitted on the right side of the handlebar.

6.4 Horn button

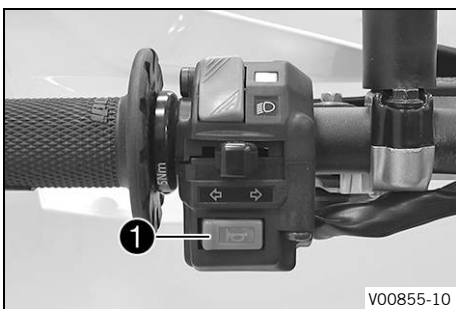

Horn button **1** is fitted on the left side of the handlebar.

Condition	Meaning
Horn buttons  in the basic position	No function
Horn button  pressed.	The horn is operated in this position.

6.5 Light switch



Light switch 1 is fitted on the left side of the handlebar.

Condition		Meaning
	Low beam on – The light switch is turned downward.	In this position, the low beam and tail light are switched on.
	High beam on – The light switch is turned upwards.	In this position, the high beam and the tail light are switched on.

6.6 Turn signal switch




Turn signal switch 1 is fitted on the left side of the handlebar.

Condition		Meaning
	Turn signal switch pressed to the left	Left turn signal on. The turn signal switch returns automatically to the central position after use.
	Turn signal switch pressed to the right	Right turn signal on. The turn signal switch returns automatically to the central position after use.

To switch off the turn signal, press the turn signal switch towards the switch case.

6.7 Electric starter

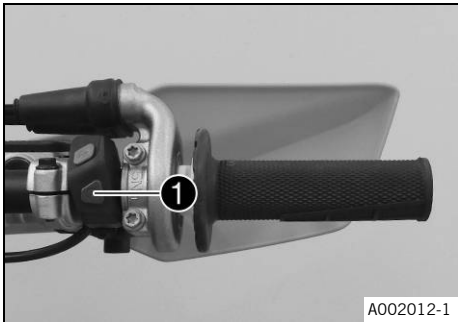


Electric starter 1 is fitted on the right side of the handlebar.

Condition	Meaning
Electric starter (⚡) in the basic position	No function
Electric starter (⚡) pressed – The starter motor is actuated in this position.	In this position, the starter motor is actuated.

6.8

Kill switch

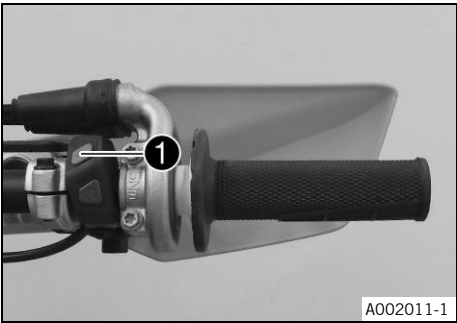


Kill switch ❶ is fitted on the right side of the handlebar.

Condition	Meaning
Kill button  is not pressed.	In this position, the ignition circuit is closed, and the engine can be started.
The kill button  is pressed and held.	In this position, the ignition circuit is interrupted, a running engine stops, and an engine at standstill will not start.

6.9


Overview of indicator lights

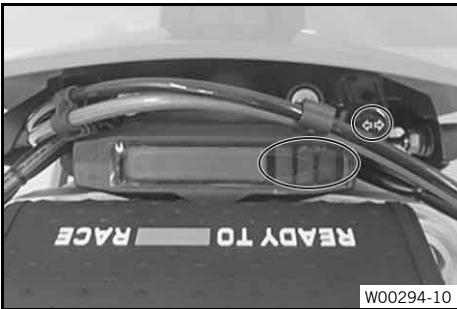

Condition		Meaning
	The high beam indicator light lights up blue.	The high beam is switched on.
	Failure indicator light lights up/flashes yellow.	The OBD has detected an error in the vehicle electronics. Come safely to a halt, and contact an authorized KTM workshop.
	Fuel level warning light lights up yellow.	The fuel level has reached the reserve mark.
	Turn signal indicator light flashes green.	The turn signal is switched on.

6.10

Ignition lock

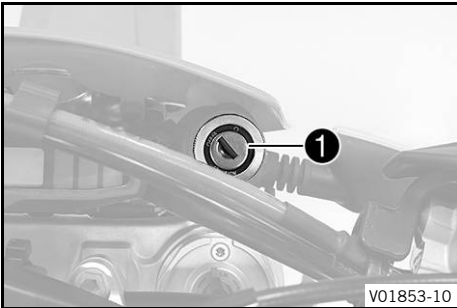

Condition		Meaning
	Ignition off – In this position, the ignition circuit is interrupted, a running engine stops, and an engine at a standstill will not start.	Ignition off.
	Ignition on – In this position, the ignition circuit is closed, and the engine can be started.	Ignition on.

6.11 Opening the fuel tank cap



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



WARNING

Danger of poisoning Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.



NOTE


Environmental hazard Improper handling of fuel is dangerous to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.



- Press release button ❶, turn the fuel tank cap counterclockwise, and lift it off.

6.12 Closing the fuel tank cap

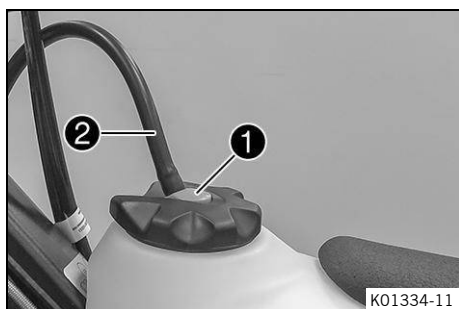


- Mount the fuel tank filler cap and turn it clockwise until release button ① engages.

Route hose of fuel tank vent ② without kinks.



6.13 Cold start button

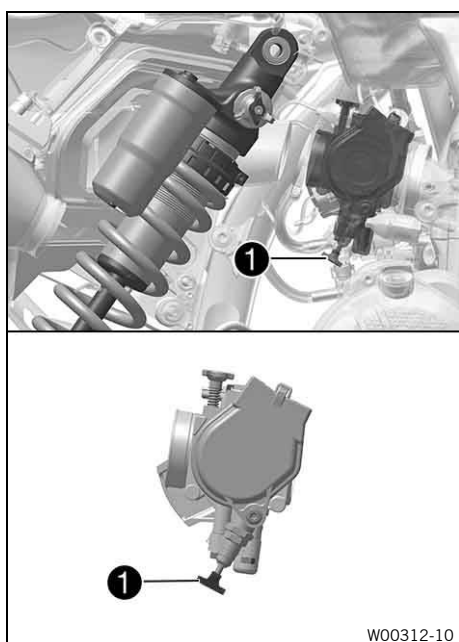


Cold start button ① is fitted to the bottom of the throttle body. The electronic fuel injection extends the injection time when the engine is cold and the ambient temperature is low. To help the engine burn the increased amount of fuel, it must be supplied with additional oxygen by pushing the cold start button. Check whether the cold start button has returned to its basic position.

6.14 Idle speed adjustment screw

The idle setting of the throttle body substantially influences the vehicle's starting behavior, a stable idle speed, and the vehicle's response when the throttle is opened.


An engine with a correctly set idle speed is easier to start than an engine with the idle speed set incorrectly.

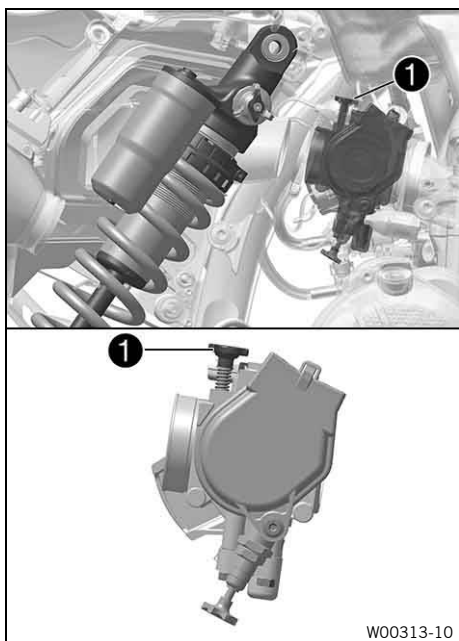


The idle speed is adjusted using idle speed adjusting screw ❶. Increase the idle speed by turning the idle speed adjustment screw clockwise.

Decrease the idle speed by turning the idle speed adjustment screw counterclockwise.

6.15 Gear shift lever

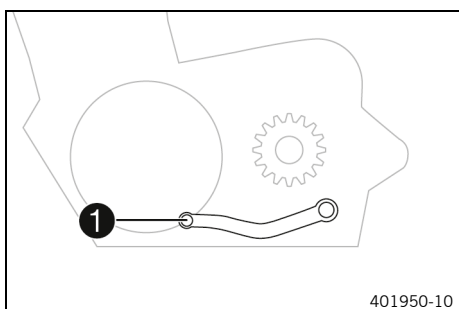


Gear shift lever ❶ is mounted on the left of the engine.

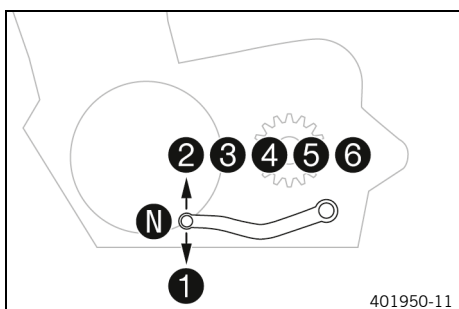

The gear positions can be seen in the figure.


The neutral or idle position is between the first and second gears.

6.16 Brake pedal

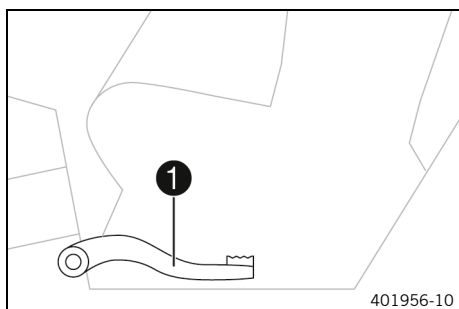


Brake pedal **1** is located in front of the right footpeg. The rear brake is operated with the brake pedal.

6.17 Side stand

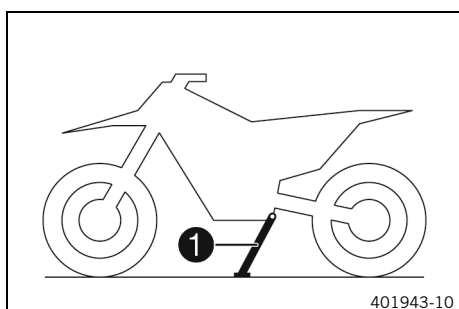

The side stand **1** is attached to the left side of the vehicle.

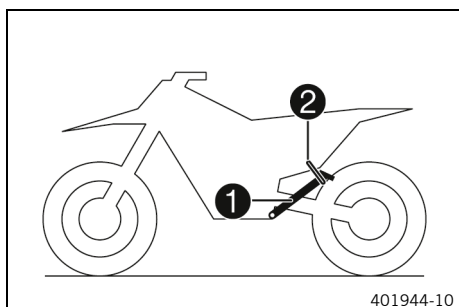


The side stand is used for parking the motorcycle.



Note

When you are riding, side stand **1** must be folded up and secured with rubber band **2**.

6.18 Steering lock

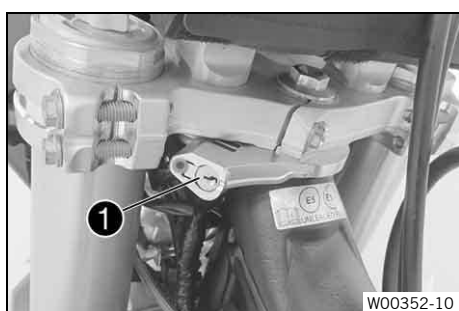

Steering lock **1** is fitted on the left side of the steering head. The steering lock is used to lock the steering. Steering and riding is then no longer possible.

6.19 Locking the steering




NOTE

Material damage The vehicle may be damaged if parked incorrectly. Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

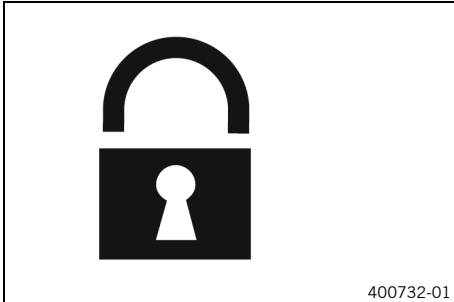


- Park the vehicle.
- Turn handlebar as far as possible to the right.
- Lubricate the steering lock regularly.

Universal oil spray  (p. 169)

- Insert the key for the steering lock into the steering lock  (p. 27), turn it to the left, press it in, turn it to the right and remove.

Never leave the key for the steering lock in the steering lock.

6.20 Unlocking the steering

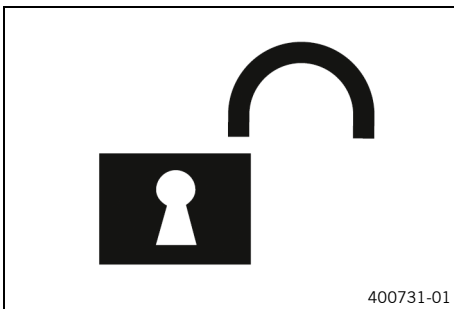


- Insert the key for the steering lock into the steering lock  (p. 27), turn it to the left, pull it out, turn it to the right and remove.

Never leave the key for the steering lock in the steering lock.

- ✓ The handlebar can now be moved again.

7.1 Combination instrument overview

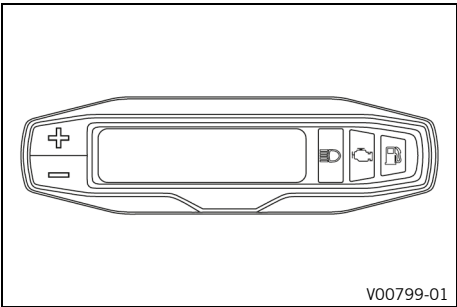


- Press **button**  to control different functions.
- Press **button**  to control different functions.

Note
When the vehicle is delivered, only the **SPEED/H** and **SPEED/ODO** display modes are activated.


7.2 activation and testing

7.2.1 Activating combination instrument

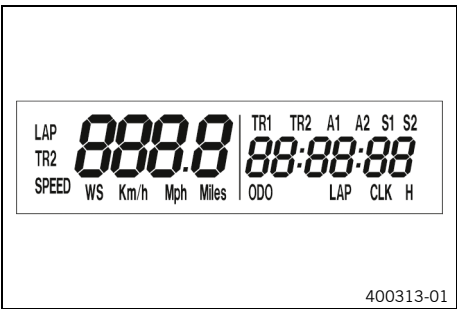

The combination instrument is activated when one of the buttons is pressed or an impulse comes from the wheel speed sensor.

7.2.2 Display test

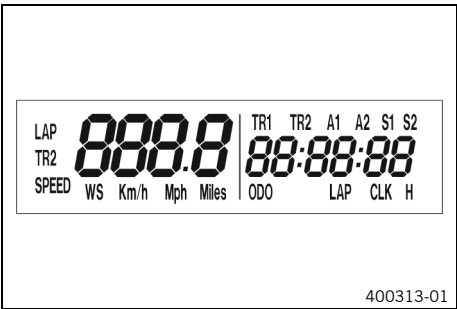

To enable you to check that the display is functioning properly, all display segments light up briefly.

7.2.3 WS (wheel size)



After the display function check, the wheel circumference **WS** is displayed briefly.


i Note
The number 2205 equals the circumference of the 21" front wheel with standard tires.

The indicator then changes to the last selected mode.

7.3 Setting kilometers or miles

i Note
If the unit is changed, value **ODO** is retained and converted accordingly.
The values **TR1**, **TR2**, **A1**, **A2** and **S1** are cleared when the unit of measure is changed.

Condition: Motorcycle is stationary

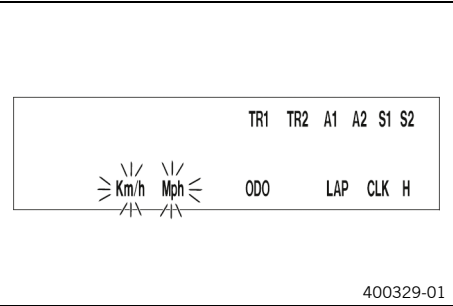

- Press button **+** briefly until indicator **H** appears in the bottom right of the display.
- Press button **+** for 2–3 seconds.
 - ✓ The Setup menu is displayed and the active functions are shown.
- Press button **+** briefly until indicator **Km/h / Mph** flashes.

- Select one of the following alternatives.

Adjusting the Km/h

- Press button **+**.

Adjusting the Mph


- Press button **–**.
- Wait 3–5 seconds.
 - ✓ The settings are stored.

i Note
When a pulse is received from the wheel speed sensor, the settings are automatically saved and the setup menu is closed.

7.4 Setting the combination instrument

Note
When the vehicle is delivered, only the **SPEED/H** and **SPEED/ODO** display modes are activated.

Condition: Motorcycle is stationary

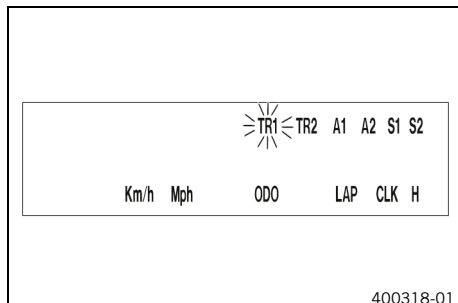

- Press button **+** briefly until indicator **H** appears in the bottom right of the display.
- Press button **+** for 2–3 seconds.
- ✓ The Setup menu is displayed and the active functions are shown.

Note
When a pulse is received from the wheel speed sensor, the settings are automatically saved and the setup menu is closed.

- Press button **+** briefly until the desired function flashes.
- ✓ The selected function flashes.
- Select one of the following alternatives.

Activating the function

- Press button **+**.
- ✓ The symbol continues to appear in the display and the next function appears.


Deactivating a function

- Press button **–**.
- ✓ The symbol disappears in the display and the next function appears.



7.5 Setting the clock

Condition: Motorcycle is stationary

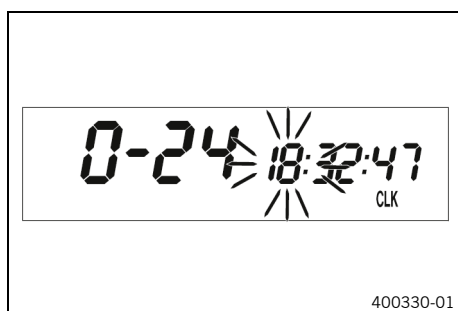

- Press button **+** briefly until indicator **CLK** appears in the bottom right of the display.
- Press button **+** for 2–3 seconds.
- ✓ The hour display flashes.
- Adjust the hour display with the **button +** or **button –**.
- Wait 3–5 seconds.
- ✓ The next segment of the display flashes and can be set.
- You can set the following segments in the same way as the hours by pressing the **button +** and **button –**.

Note
The seconds can only be set to zero.
When a pulse is received from the wheel speed sensor, the settings are automatically saved and the setup menu is closed.




7.6 Viewing the lap time

Note

This function can only be opened if lap times have actually been timed.

Condition: Motorcycle is stationary

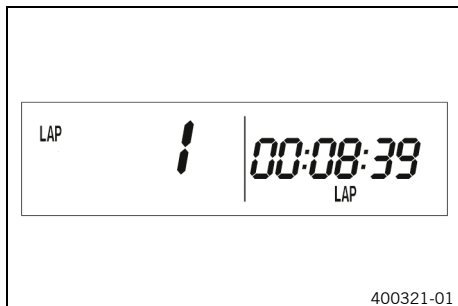


- Press button  briefly until indicator **LAP** appears in the bottom right of the display.
- Press button  briefly.
 - ✓ **LAP 1** appears on the left side of the display.
- You can use the button  to view laps 1–10.
- Press and hold the button  for 3–5 seconds.
 - ✓ The lap times are deleted.
- Press button  briefly.
 - ✓ Next display mode

Note

When an impulse is received from the wheel speed sensor, the left side of the display changes back to the **SPEED** mode.

7.7 Display mode SPEED (speed)

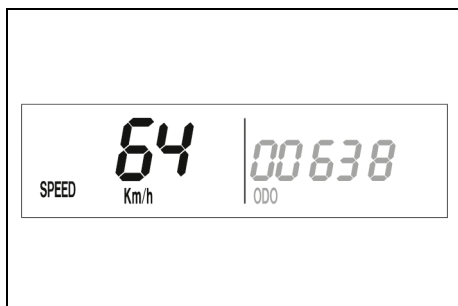


- Press button  briefly until indicator **SPEED** appears in the left of the display.
- The current speed is displayed in the **SPEED** display mode.
The current speed can be displayed in **Km/h** or **Mph**.

Note

Make the setting according to the country.
When an impulse comes from the front wheel, the left side of the display changes to the **SPEED** mode and the current speed is shown.

7.8 Display mode SPEED/H (operating hours)

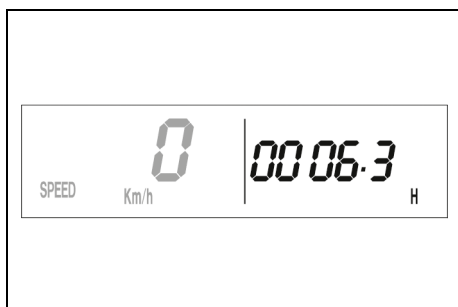

Condition: Motorcycle is stationary

- Press button  briefly until indicator **H** appears in the bottom right of the display.
- In display mode **H**, the operating hours of the engine are displayed.
The operating hour counter stores the total traveling time.

Note

The operating hour counter is necessary for ensuring that service work is carried out at the right intervals.
If the combination instrument is in **H** display mode when starting off, it automatically changes to the **ODO** display mode.
The **H** display mode is suppressed during the journey.

– Press button  for 2–3 seconds.	The display changes to the functions setup menu.
– Press button  briefly.	Next display mode
– Press button  for 2–3 seconds.	No function
– Press button  briefly.	No function

7.9 Setup menu

			TR1	TR2	A1	A2	S1	S2
Km/h	Mph		ODO		LAP	CLK	H	

Condition: Motorcycle is stationary

- Press button  briefly until indicator **H** appears in the bottom right of the display.
- Press button  for 2–3 seconds.

The Setup menu displays the active functions.


Note
Repe

Repeatedly press the **button** briefly until the desired function is reached.

If no button is pressed for 20 seconds, the settings are automatically saved.

– Press button  briefly.	Activates the flashing display and changes to the next display
– Press button  for 2–3 seconds.	No function
– Press button  briefly.	Deactivates the flashing display and changes to the next display
– Press button  for 2–3 seconds.	No function
– Wait 3–5 seconds.	Changes to the next display without changes
– Wait 10–12 seconds.	Setup menu starts, stores the settings, and changes to H or ODO .

7.10 Adjusting the unit of measurement

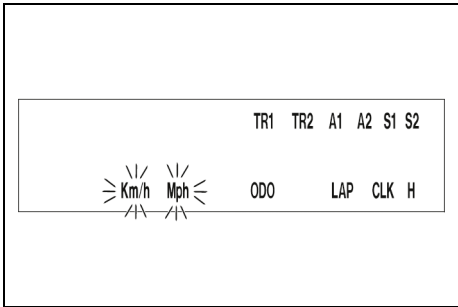

- Condition: Motorcycle is stationary
- Press button **+** for 2–3 seconds.
 - Press button **+** briefly until indicator **H** appears in the bottom right of the display.
 - Press button **+** briefly until indicator **Km/h / Mph** flashes.
- In measurement unit mode, you can change the unit of measurement.

i Note
If no button is pressed for 5 seconds, the settings are automatically saved.

– Press button + briefly.	Starts selection, activates Km/h display
– Press button + for 2–3 seconds.	No function
– Press button – briefly.	Activates Mph display
– Press button – for 2–3 seconds.	No function
– Wait 3–5 seconds.	Changes to the next display, changes from selection to the Setup menu
– Wait 10–12 seconds.	Stores and closes the Setup menu.

7.11 Display mode SPEED/CLK (time)




- Press button **+** briefly until indicator **CLK** appears in the bottom right of the display.
- The time is shown in display mode **CLK**.

– Press button + for 2–3 seconds.	The display changes to the Setup menu of the clock.
– Press button + briefly.	Next display mode
– Press button – for 2–3 seconds.	No function

– Press button  briefly.	No function
---	-------------

7.12 Setting the clock

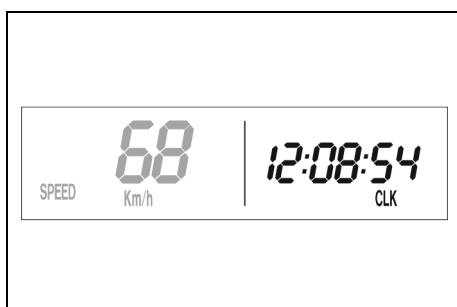


Condition: Motorcycle is stationary

- Press button  briefly until indicator **CLK** appears in the bottom right of the display.
- Press button  for 2–3 seconds.

– Press button  for 2–3 seconds.	Increases the value
– Press button  briefly.	Increases the value
– Press button  for 2–3 seconds.	Reduces the value
– Press button  briefly.	Reduces the value
– Wait 3–5 seconds.	Changes to the next value
– Wait 10–12 seconds.	Exit the Setup menu

7.13 Display mode SPEED/LAP (lap time)

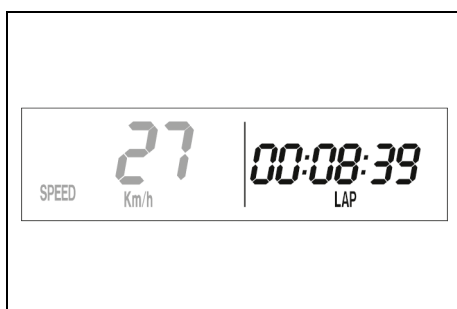

- Press button  briefly until indicator **LAP** appears in the bottom right of the display.

In the **LAP** display mode, up to 10 lap times can be timed with the stop watch.



Note

If the lap time continues running after the button  is pressed, 9 memory locations are filled.


Lap 10 must be timed with the button .

– Press button  for 2–3 seconds.	The stop watch and the lap time are reset.
– Press button  briefly.	Next display mode



– Press button  for 2–3 seconds.	Stops the stop watch
– Press button  briefly.	Starts the stop watch or stops the current lap time measurement, stores it and the stop watch starts the next lap.

7.14 Viewing the lap time

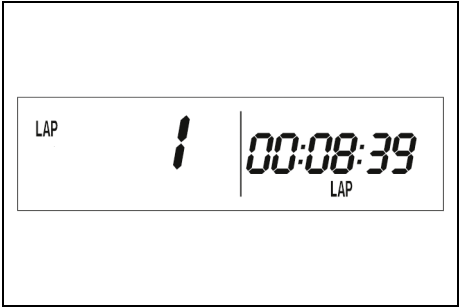

Condition: Motorcycle is stationary

– Press button  briefly until indicator LAP appears in the bottom right of the display.	
– Press button  briefly.	
– Press button  for 2–3 seconds.	The stop watch and the lap time are reset.
– Press button  briefly.	Select a lap from 1 – 10
– Press button  for 2–3 seconds.	No function
– Press button  briefly.	View the next lap time

7.15 Display mode SPEED/ODO (odometer)




– Press button  briefly until indicator **ODO** appears in the bottom right of the display.

The total traveled distance is shown in display mode **ODO**.

– Press button  for 2–3 seconds.	No function
– Press button  briefly.	Next display mode
– Press button  for 2–3 seconds.	No function
– Press button  briefly.	No function

7.16 Display mode SPEED/TR1 (trip master 1)

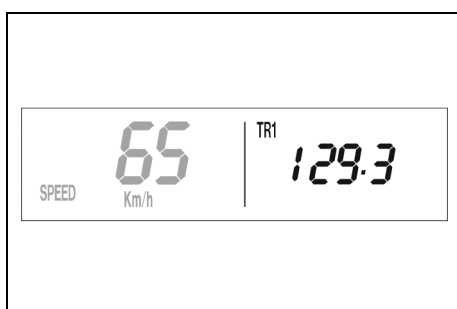

- Press button **+** briefly until indicator **TR1** appears in the top right of the display.

TR1 (trip master 1) runs constantly and counts up to 999.9.

You can use it to measure trips or the distance between refueling stops.


TR1 is coupled with **A1** (average speed 1) and **S1** (stop watch 1).

i Note

If 999.9 is exceeded, the values of **TR1**, **A1** and **S1** are automatically reset to 0.0.

– Press button + for 2–3 seconds.	Displays of TR1 , A1 and S1 are reset to 0.0.
– Press button + briefly.	Next display mode
– Press button – for 2–3 seconds.	No function
– Press button – briefly.	No function

7.17 Display mode SPEED/TR2 (trip master 2)

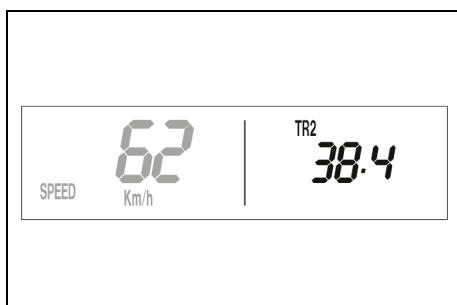


- Press button **+** briefly until indicator **TR2** appears in the top right of the display.

It **TR2** (trip master 2) runs constantly and counts up to 999.9.

– Press button + for 2–3 seconds.	Clears the values TR2 and A2
– Press button + briefly.	Next display mode
– Press button – for 2–3 seconds.	Reduces value TR2
– Press button – briefly.	Reduces value TR2

7.18 Adjusting TR2 (trip master 2)

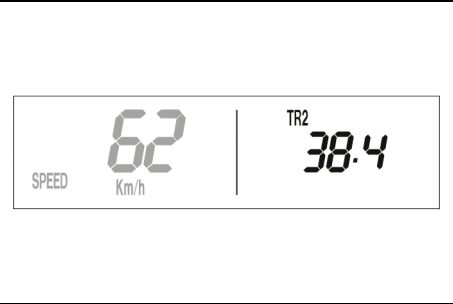

Condition: Motorcycle is stationary

- Press button **+** briefly until indicator **TR2** appears in the top right of the display.
- Press the **button -** for 2–3 seconds until **TR2** flashes.

The displayed value can be set manually with the **button +** and **button -**. This is a very practical function when riding using the road book.

i Note

The value of **TR2** can also be corrected manually during the journey with **button +** and **button -**.

If 999.9 is exceeded, the value of **TR2** is automatically reset to 0.0.

– Press but-ton + for 2–3 sec-onds.	Increases value TR2
– Press but-ton + briefly.	Increases value TR2
– Press but-ton - for 2–3 sec-onds.	Reduces value TR2
– Press but-ton - briefly.	Reduces value TR2
– Wait 10–12 seconds.	Stores and closes the Setup menu.

7.19 Display mode SPEED/A1 (average speed 1)



- Press button **+** briefly until indicator **A1** appears in the top right of the display.

A1 (average speed 1) shows the average speed calculated using **TR1** (trip master 1) and **S1** (stop watch 1). The calculation of this value is activated by the first impulse of the wheel speed sensor and ends 3 seconds after the last impulse.

– Press but-ton + for 2–3 sec-onds.	Displays of TR1 , A1 and S1 are reset to 0.0.
– Press but-ton + briefly.	Next display mode

– Press button  for 2–3 seconds.	No function
– Press button  briefly.	No function

7.20 Display mode SPEED/A2 (average speed 2)



- Press button  briefly until indicator **A2** appears in the top right of the display.

A2 (average speed 2) shows the average speed on the basis of the current speed if the stop watch **S2** (stop watch 2) is running.



Note

The displayed value can differ from the actual average speed if **S2** was not stopped after the ride.

– Press button  briefly.	Next display mode
– Press button  for 2–3 seconds.	No function
– Press button  for 2–3 seconds.	No function
– Press button  briefly.	No function

7.21 Display mode SPEED/S1 (stop watch 1)



- Press button  briefly until indicator **S1** appears in the top right of the display.

S1 (Stop watch 1) shows the riding time based on **TR1** and continues running as soon as an impulse arrives from the wheel speed sensor.


The calculation of this value starts with the first impulse from the wheel speed sensor and ends 3 seconds after the last impulse.

– Press button  for 2–3 seconds.	Displays of TR1 , A1 and S1 are reset to 0.0.
– Press button  briefly.	Next display mode



– Press button  for 2–3 seconds.	No function
– Press button  briefly.	No function

7.22 Display mode SPEED/S2 (stop watch 2)

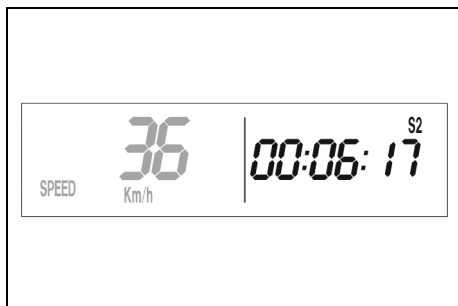

- Press button  briefly until indicator **S2** appears in the top right of the display.

S2 (Stop watch 2) is a manual stop watch.

If **S2** is running in the background, the display **S2** flashes.

– Press button  for 2–3 seconds.	The displays of S2 and A2 are set to 0,0.
– Press button  briefly.	Next display mode
– Press button  for 2–3 seconds.	No function
– Press button  briefly.	Starts or stops S2

7.23 Table of functions

Display	Press button  for 2–3 seconds.	Press button  briefly.	Press button  for 2–3 seconds.	Press button  briefly.	Wait 3–5 seconds.	Wait 10–12 seconds.
Display mode SPEED/S2 (stop watch 2)	The displays of S2 and A2 are set to 0,0.	Next display mode	No function	Starts or stops S2		
Display mode SPEED/S1 (stop watch 1)	Displays of TR1 , A1 and S1 are reset to 0.0.	Next display mode	No function	No function		
Display mode SPEED/A2 (average speed 2)	No function	Next display mode	No function	No function		
Display mode SPEED/A1 (average speed 1)	Displays of TR1 , A1 and S1 are reset to 0.0.	Next display mode	No function	No function		

Display	Press button  for 2–3 seconds.	Press button  briefly.	Press button  for 2–3 seconds.	Press button  briefly.	Wait 3–5 seconds.	Wait 10–12 seconds.
Adjusting TR2 (trip master 2)	Increases value TR2	Increases value TR2	Reduces value TR2	Reduces value TR2		Stores and closes the Setup menu.
Display mode SPEED/TR2 (trip master 2)	Clears the values TR2 and A2	Next display mode	Reduces value TR2	Reduces value TR2		
Display mode SPEED/TR1 (trip master 1)	Displays of TR1 , A1 and S1 are reset to 0.0.	Next display mode	No function	No function		
Display mode SPEED/ODO (odometer)	No function	Next display mode	No function	No function		
Viewing the lap time	The stop watch and the lap time are reset.	Select a lap from 1 – 10	No function	View the next lap time		
Display mode SPEED/LAP (lap time)	The stop watch and the lap time are reset.	Next display mode	Stops the stop watch	Starts the stop watch or stops the current lap time measurement, stores it and the stop watch starts the next lap.		
Setting the clock	Increases the value	Increases the value	Reduces the value	Reduces the value	Changes to the next value	Exit the Setup menu
Display mode SPEED/CLK (time)	The display changes to the Setup menu of the clock.	Next display mode	No function	No function		
Adjusting the unit of measurement	No function	Starts selection, activates Km/h display	No function	Activates Mph display	Changes to the next display, changes from selection to the Setup menu	Stores and closes the Setup menu.
Setup menu	No function	Activates the flashing display and changes to the next display	No function	Deactivates the flashing display and changes to the next display	Changes to the next display without changes	Setup menu starts, stores the settings, and changes to H or ODO .
Display mode SPEED/H (operating hours)	The display changes to the functions setup menu.	Next display mode	No function	No function		

7.24 Table of conditions and menu activation

Display	Motorcycle is stationary	Menu can be activated
Display mode SPEED/S2 (stop watch 2)		•
Display mode SPEED/S1 (stop watch 1)		•
Display mode SPEED/A2 (average speed 2)		•
Display mode SPEED/A1 (average speed 1)		•
Adjusting TR2 (trip master 2)	•	
Display mode SPEED/TR2 (trip master 2)		•
Display mode SPEED/TR1 (trip master 1)		•
Display mode SPEED/ODO (odometer)		
Viewing the lap time	•	
Display mode SPEED/LAP (lap time)		•
Setting the clock	•	
Display mode SPEED/CLK (time)		
Adjusting the unit of measurement	•	
Setup menu	•	
Display mode SPEED/H (operating hours)	•	
Display mode SPEED (speed)		

8.1 Notes on preparing for first use



DANGER

Danger of accidents A rider who is not fit to ride poses a danger to themselves and to others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs, or medication.
- Do not operate the vehicle if you are physically or mentally incapable of doing so.



WARNING

Risk of injury Missing or inadequate protective clothing increases the risk of injury.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as pants and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.



WARNING

Danger of accidents Different tire profiles on the front and rear wheels can make it more difficult to control the vehicle.

- Make sure that only tires of the same tread type are mounted to the front and rear wheel.



WARNING

Danger of accidents Not adapting the riding style constitutes a major risk.

- Adapt the vehicle speed to the road conditions and your riding ability.



WARNING

Danger of accidents The vehicle is not designed to carry passengers.

- Do not ride with a passenger.



WARNING

Danger of accidents The brake system fails in the event of overheating.

If the brake pedal is not released, the brake pads grind continuously.

- Take your foot off the brake pedal when you are not braking.



WARNING

Danger of accidents Total weight and axle loads influence the handling characteristic.

- Do not exceed the maximum permissible total weight or the axle loads.



WARNING

Risk of injury People who act without authorization endanger themselves and others.

- Never leave the vehicle unattended while the engine is running.
- Secure the vehicle against unauthorized access.



Note

When using the motorcycle, remember that others may be disturbed by excessive noise.

- Ensure that the pre-delivery inspection has been carried out by an authorized KTM workshop.
 - ✓ The delivery certificate is transferred upon vehicle handover.
- Read the entire owner's manual before riding for the first time.
- Get to know the controls.
- Adjust the basic position of the clutch lever. 📖 (p. 97)
- Adjust the free travel of the handbrake lever. 📖 (p. 99)
- Adjust the basic position of the brake pedal. 🦶 📖 (p. 104)
- Adjust the basic position of the gear shift lever. 🦶 📖 (p. 137)

8 Preparing for use

- Get used to the handling characteristics of the motorcycle on suitable terrain before undertaking a more challenging ride.



Note

When off-road, it is recommended that you be accompanied by another person with another vehicle so that you can help each other.

- Also, ride as slowly as possible and in a standing position to get a better feel for the motorcycle.
- Do not make any off-road trips that exceed your ability and experience.
- Hold the handlebar firmly with both hands and keep your feet on the footpegs when riding.
- If luggage is carried, ensure it is fixed firmly as close as possible to the center of the vehicle and ensure even weight distribution between the front and rear wheels.



Note

Motorcycles react sensitively to any changes of weight distribution.

- The maximum permissible total weight and the maximum permissible axle loads must not be exceeded.

Maximum permissible total weight	335 kg (738.5 lb)
Maximum permissible front axle load	145 kg (319.7 lb)
Maximum permissible rear axle load	190 kg (418.9 lb)

- Check the spoke tension.  (p. 115)

The spoke tension must be checked after half an hour of operation.

- Run in the engine.  (p. 44)


8.2 Running in the engine

- Do not exceed the specified engine speed and load during the running-in time.

Maximum engine speed	
During the first operating hour	7,000 rpm (116.67 Hz)
Maximum engine power	
during the first 3 operating hours	≤ 75 %

- Avoid fully opening the throttle.

8.3 Starting performance of lithium-ion batteries at low temperatures

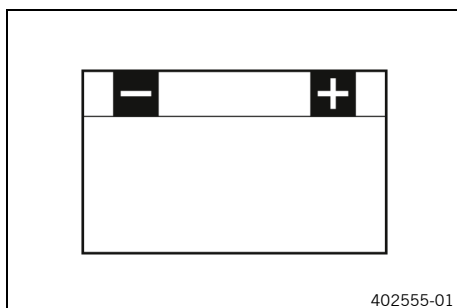

Lithium-ion batteries are far lighter than lead batteries, have a low self-discharge rate, and have more starting power at temperatures over 6 °C (43 °F).

Several attempts to start may be required. Press the start button for 5 seconds, and wait 15 seconds between attempts. At low temperatures, wait for 30 seconds. The pauses are necessary so that the heat created can be distributed through the lithium-ion battery without damaging the lithium-ion battery.

The starting power increases as the battery warms up.

Always make sure the lithium-ion battery is charged to that there is enough power to spare for starting at low temperatures.

After 6 unsuccessful starting attempts, do not try again, and check the vehicle for other faults instead.

8.4 Preparing the vehicle for difficult operating conditions

i Note

Use of the vehicle under difficult conditions, such as on sand or on wet and muddy surfaces, can result in significantly increased wear of components, such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service interval.

- Clean the air filter and air filter box.  (p. 81)

Check the air filter approx. every 30 minutes.

- Check the connector for humidity and corrosion and to ensure it is firmly seated.
 - » If moisture, corrosion, or damage is found:
 - Clean and dry the socket connector, or change it if necessary.
- Riding on dry sand.  (p. 45)
- Riding on wet sand.  (p. 46)
- Rides on wet and muddy surfaces.  (p. 46)
- Riding at high temperatures or slow speed.  (p. 47)
- Riding at low temperatures and in snow.  (p. 47)

8.5 Preparing the vehicle for rides on dry sand



- Mount the air filter dust protection.

Air filter dust protection cover (A46009620000)



Note

Observe the fitting instructions for **KTM PowerParts**.



- Mount the air filter sand protection.

Air filter sand protection (A46006922000)



Note

Observe the fitting instructions for **KTM PowerParts**.

8 Preparing for use



- Clean the chain.

Chain cleaner  (p. 172)

- Mount the steel sprocket.
- Grease the chain.

Universal oil spray  (p. 169)

- Clean the radiator fins.
- Straighten the bent radiator fins carefully.

8.6 Preparing the vehicle for rides on wet sand



- Mount the air filter water protection.

Air filter water protection (A46006921000)



Note

Observe the fitting instructions for **KTM PowerParts**.



- Clean the chain.

Chain cleaner  (p. 172)

- Mount the steel sprocket.
- Grease the chain.

Universal oil spray  (p. 169)

- Clean the radiator fins.
- Straighten the bent radiator fins carefully.

8.7 Preparing for rides on wet and muddy surfaces



- Mount the air filter water protection.

Air filter water protection (A46006921000)



Note

Observe the fitting instructions for **KTM PowerParts**.



- Mount the steel sprocket.
- Clean the motorcycle. 📖 (p. 144)
- Straighten the bent radiator fins carefully.



8.8 Preparing vehicle for rides at high temperature or slow speed



- Adjust the secondary transmission to the road conditions.



Note

The engine oil heats up quickly when the clutch is operated frequently due to an excessively high secondary ratio.



- Clean the chain.
- Chain cleaner 📖 (p. 172)
- Clean the radiator fins.
 - Straighten the bent radiator fins carefully.
 - Check the coolant level. 📖 (p. 129)



8.9 Preparing the vehicle for low temperatures or snow



- Mount the air filter water protection.

Air filter water protection (A46006921000)



Note


Observe the fitting instructions for **KTM PowerParts**.



9.1 Checks and maintenance measures when preparing for use

Note

Before every trip, check the condition of the vehicle and ensure that it is safe to operate. The vehicle must be in perfect technical condition when it is being operated.

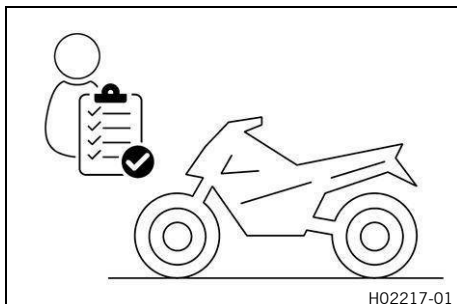

- Check the engine oil level.  (p. 139)
- Check the electrical system.
- Check the brake fluid level for the front brake.  (p. 100)
- Check the brake fluid level for the rear brake.  (p. 105)
- Check that the brake pads of the front brake are secured.  (p. 101)
- Check that the brake pads of the rear brake are secured.  (p. 107)
- Check that the brake system is functioning properly.
- Check the coolant level.  (p. 129)
- Check the chain for dirt.  (p. 89)
- Check the chain, rear sprocket, engine sprocket, and chain guide.  (p. 92)
- Check the chain tension.  (p. 90)
- Check the tire condition.  (p. 113)
- Check the tire pressure.  (p. 114)

Condition: Offroad use

- Make sure that the rim locks are installed.
- Check the spoke tension.  (p. 115)

The spoke tension must be checked regularly as incorrect spoke tension will severely impair riding safety.

- Clean the dust boots of the fork legs.  (p. 66)
- Bleed the fork legs.  (p. 65)
- Check the air filter.
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check all screws, nuts, and hose clamps regularly for tightness.
- Check the fuel level.

9.2 Starting the vehicle



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.


- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.




NOTE

Engine failure Running a cold engine at high engine speeds negatively impacts the service life of the engine.

- Always warm up the engine at low engine speeds.

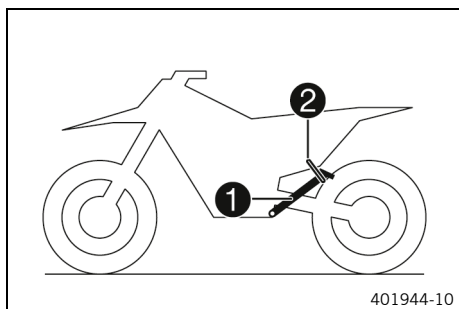

- Take the motorcycle off side stand ① and secure the side stand with rubber band ②.
- Shift the transmission into the neutral position.
- Turn the ignition key in the ignition lock to position .

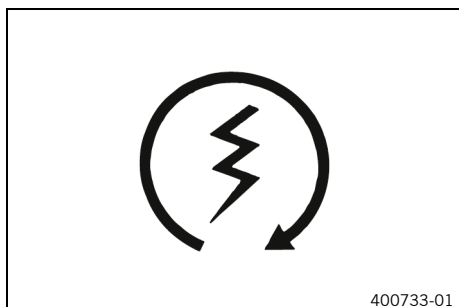

Condition: Ambient temperature: < 20 °C (< 68.0 °F)

- Press the cold start button in all the way to the stop.
- Press the electric starter.

Press the electric starter for a maximum of 5 seconds.

Wait for 30 seconds before a further attempt at starting.



Note

At temperatures below 6 °C (43 °F), several attempts at starting may be necessary to warm-up the lithium-ion battery and thereby increase the starting power. The malfunction indicator light lights up during the starting process.



9.3 Starting off



Note

When you are riding, the side stand must be folded up and secured with the rubber band.

- Pull the clutch lever, shift into first gear, release the clutch lever slowly and at the same time carefully open the throttle.



9.4 Shifting, riding



WARNING

Danger of accidents If you downshift at high engine speed, the rear wheel blocks and the engine races.

- Do not downshift to a lower gear at high engine speeds.



Note

If unusual noises occur while riding, stop immediately, switch off the engine and contact an authorized KTM workshop.

First gear is used for starting off or for steep inclines.

- Shift into a higher gear when conditions allow (incline, riding situation, etc.). To do so, release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch lever and open the throttle.
- After reaching maximum speed by fully opening the throttle twist grip, turn the throttle back so that it is $\frac{3}{4}$ open. This will reduce the speed slightly, but the fuel consumption will be considerably lower.
- Only open the throttle as much as the engine can handle. Abruptly opening the throttle increases fuel consumption.
- To shift down, apply the brakes and close the throttle at the same time.

9 Riding instructions

- Pull the clutch lever and shift into a lower gear, release the clutch lever slowly, and either open the throttle or shift again.
- Switch off the engine if you are likely to be running at idle speed or stationary for a long time.

≥ 2 min
- Avoid frequent and lengthy slipping of the clutch. This causes the engine oil, engine and cooling system to heat up.
- Ride at a low engine speed instead of at a high engine speed when riding the clutch.

9.5 Braking



WARNING

Danger of accidents Braking with excessive force locks the wheels.

- Adapt your braking to the riding situation and the road conditions.



WARNING

Danger of accidents A spongy pressure point on the front or rear brake reduces the brake action.

- Do not drive the vehicle if the brake system has a spongy pressure point.



WARNING

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake pads and the brake discs.

- On sandy, wet, or slippery surfaces, use the rear brake.
- Always finish braking before you go into a bend. Shift into a lower gear that suits the speed.
- Use the brake action of the engine on long downhill stretches. To do so, shift back one or two gears, but do not overrev the engine. This means that significantly less braking is required and means the brake system does not overheat.

9.6 Stop, park



WARNING

Risk of injury People who act without authorization endanger themselves and others.

- Never leave the vehicle unattended while the engine is running.
- Secure the vehicle against unauthorized access.



WARNING

Danger of burns Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
- Allow the vehicle parts to cool down before performing any work on the vehicle.



NOTE

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.



NOTE

Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.

- Make sure that nobody sits on the vehicle when it is parked on a stand.

- Brake the motorcycle.
- Shift the transmission into the neutral position.
- Press kill switch  when the engine is at idle speed until the engine stops.
- Park the motorcycle on firm ground.



9.7 Transportation



NOTE

Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.


- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.



NOTE

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

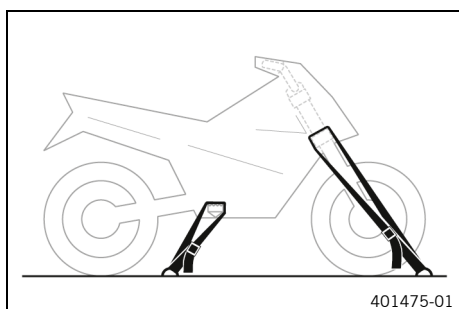

- Switch off the engine.
- Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.

9.8 Refueling



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



WARNING

Danger of poisoning Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.

9 Riding instructions

- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.




NOTE

- Environmental hazard** Improper handling of fuel is dangerous to the environment.
- Do not allow fuel to enter the groundwater, the soil, or the sewage system.



NOTE

- Material damage** Inadequate fuel quality can lead to losses in performance and consequential damage.
- Refuel only with clean fuel that meets the specified standards.

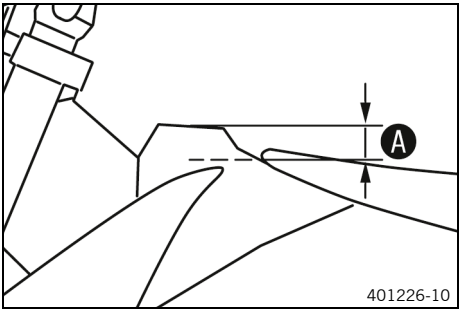

- Switch off the engine.
- Open the fuel tank cap. (p. 24)
- Fill the fuel tank with fuel no higher than **A**.

Level A	35 mm (1.38 in)
Total fuel tank capacity, approx.	
Super unleaded (ROZ 95) (p. 168)	8.5 l (2.25 liq. gal _{US})

- Close the fuel tank cap. (p. 25)

10.1 Service schedule

Any further work that results from the service work must be ordered separately and invoiced separately.

Different service intervals may apply in your country, depending on the local operating conditions.

Individual service intervals and scopes may change in the course of technical developments. The most up-to-date service schedule is available for authorized dealers for the electronic proof of service. Your authorized dealer will be happy to advise you.

** For California residents only: Inspection and adjustment is free until 5 years or 30,000 km (18,641 mi), whichever comes first.

	Every 24 months				
	Every 6,000 km (3,728.2 mi)				
	Every 3,000 km (1,864.1 mi)				
	Every 1,000 km (621.4 mi)				
	After 70 km (43.5 mi)				
Read out the fault memory using the diagnostics tool. 	○	●	●	●	●
Program the gear position sensor. 		●	●	●	
Check that the electrical equipment is functioning properly.	○	●	●	●	
Check and charge the 12 V battery. 		●	●	●	●
Check that the brake pads of the front brake are secured.  (p. 101)		●	●	●	●
Check that the brake pads of the rear brake are secured.  (p. 107)		●	●	●	●
Check the brake discs.  (p. 99)		●	●	●	●
Check the brake lines for damage and tightness.		●	●	●	●
Check the brake fluid level for the front brake.  (p. 100)		●	●		
Change the brake fluid for the front brake. 				●	●
Check the brake fluid level for the rear brake.  (p. 105)		●	●		
Change the brake fluid for the rear brake. 				●	●
Check/correct the fluid level of the hydraulic clutch.  (p. 96)			●		
Change the hydraulic clutch fluid.   (p. 97)				●	●
Check the free travel on the hand brake lever.  (p. 99)	○	●	●	●	●
Check the free travel of the brake pedal.  (p. 104)		●	●	●	●
Check idle speed. ** 	○	●	●	●	●
Change the engine oil and the oil filter, clean the oil screens.   (p. 140)	○	●	●	●	●
Check all hoses (e.g. fuel, cooling, bleeder, drainage, etc.) and boots for cracking, leaks, and correct routing. 	○	●	●	●	●
Check the cables for damage and that there are no kinks in the routing. 		●	●	●	●
Check that the clutch cables are undamaged, routed without kinks, and set correctly.		●	●	●	
Check the frame.   (p. 94)		●	●	●	
Check the swingarm.   (p. 94)		●	●	●	
Check the swingarm bearing for play. 			●	●	
Check the heim joint on the shock absorber for play. 			●	●	
Check the tire condition.  (p. 113)		●	●	●	●
Check the tire pressure.  (p. 114)		●	●	●	●
Check the wheel bearing for play. 		●	●	●	


10 Service schedule

	Every 24 months				
	Every 6,000 km (3,728.2 mi)				
	Every 3,000 km (1,864.1 mi)				
	Every 1,000 km (621.4 mi)				
	After 70 km (43.5 mi)				
Check the hubs. 		•	•	•	
Check the rim run-out. 	○	•	•	•	
Check the spoke tension.  (p. 115)	○	•	•	•	
Check the chain, rear sprocket, engine sprocket, and chain guide.  (p. 92)	○	•	•	•	
Check the chain tension.  (p. 90)	○	•	•	•	•
Grease all moving parts (e.g. side stand, hand lever, chain, etc.) and check for smooth operation. 	○	•	•	•	•
Check valve clearance. ** 	○		•	•	
Change the fuel filter. 				•	•
Check the clutch. 			•	•	
Clean the air filter and air filter box.   (p. 81)		•	•	•	•
Check the inlet membrane. 			•	•	
Change the damping material on the main silencer.   (p. 85)			•	•	
Carry out fork service. 			•	•	
Service the shock absorber. 			•	•	
Check all screws, nuts, and hose clamps for a tight fit. 	○	•	•	•	•
Change the fuel screen.   (p. 138)	○	•	•	•	•
Check the fuel pressure. 	○		•	•	•
Check the frost protection and coolant level.  (p. 128)			•	•	
Check the coolant level.  (p. 129)	○	•			
Change the coolant.  (p. 131)					•
Check that the radiator fan is functioning properly. 	○	•	•	•	
Check the steering head bearing play.  (p. 72)	○	•			
Lubricate the steering head bearing.   (p. 74)			•	•	•
Check the headlight setting.  (p. 123)		•	•	•	
Clean spark arrestor.   (p. 83)				•	•
Perform engine service including removing and installing the engine. (Change the spark plug and spark plug connector. Change the piston. Check/measure the cylinder. Check the cylinder head. Change the valves, valve springs, valve spring retainers and valve spring seats. Check the camshaft and cam lever. Change the connecting rod, conrod bearing and crank pin. Check the transmission and shift mechanism. Check the oil pressure control valve. Change the suction pump. Check the force pump and lubrication system. Check the timing assembly. Change the timing chain. Change all engine bearings and all gaskets. Change the freewheel.) 				•	
Final check: Check the vehicle is roadworthy and take a test ride. 	○	•	•	•	•
Read out the fault memory after the test ride using the diagnostics tool. 	○	•	•	•	•
Enter electronic proof of service. 	○	•	•	•	•

- One-time interval
- Periodic interval

11.1 Checking the basic chassis setting with the rider's weight

Note When adjusting the basic chassis setting, first adjust the shock absorber and then the fork.

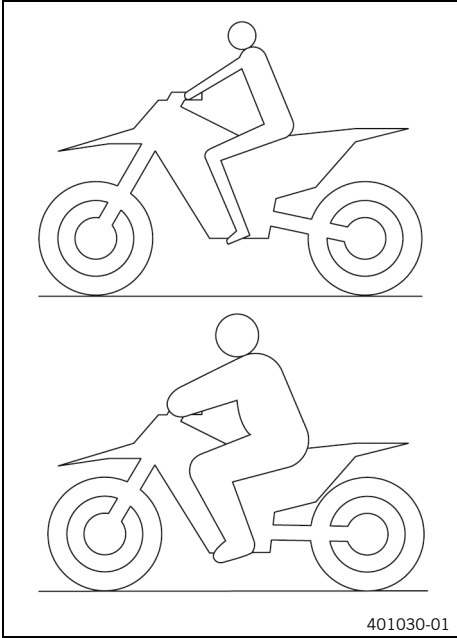

- For optimal motorcycle riding characteristics and to avoid damage to forks, shock absorbers, swingarm, and frame, the basic settings of the suspension components must match the rider's weight.
 - As delivered, KTM offroad motorcycles are adjusted for an average rider's weight (with full protective clothing).
- | | |
|-----------------------|--|
| Standard rider weight | 75 kg ... 85 kg
(165.3 lb ... 187.4 lb) |
|-----------------------|--|
- If the rider's weight is above or below this range, the basic setting of the suspension components must be adjusted accordingly.
 - Small weight differences can be compensated for by adjusting the preload, but in the case of large weight differences, the springs must be replaced.


11.2 Compression damping of the shock absorber

The compression damping of the shock absorber is divided into two ranges: high-speed and low-speed. High-speed and low-speed refer to the compression speed of the rear wheel suspension and not to the vehicle speed. The high-speed compression has an effect, for example, when landing after a jump: the rear wheel suspension compresses quickly. The low-speed compression has an effect, for example, when riding over long bumps: the rear wheel suspension compresses slowly. These two ranges can be adjusted separately, although the transition between high-speed and low-speed is floating. As a result, changes in the high-speed range affect the compression damping in the low-speed range and vice versa.

11.3 Adjusting the low-speed compression damping of the shock absorber

CAUTION
Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.
– Please follow the description provided.

Note The effect of the low-speed compression adjustment can be seen in slow to normal compression of the shock absorber.

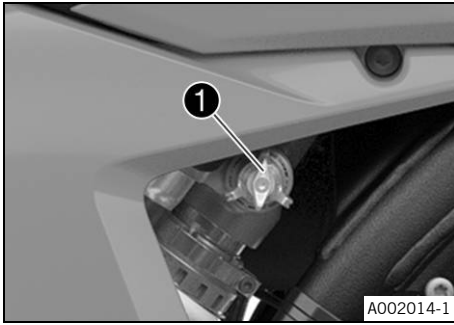

- Turn adjusters ① clockwise up to the last perceptible click.
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Comfort	18 clicks
Standard	15 clicks
Sport	12 clicks

i Note
Turning clockwise increases damping; turning counterclockwise reduces damping during compression.



11.4 Adjusting the high-speed compression damping of the shock absorber




CAUTION

Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.
– Please follow the description provided.



Note

The effect of the high-speed compression adjustment can be seen in the fast compression of the shock absorber.

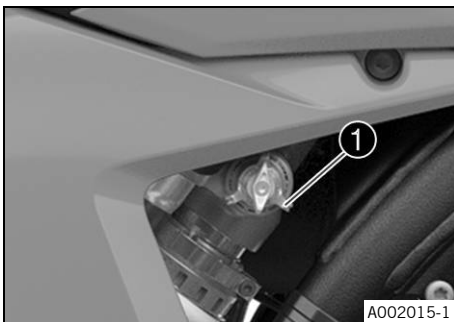

- Turn adjusters ① clockwise all the way to the stop.
- Turn counterclockwise by the number of turns corresponding to the shock absorber type.

Comfort	2.5 turns (900°)
Standard	2 turns (720°)
Sport	1.5 turns (540°)

i Note
Turning clockwise increases damping; turning counterclockwise reduces damping during compression.




11.5 Adjusting the rebound damping of the shock absorber



CAUTION

Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.
– Please follow the description provided.

11 Tuning the chassis

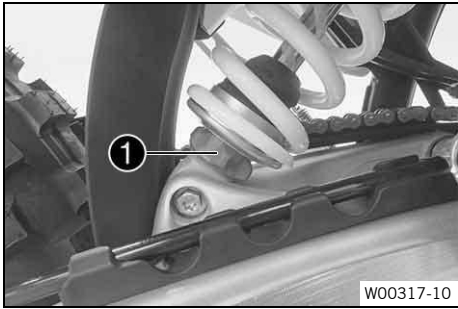

- Turn adjusters ❶ clockwise up to the last perceptible click.
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Comfort	18 clicks
Standard	15 clicks
Sport	12 clicks

i Note
Turning clockwise increases damping; turning anticlockwise reduces damping on rebound.

11.6 Measuring the dimension of the unloaded rear wheel

Preparatory work


- Raise the motorcycle with a lift stand. 📖 (p. 65)

Control process

- Position the sag gage in the rear axle and measure the distance to marking **SAG** on the rear fender.

Sag scale (00029090200)


- Note the value as dimension ❶.

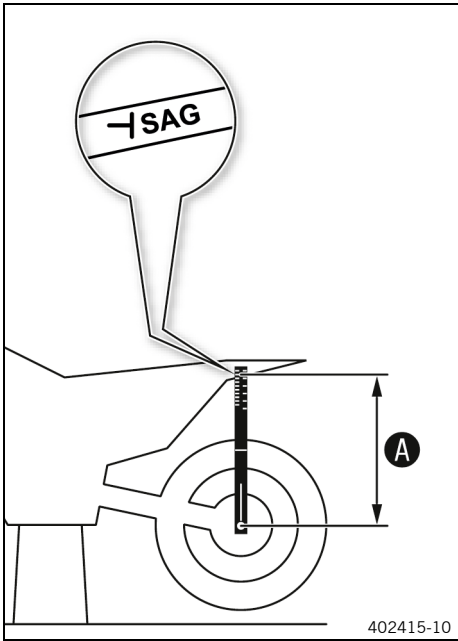

Reworking

- Remove the motorcycle from the lift stand. 📖 (p. 65)

11.7 Checking the static sag of the shock absorber

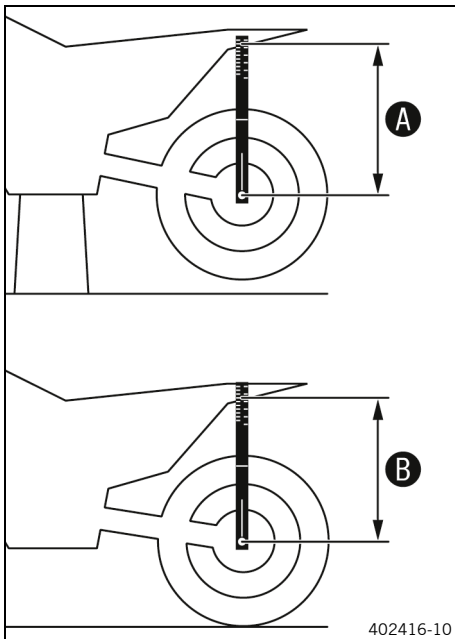

- Measure dimension **A** of rear wheel unloaded. (p. 58)
- Hold the motorcycle upright with aid of an assistant.
- Measure the distance again between the rear axle and marking **SAG** on the rear fender using the sag scale.
- Note the value as dimension **B**.



Note

The static sag is the difference between measurements **A** and **B**.


- Check the static sag.

Static sag	38 mm (1.50 in)
------------	--------------------

- » If the static sag is more or less than the specified value:
 - Adjust the preload for the shock absorber. (p. 60)



11.8 Checking the rider sag of the shock absorber

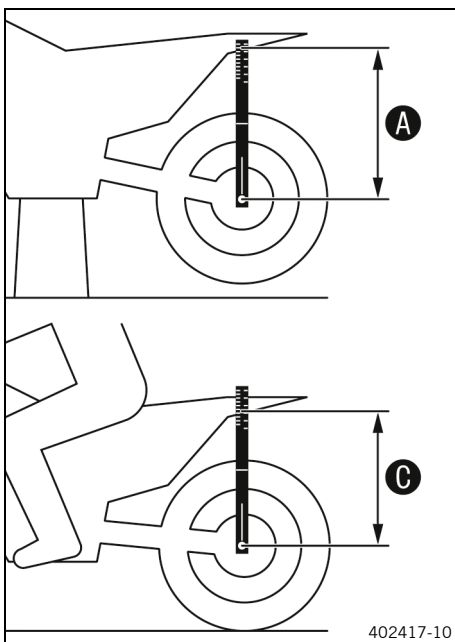

- Measure dimension **A** of rear wheel unloaded. (p. 58)
- With another person holding the motorcycle, sit on the saddle with full protective clothing in a normal sitting position (feet on footrests) and bounce up and down a few times.
 - ✓ The rear wheel suspension levels out.
- With the help of another person, remeasure the distance between the rear axle and marking **SAG** on the rear fender using the sag scale.
- Note the value as dimension **C**.



Note

The rider sag is the difference between measurements **A** and **C**.

- Check the rider sag.

Rider sag	110 mm (4.33 in)
-----------	---------------------

- » If the rider sag differs from the specified measurement:
 - Adjust the rider sag. (p. 61)



11.9 Adjusting the preload for the shock absorber



CAUTION

Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided.



Note

Note the current adjustment before changing the spring preload - e.g. measure the spring length.

- Preparatory work**
- Raise the motorcycle with a lift stand.  (p. 65)
 - Remove the seat.  (p. 78)
 - Remove the frame protector.  (p. 67)
 - Remove the muffler.  (p. 82)
 - Remove the shock absorber.   (p. 75)
 - After removing the shock absorber, clean it thoroughly.

- Adjustment procedure**
- Loosen screw **1**.
 - Turn adjusting ring **2** until the spring is no longer under tension.

Hook wrench (90129051000)



Note

If the spring cannot be fully released, the spring must be removed to accurately measure the spring length.

- Measure the total spring length while the spring is not under tension.
- Tension the spring by turning adjusting ring **2** to the specified degree **A**.

Preload	7 mm (0.28 in)
---------	-------------------




Note

Depending on the static sag and/or the riding sag, it may be necessary to increase or decrease the spring preload.

- Tighten screw **1**.

Screw, shock absorber adjusting ring	
M5	5 Nm (3.7 ft·lb _f)

- Reworking**
- Install the shock absorber.   (p. 76)
 - Install the muffler.  (p. 83)
 - Install the frame protector.  (p. 68)

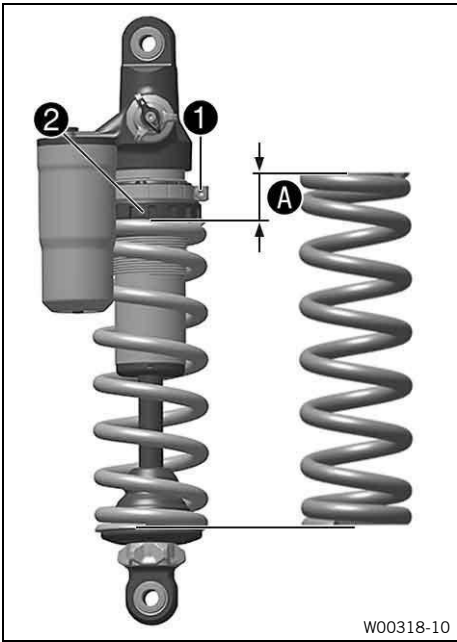

- Mount the seat.  (p. 78)
- Remove the motorcycle from the lift stand.  (p. 65)



11.10 Adjusting the rider sag

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 65)
- Remove the seat.  (p. 78)
- Remove the frame protector.  (p. 67)
- Remove the muffler.  (p. 82)
- Remove the shock absorber.   (p. 75)
- After removing the shock absorber, clean it thoroughly.

Adjustment procedure


- Select and mount a suitable spring.

Weight of rider: 65 kg ... 75 kg (143.3 lb ... 165.3 lb)	69 N/mm (394.0 lb _f /in)
Weight of rider: 75 kg ... 85 kg (165.3 lb ... 187.4 lb)	72 N/mm (411.1 lb _f /in)
Weight of rider: 85 kg ... 95 kg (187.4 lb ... 209.4 lb)	75 N/mm (428.3 lb _f /in)



Note

The spring rate is shown on the outside of the spring.
Smaller weight differences can be compensated by changing the spring preload.

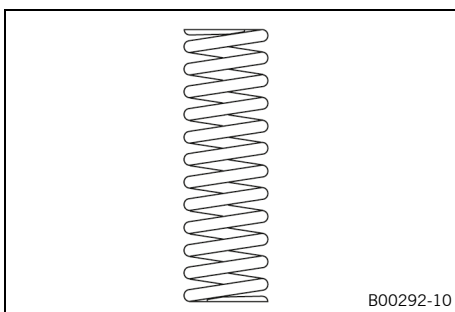


Reworking

- Install the shock absorber.   (p. 76)
- Install the muffler.  (p. 83)
- Install the frame protector.  (p. 68)
- Mount the seat.  (p. 78)
- Remove the motorcycle from the lift stand.  (p. 65)
- Check the static sag of the shock absorber.  (p. 59)
- Check the rider sag of the shock absorber.  (p. 59)
- Adjust the rebound damping of the shock absorber.  (p. 57)



11.11 Checking the basic setting of the fork


Note
For various reasons, no exact rider sag can be determined for the fork.

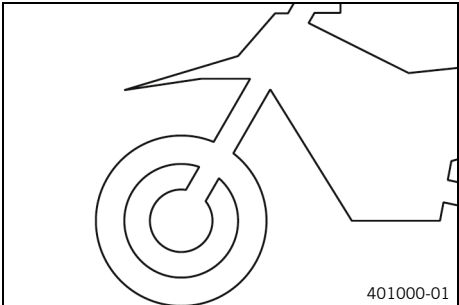

- As with the shock absorber, smaller differences in the rider's weight can be compensated by the spring preload.
- However, if the fork frequently bottoms out (hard end stop on compression), harder springs must be fitted to avoid damage to the fork and frame.
- If the fork feels unusually hard after extended periods of operation, the fork legs need to be bled.

11.12 Adjusting the compression damping of the fork

Note
The hydraulic compression damping determines the fork suspension behavior.

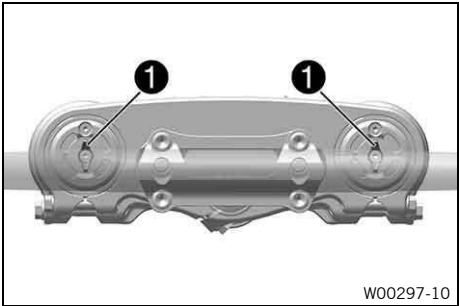

- Turn white adjuster 1 clockwise as far as it will go.

Note
Adjusters 1 COMP are located at the top end of the fork legs.


- Turn clockwise by the number of clicks corresponding to the fork type.

Compression damping	
Comfort	17 clicks
Standard	15 clicks
Sport	7 clicks

Note
Turning clockwise increases damping; turning counter-clockwise reduces damping during compression.

11.13 Adjusting the rebound damping of the fork

Note
The hydraulic rebound damping determines the fork suspension behavior.

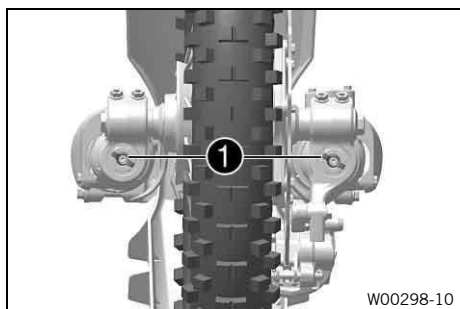

- Turn red adjuster **1** clockwise as far as it will go.



Note

Adjusters **1** **REB** are located at the bottom end of the fork legs.

- Turn clockwise by the number of clicks corresponding to the fork type.

Rebound damping	
Comfort	19 clicks
Standard	17 clicks
Sport	9 clicks




Note

Turning clockwise increases damping; turning anticlockwise reduces damping on rebound.



11.14 Handlebar position

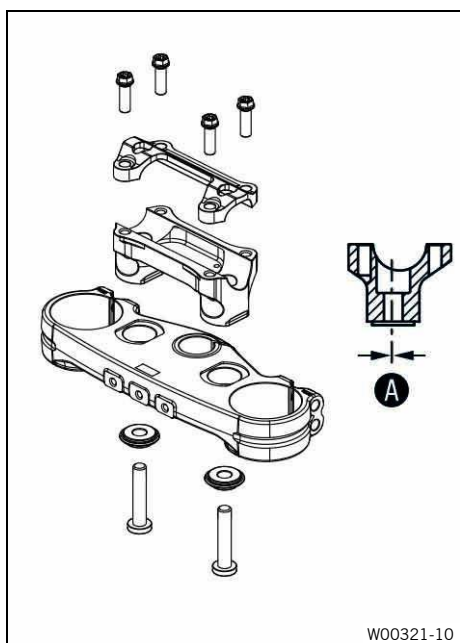

The holes on the handlebar support are placed at a distance of **A** from the center.

Hole distance A	3.5 mm (0.138 in)
------------------------	----------------------

The handlebar support can be mounted in two different positions.

11.15 Adjusting the handlebar position




WARNING

Danger of accidents A repaired handlebar poses a safety risk.

If the handlebar is bent or straightened, the material becomes fatigued. The handlebar may break as a result.

- Change the handlebar if the handlebar is damaged or bent.

11 Tuning the chassis

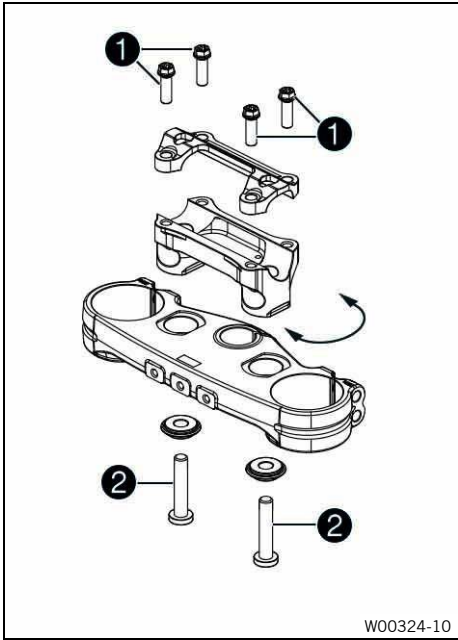

- Remove ❶ screws.

Protect the components against damage by covering them.

- Take off the handlebar clamp.
- Remove the handlebar and lay it to one side.

Do not kink the cables or lines.

- Remove ❷ screws.
- Take off the handlebar support.
- Place the handlebar mount in the required position.

Position the handlebar support so that it is even.

- Mount and tighten screws ❷.

Screw, handlebar mount	
M10	40 Nm (29.5 ft·lb _f) Loctite® 243

- Position the handlebar.


Make sure the cables and wiring are positioned correctly.

- Position the handlebar clamp.
- Mount screws ❶ and tighten evenly.

Handlebar clamp screw	
M8	20 Nm (14.8 ft·lb _f)

Make sure the installed gap widths are even.

12.1 Raising the motorcycle with a lift stand

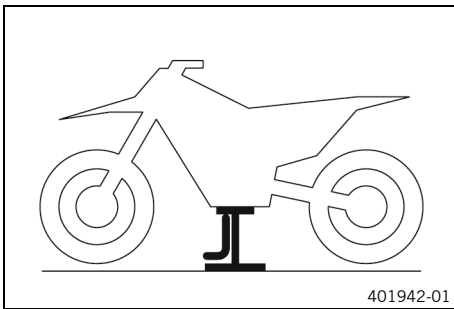

NOTE

Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over. The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

- Raise the motorcycle at the frame underneath the engine.

Lift stand (78129955100)

- ✓ Neither wheel is in contact with the ground.
- Secure the motorcycle against falling over.



12.2 Removing the motorcycle from the lift stand




NOTE

Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

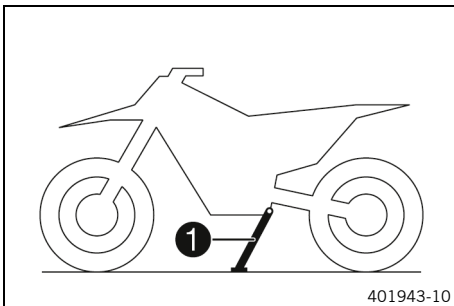

- Remove the motorcycle from the lift stand.
- Remove the lift stand.
- To park the motorcycle, press side stand ① to the ground with your foot and lean the motorcycle on it.



Note


When you are riding, the side stand must be folded up and secured with the rubber band.



12.3 Bleeding the fork legs

Preparatory work

- Raise the motorcycle with a lift stand. (p. 65)

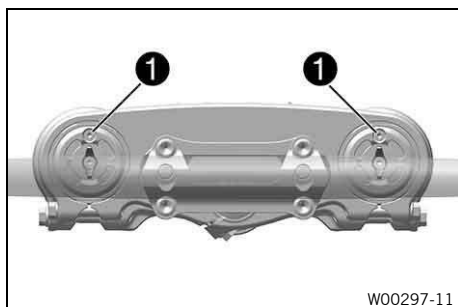

Operating procedure

- Loosen bleeder screw ①.
- ✓ Any excess pressure escapes from the inner fork.
- Tighten the bleeder screw.

Reworking

- Remove the motorcycle from the lift stand. 📖 (p. 65)

12.4 Cleaning the dust boots of the fork legs

Preparatory work

- Raise the motorcycle with a lift stand. 📖 (p. 65)
- Remove the fork protector. 📖 (p. 67)



Cleaning process

- Push dust boot ① downward on both fork legs.

i Note

The dust boots should remove dust and coarse dirt particles from the inner fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.

- Clean and oil the dust boots and the inner fork tube of both fork legs.


Universal oil spray 📖 (p. 169)

- Press the dust boots back into their installation position.
- Remove excess oil.

Reworking

- Install the fork protector. 📖 (p. 67)
- Remove the motorcycle from the lift stand. 📖 (p. 65)


12.5 Removing the fork protector

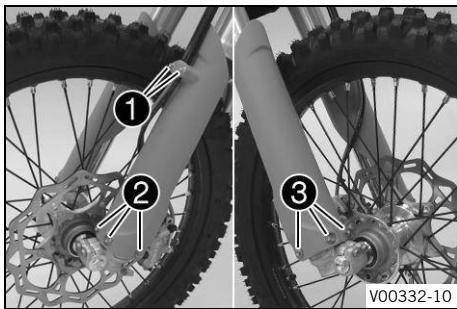

- Remove screw ① and take off the clamp.
- Remove screws ② on the left fork leg and take off the left fork protector.
- Remove screws ③ on the right fork leg and take off the right fork protector.



12.6 Installing the fork protector

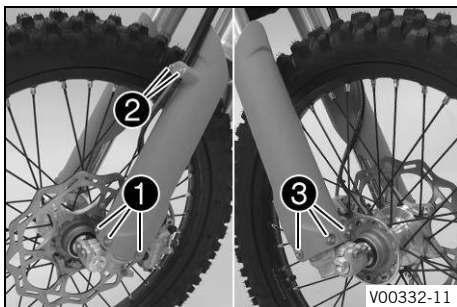

- Position the fork protector on the left fork leg. Mount and tighten screws ①.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)

- Position the brake line, the wiring harness, and the clamp. Mount and tighten screws ②.


Remaining screws on chassis	
EJOT PT® – K60×25 – Z	2 Nm (1.5 ft·lb _f)

- Position the fork protector on the right fork leg. Mount and tighten screws ③.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)




12.7 Removing the frame protector

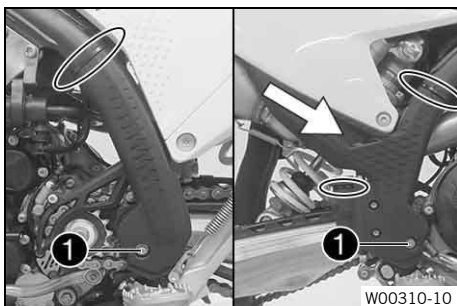

- Remove the cable ties.
- Remove screws ① and bushings.
- Take off the left frame protector.
- Push the right frame protector to the front and take off at the bottom.



12.8 Installing the frame protector

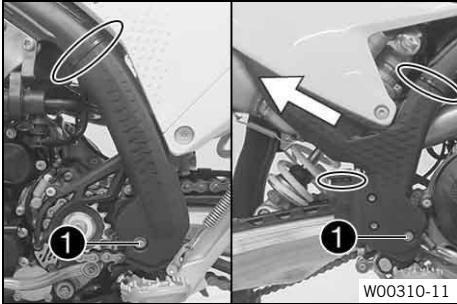

- Position the left frame protector.
- Insert the right frame protector from below and push it to the rear.
- Mount screw ❶ and bushing and tighten.

Screw, frame protector	
M5	3 Nm (2.2 ft·lb _r)

- Secure the frame protector with cable ties.

Turn the head of the cable tie so far back that it does not touch any other components.


12.9 Removing the fork legs

Preparatory work


- Raise the motorcycle with a lift stand. (p. 65)
- Remove the front wheel. (p. 110)

Removal process


- Remove screw ❶ and take off the clamp.
- Remove the cable ties.
- Remove screws ❷ and take off the brake caliper.
- Allow the brake caliper and the brake line to hang loosely to the side.

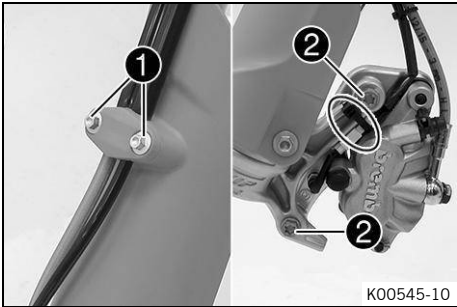

- Loosen screws ❸.
- Remove the left fork leg.
- Loosen screws ❹.
- Remove the right fork leg.

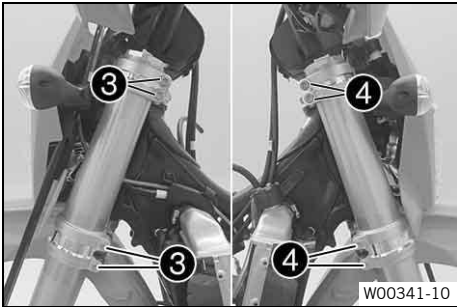

12.10 Installing the fork legs

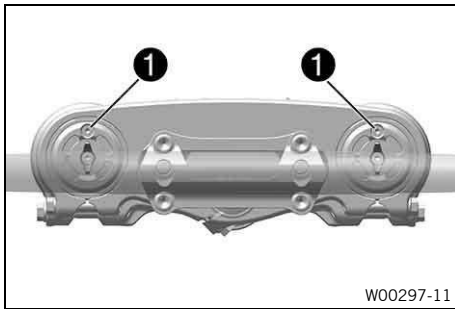


Installation procedure

- Position the fork legs.
- ✓ Bleeder screws **1** are positioned toward the front.



Note

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp. The pressure and rebound damping is located in the left and right fork leg.

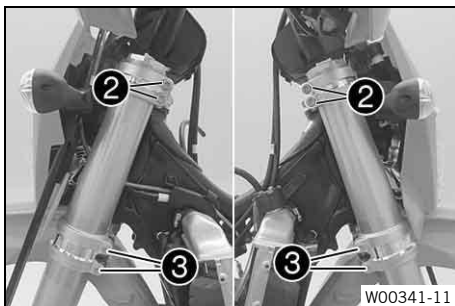


- Tighten screws **2**.

Screw, top triple clamp	
M8	20 Nm (14.8 ft·lb _f)

- Tighten screws **3**.

Screw, bottom triple clamp	
M8	15 Nm (11.1 ft·lb _f)

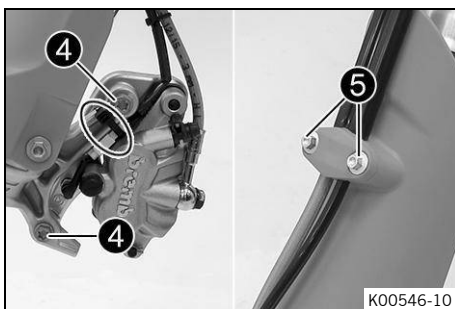

- Position the brake caliper, and mount and tighten screws **4**.

Screw, front brake caliper	
M8	25 Nm (18.4 ft·lb _f) Loctite® 243

- Mount cable ties.
- Position the brake line, the wiring harness, and the clamp. Mount and tighten screws **5**.

Remaining screws on chassis	
EJOT PT® – K60×25 – Z	2 Nm (1.5 ft·lb _f)

Reworking

- Install the front wheel. (p. 111)

12.11 Removing the lower triple clamp

Preparatory work

- Raise the motorcycle with a lift stand. (p. 65)
- Remove the front wheel. (p. 110)
- Remove the fork legs. (p. 68)
- Remove the headlight mask with the headlight. (p. 122)
- Remove the front top fender. (p. 74)
- Remove the seat. (p. 78)

12 Service work on the chassis


- Remove the fuel tank. 🛠️ 📖 (p. 85)
- Remove the handlebar pad.

Removal process

- Loosen screw ❶.
- Remove screw ❷.
- Take off the upper triple clamp with the handlebar and hang them to the side.

Protect the components against damage by covering them.

Do not kink the cables or lines.

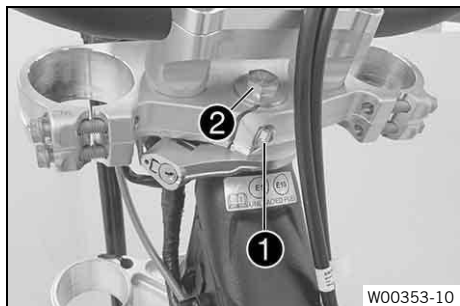

- Remove protective ring ❸.
- Take off the lower triple clamp with the steering stem.
- Remove the upper steering head bearing.


12.12 Installing the lower triple clamp 🛠️


Installation procedure

- Clean the bearing and sealing elements, check for damage, and grease.


High viscosity grease 📖 (p. 170)

- Insert the lower triple clamp with the steering stem. Mount the upper steering head bearing.
- Push on protective ring ❶.

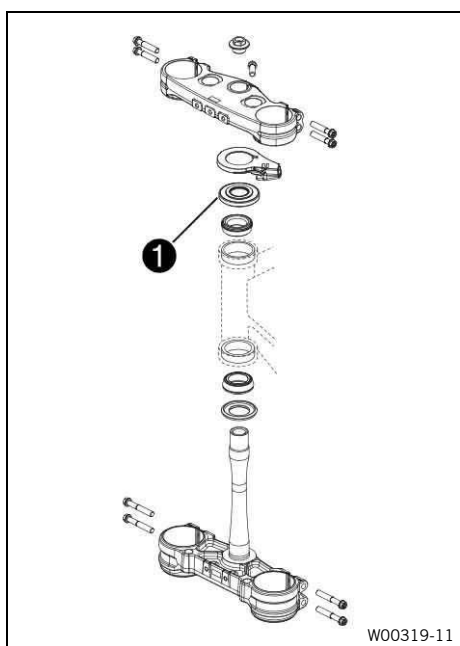

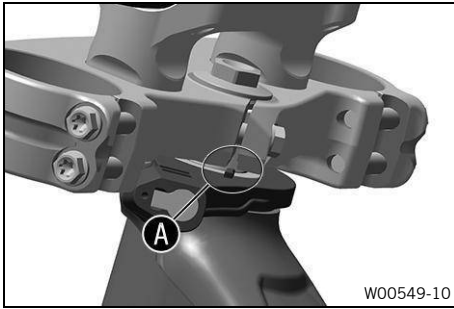


- Make sure the steering lock in area **A** is positioned correctly.
- ✓ The catch on the steering lock engages in the notch on the triple clamp.

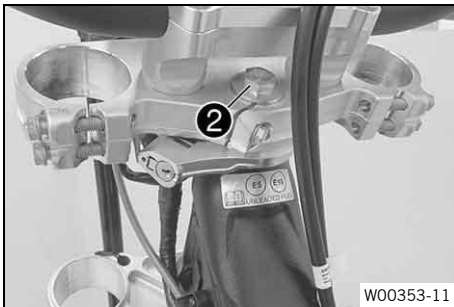


- Position the upper triple clamp and handlebar.
- Mount screw **2**, but do not tighten yet.

Screw, top steering head	
M20×1.5	12 Nm (8.9 ft·lb _f)

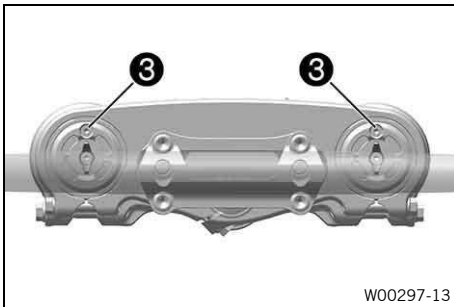


- Position the fork legs.
- ✓ Bleeder screws **3** are positioned toward the front.

i Note
Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp. The pressure and rebound damping is located in the left and right fork leg.

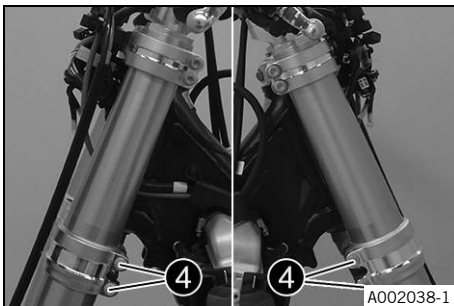

- Tighten screws **4**.

Screw, bottom triple clamp	
M8	15 Nm (11.1 ft·lb _f)

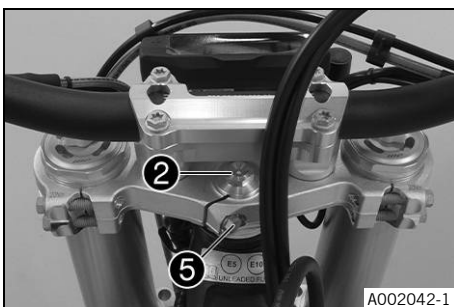


- Tighten screw **2**.

Screw, top steering head	
M20×1.5	12 Nm (8.9 ft·lb _f)


- Tighten screw **5**.

Screw, upper steering stem	
M8	20 Nm (14.8 ft·lb _f) Loctite® 243

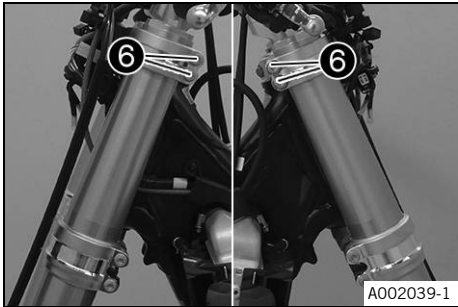

- Tighten screws 6.

Screw, top triple clamp	
M8	20 Nm (14.8 ft·lb _f)

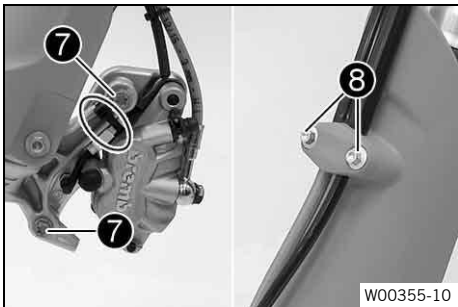

- Position the brake caliper, and mount and tighten screws 7.

Screw, front brake caliper	
M8	25 Nm (18.4 ft·lb _f) Loctite® 243

- Mount cable ties.
- Position the brake line, the wiring harness, and the clamp. Mount and tighten screws 8.

Remaining screws on chassis	
EJOT PT® – K60×25 – Z	2 Nm (1.5 ft·lb _f)

Reworking

- Mount the handlebar pad.
- Install the front top fender. 📖 (p. 75)
- Install the front wheel. 🛠️ 📖 (p. 111)
- Install the headlight mask with the headlight. 📖 (p. 122)
- Check the wiring harness, cables, and brake and clutch lines for freedom of movement and correct routing.
- Check the steering head bearing play. 📖 (p. 72)
- Remove the motorcycle from the lift stand. 📖 (p. 65)
- Check the headlight setting. 📖 (p. 123)
- Install the fuel tank. 🛠️ 📖 (p. 87)
- Mount the seat. 📖 (p. 78)

12.13 Checking the steering head bearing play



WARNING
Danger of accidents Incorrect steering head bearing play can impair the handling characteristic and damage components.
- Correct incorrect steering head bearing play immediately.



Note
If the vehicle is operated for a lengthy period with play in the steering head bearing, the bearings and the bearing seats in the frame can become damaged.

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 65)

Control process

- Move the handlebar to the straight-ahead position. Move the fork legs to and fro in the direction of travel.

Play should not be detectable on the steering head bearing.

» If there is detectable play:

- Adjust the steering head bearing play.   (p. 73)

- Move the handlebar back and forth over the entire steering range.

It must be possible to move the handlebar easily over the entire steering range. There should be no detectable detent positions.

» If detent positions are detected:

- Adjust the steering head bearing play.   (p. 73)
- Check the steering head bearing and replace if necessary.

Reworking

- Remove the motorcycle from the lift stand.  (p. 65)



12.14 Adjusting the steering head bearing play

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 65)

Adjustment procedure

- Loosen screws **1** and **2**.
- Loosen and retighten screw **3**.

Screw, top steering head

M20×1.5	12 Nm (8.9 ft·lb _r)
---------	------------------------------------

- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
- Tighten screws **1**.



Screw, top triple clamp

M8	20 Nm (14.8 ft·lb _r)
----	-------------------------------------

- Remove screw **2**.
- Mount and tighten screw **2**.

Screw, upper steering stem


M8	20 Nm (14.8 ft·lb _r) Loctite® 243
----	--

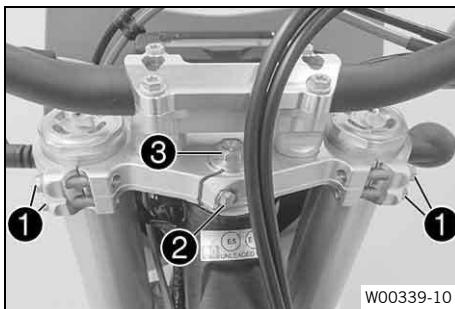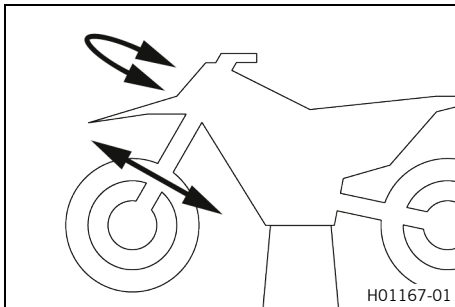

Reworking

- Check the steering head bearing play. 📖 (p. 72)
- Remove the motorcycle from the lift stand. 📖 (p. 65)

12.15 Lubricating the steering head bearing 🛠️

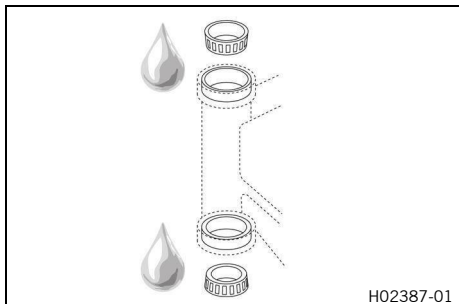

- Remove the lower triple clamp. 🛠️ 📖 (p. 69)
- Install the lower triple clamp. 🛠️ 📖 (p. 70)

i Note

The steering head bearing is cleaned and lubricated in the course of removal and installation of the lower triple clamp.



12.16 Removing the front top fender

Preparatory work

- Remove the headlight mask with the headlight. 📖 (p. 122)

Removal process

- Remove ❶ screws.

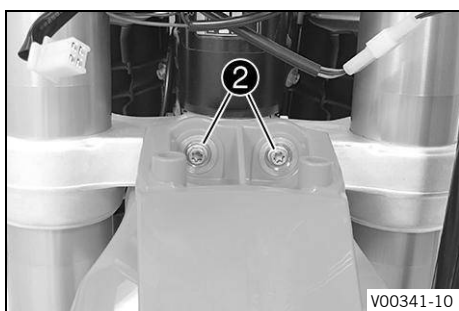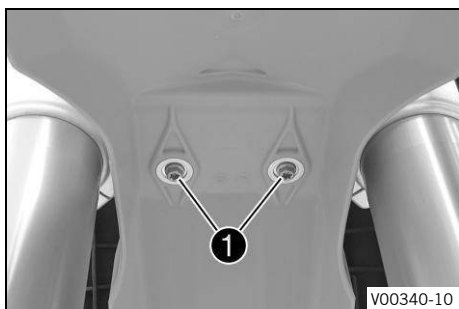


- Remove screws ❷ and take off the fender at the front.

12.17 Installing the front top fender


Installation procedure

- Position the front fender, install screws **1** and tighten.

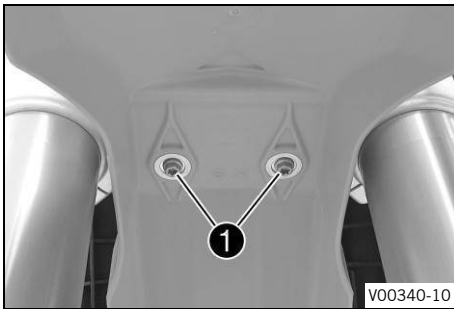

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)

- Mount and tighten screws **2**.

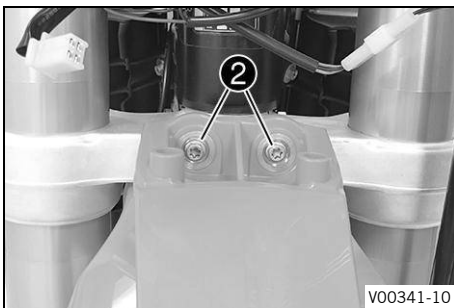

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)

Reworking

- Install the headlight mask with the headlight. (p. 122)
- Check the headlight setting. (p. 123)




12.18 Removing the shock absorber

Preparatory work


- Raise the motorcycle with a lift stand. (p. 65)
- Remove the seat. (p. 78)
- Remove the frame protector. (p. 67)
- Remove the muffler. (p. 82)

Removal process

- Remove screws **1**. Disconnect the plug-in connectors for the tail light and turn signals.
- Remove screws **2** and screws **3**.
- Take off the license plate holder with tail light toward the rear.

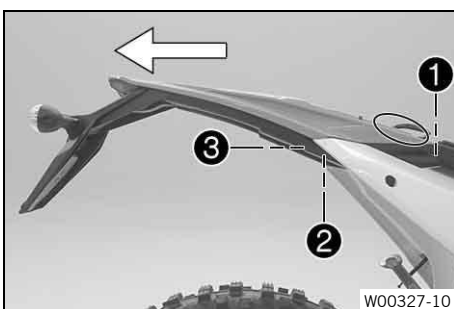

12 Service work on the chassis

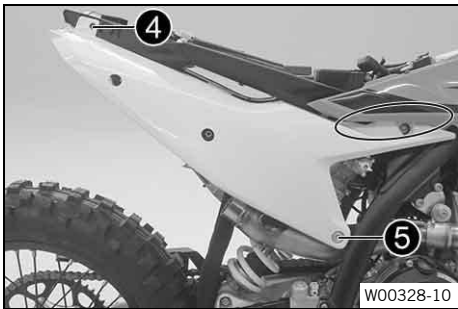

- Remove screw 4.
- Remove screw 5.
- Carefully take off the right side cover to the side.




Note

The right side cover also engages behind the spoiler.




- Carefully remove retaining spring 6.
- Remove rear half of manifold 7 to the rear.

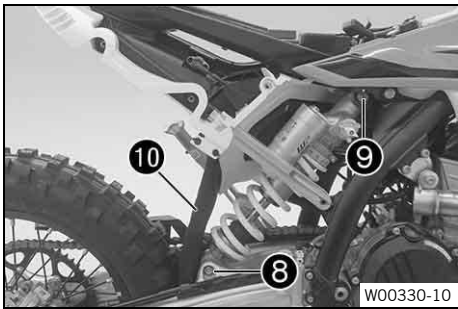

- Remove screw 8 and lower the rear wheel with the link fork as far as possible without blocking the rear wheel. Secure the rear wheel in this position.
- Remove screw 9, push splash protector 10 to the side, and remove the shock absorber.

12.19 Installing the shock absorber

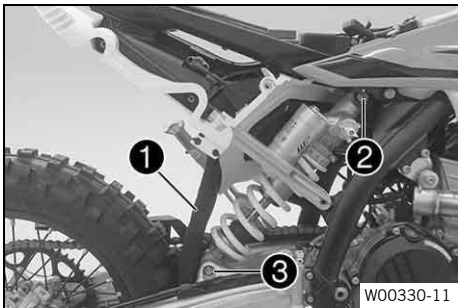

Installation procedure

- Push splash protector 1 to the side and position the shock absorber. Mount and tighten screw 2.

Top shock absorber screw	
M12	80 Nm (59.0 ft·lb _r) Loctite® 2701

- Mount and tighten screw 3.

Bottom shock absorber screw	
M12	80 Nm (59.0 ft·lb _r) Loctite® 2701



Note

The heim joint for the shock absorber on the link fork is Teflon coated. It must not be lubricated with grease, nor with any other lubricants. Lubricants dissolve the Teflon coating, thereby drastically reducing the service life.



- Slip in rear half of manifold **4** from behind and position it.
- Attach retaining springs **5**.



- Position the right side fairing on the tail section.
- Position the right side fairing correctly behind the spoiler.

Ensure that it is correctly seated on the tail section.


- Mount and tighten screw **6**.

Tighten screw hand-tight.

- Mount and tighten screw **7**.

Screw, subframe, bottom

M8	30 Nm (22.1 ft·lb _f) Loctite® 2701
----	---

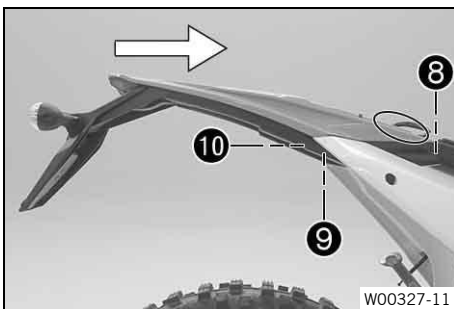

- Slide the license plate holder with tail light carefully onto the tail section.
- Pay attention to cable routing.
- Mount and tighten screws **8**.

Remaining screws on chassis

M6	10 Nm (7.4 ft·lb _f)
----	------------------------------------

- Plug in the connectors for the tail light and turn signals and order them properly.
- Mount and tighten screws **9**.

Remaining screws on chassis

M6	10 Nm (7.4 ft·lb _f)
----	------------------------------------

- Mount and tighten screws **10**.


Remaining screws on chassis

EJOT PT® – K60×25 – Z	2 Nm (1.5 ft·lb _f)
------------------------------	-----------------------------------


Reworking

- Install the muffler. 📖 (p. 83)
- Install the frame protector. 📖 (p. 68)
- Mount the seat. 📖 (p. 78)
- Remove the motorcycle from the lift stand. 📖 (p. 65)

12.20 Removing the seat

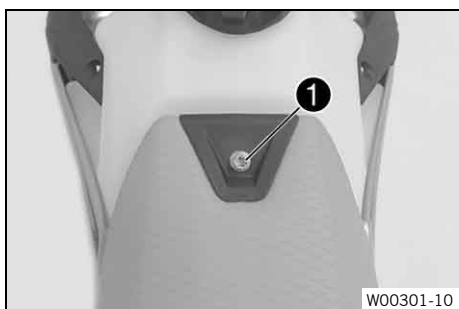


- Remove screw ①.

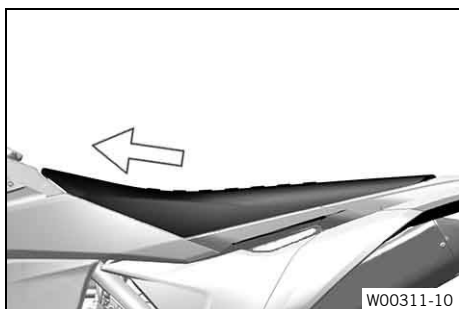


- Raise seat, pull it toward the fuel tank and take it off.

12.21 Mounting the seat

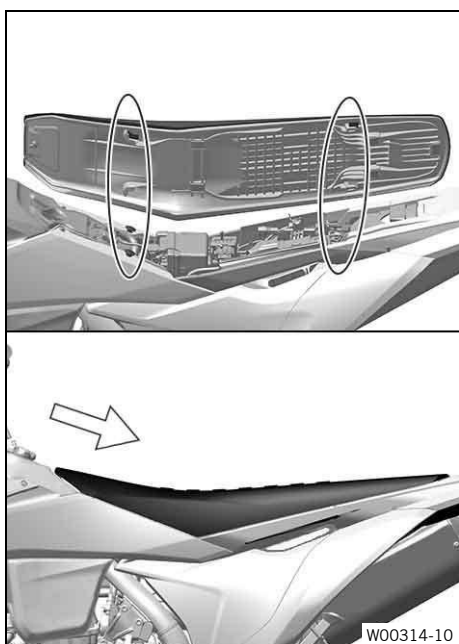

- Mount the front of the seat on the collar bushings of the fuel tank, lower the seat at the rear, and push the seat to the rear.
 - ✓ The holding lugs engage in the recesses at the back.
- Make sure the seat is latched in place correctly.

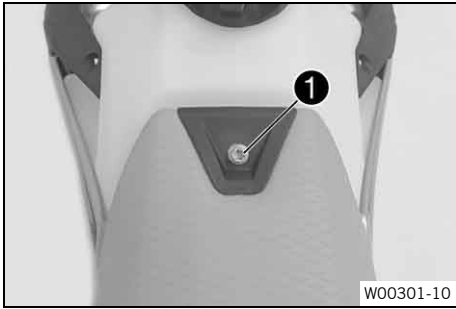


- Mount and tighten screw ❶.


Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _r)

12.22 Removing air filter box cover

Condition: Air filter box cover secured

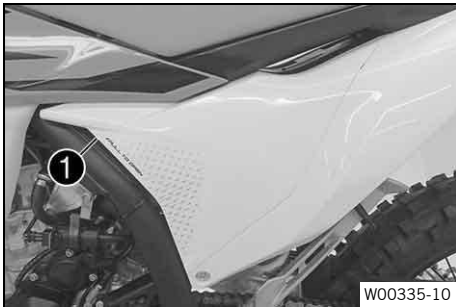


- Remove screw ❶.

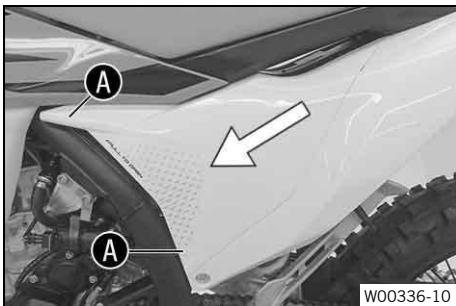

- Pull off the air filter box cover in area A, push it forwards to the side and remove it.

Condition: Air filter box cover not secured

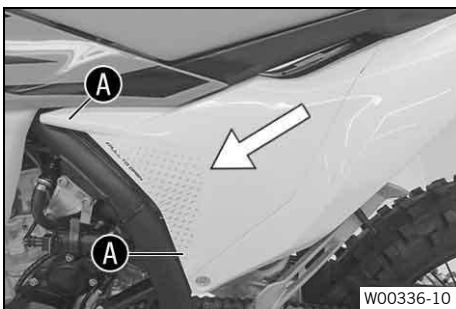


- Pull off the air filter box cover in area A, push it forwards to the side and remove it.

12.23 Installing air filter box cover


Condition: Air filter box cover secured

- Attach air filter box cover in area **A** and engage it in area **B**.

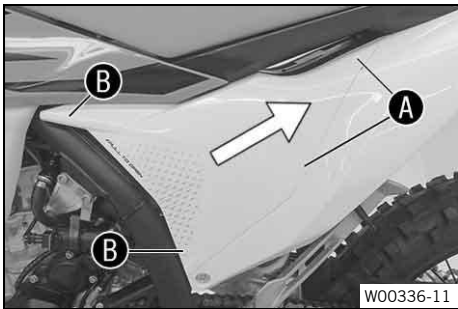


- Mount and tighten screw **1**.

Screw, air filter box cover	
EJOT PT® – MK60×20 – Z	3 Nm (2.2 ft·lb _f)

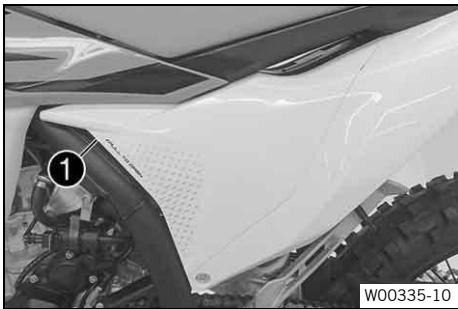

Condition: Air filter box cover not secured

- Attach air filter box cover in area **A** and engage it in area **B**.

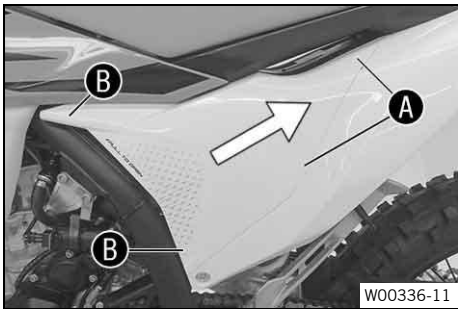

12.24 Removing the air filter



NOTE
Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



NOTE
Engine failure Unfiltered intake air has a negative effect on the service life of the engine. Dust and dirt can enter the engine if there is no air filter or if the air filter is mounted incorrectly.


- Only operate the vehicle if an air filter is correctly fitted.

Preparatory work

- Remove air filter box cover.  (p. 79)

Removal process

- Detach tab ①.
- Remove air filter with air filter support.
- Remove the air filter with the air filter support.


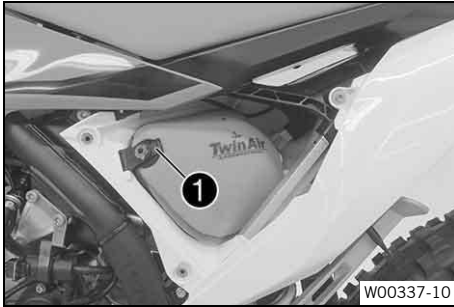


12.25 Installing the air filter

Installation procedure

- Mount the clean air filter on the air filter support.
- Grease the air filter in area A.

Long-life grease (p. 169)

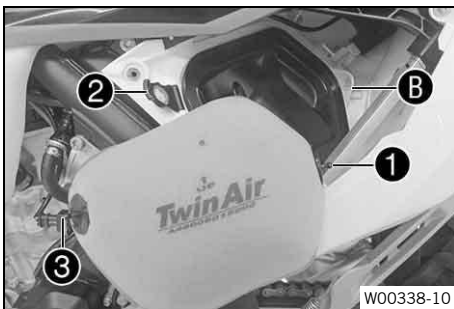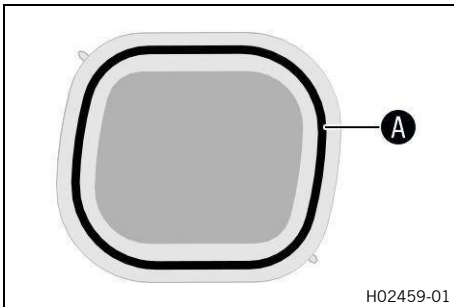

- Insert air filter and position retaining pin ① in bushing B.
 - ✓ The air filter is correctly positioned.
- Secure the bottom retaining pin ③ with holding tab ②.



Note

If the air filter is not mounted correctly, dust and dirt may enter the engine and result in damage.

Reworking

- Install the air filter box cover. (p. 80)

12.26 Cleaning the air filter and air filter box



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

Preparatory work

- Remove air filter box cover. (p. 79)
- Remove the air filter. (p. 80)



Cleaning process

- Wash the air filter thoroughly in special cleaning liquid and allow it to dry properly.

Do not clean the air filter with fuel or petroleum as these substances will damage the foam rubber.
Only press the air filter to dry it, do not wring it out.

Air filter cleaning agent  (p. 172)
--

- Oil the dry air filter with a high-grade air filter oil.

Oil for foam air filter  (p. 170)
--

- Clean the air filter box.
- Check intake flange for damage and looseness.

Reworking

- Install the air filter.   (p. 81)
- Install the air filter box cover.  (p. 80)

12.27 Preparing the air filter box cover for securing


Preparatory work

- Remove air filter box cover.  (p. 79)

Installation procedure

- Drill a hole at marking **A**.

Diameter	6 mm (0.24 in)
----------	-------------------

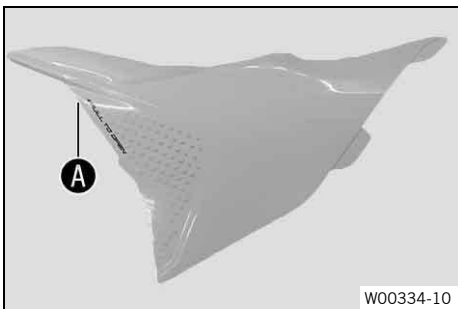

Reworking

- Install the air filter box cover.  (p. 80)


12.28 Removing the muffler



WARNING

Danger of burns The exhaust system gets hot when the vehicle is driven.


- Allow the exhaust system to cool down before performing any work on the vehicle.

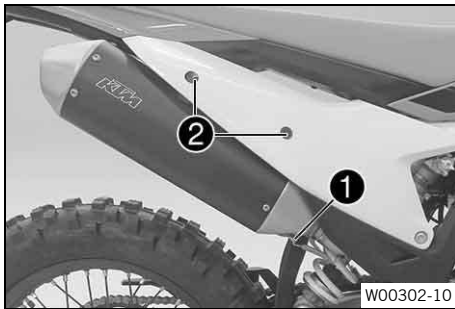


- Detach spring ❶.
- | |
|-----------------------------|
| Spring hook (50305017000C1) |
|-----------------------------|
- Remove screws ❷ and take off the main silencer with the catalytic converter.



12.29 Installing muffler

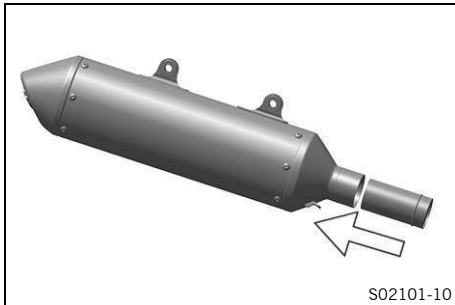

- Position the catalytic converter in the main silencer.

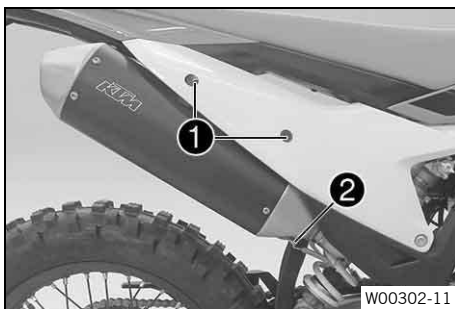

- Position the main silencer. Mount and tighten screws ❶ but do not tighten yet.
 - Attach spring ❷.
- | |
|-----------------------------|
| Spring hook (50305017000C1) |
|-----------------------------|
- Tighten screws ❶.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)



12.30 clean spark arrestor



WARNING

Danger of burns The exhaust system gets hot when the vehicle is driven.

- Allow the exhaust system to cool down before performing any work on the vehicle.




Note

Soot particles accumulate on the screen of the spark arrestor over time. This changes the performance characteristics.

Preparatory work

- Remove the muffler. 📖 (p. 82)

Cleaning process

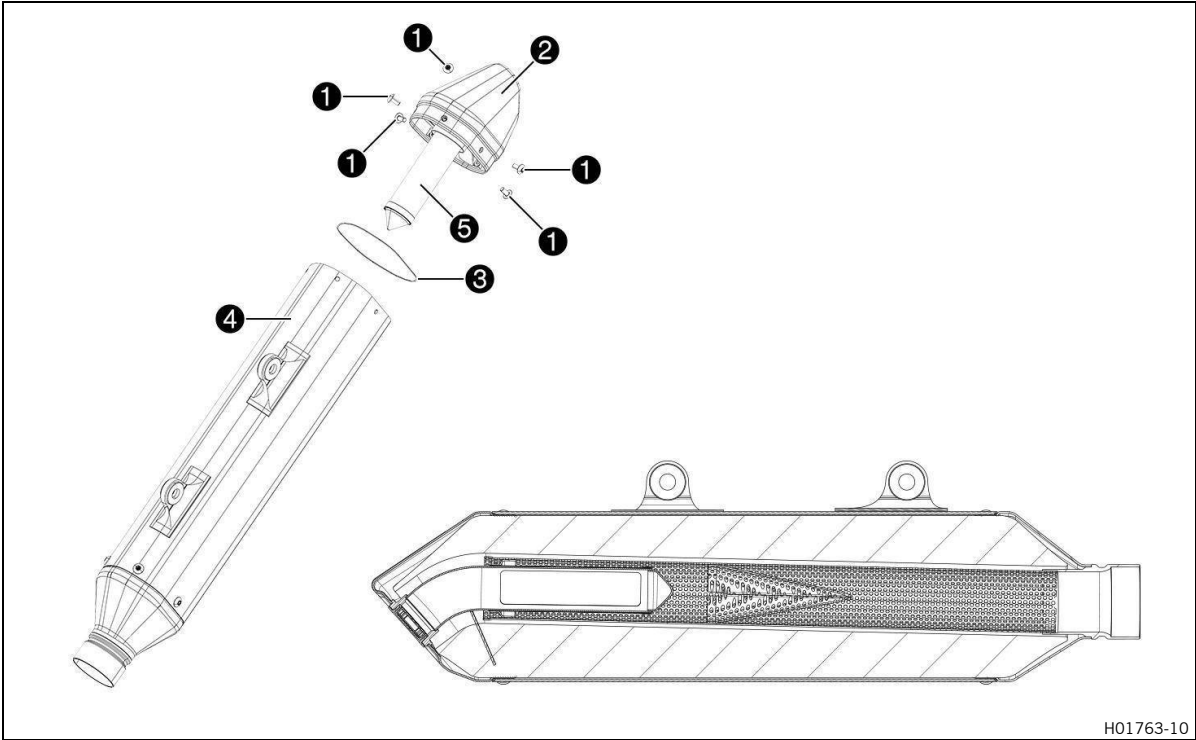

- Remove screws ① and take off silencer cap ② with O-ring ③.
- Do not remove the glass fiber filling.

CAUTION

Health hazard Soot particles irritate the eyes and mucuous membranes.

- Wear suitable breathing and eye protection when cleaning the main silencer and carbon screen.

- Clean main silencer sleeve ④ and screen ⑤ of the spark arrestor with compressed air.
- Mount new O-ring ③ on silencer cap ②.
- Position silencer cap ②. Mount and tighten screws ①.

Screws on muffler	
M5	7 Nm (5.2 ft·lb _f)

Reworking

- Install the muffler. (p. 83)

12.31 Changing the damping material on the main silencer



WARNING

- Danger of burns** The exhaust system gets hot when the vehicle is driven.
- Allow the exhaust system to cool down before performing any work on the vehicle.



Note


Over time, the fibers of the rock wool dissipate and the main silencer “burns out”. Not only does this make the noise level higher, but the performance characteristics also change.

Preparatory work

- Remove the muffler. (p. 82)

Replacement process

- Remove screws ①.
- Take off silencer cap ② with O-ring ③.
- Remove old damping material.
- Clean the parts that need to be reinstalled and check for damage.
- Mount new damping material ④ in the silencer.
- Mount the O-ring on the silencer cap.
- Position the silencer cap.
- Mount and tighten all of the screws.

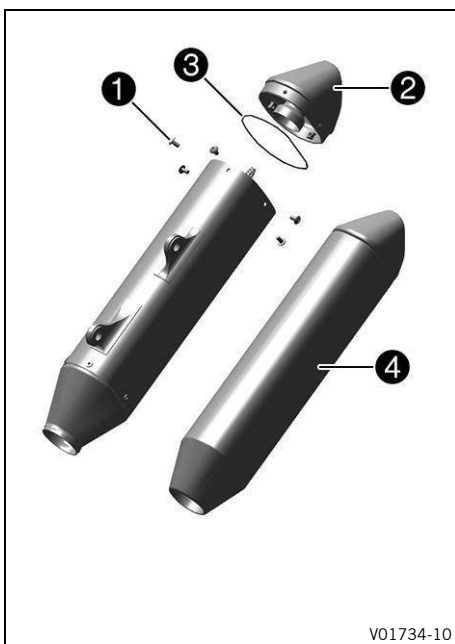

Screws on muffler

M5	7 Nm (5.2 ft·lb _r)
----	-----------------------------------

Reworking

- Install the muffler. (p. 83)



12.32 Removing the fuel tank



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



WARNING

Danger of poisoning Fuel is harmful to health.



- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.

Preparatory work

- Remove the seat. (p. 78)

Removal process

- Remove the cable tie of protection cap ❶.
- Remove the protection cap of the fuel line.

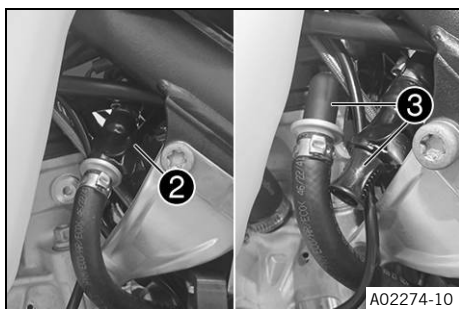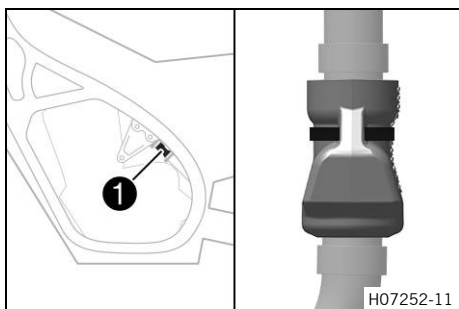

- Clean quick-lock coupling ❷ thoroughly with compressed air.

Dirt must not enter into the fuel line. Dirt in the fuel line clogs the injector!

- Disconnect the quick-lock coupling.




Note


Remaining fuel may flow out of the fuel line.

- Mount wash cap set ❸.


Wash cap set (81212016100)

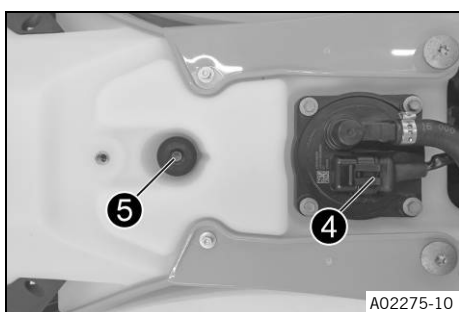

- Unplug socket connector ❹ of the fuel pump.
- Remove screw ❺ with the rubber bushing.
- Remove the hose from the fuel tank breather.

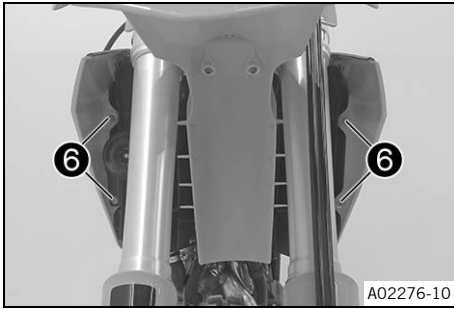

- Remove screws ⑥.
- Hang the horn and horn bracket to one side.

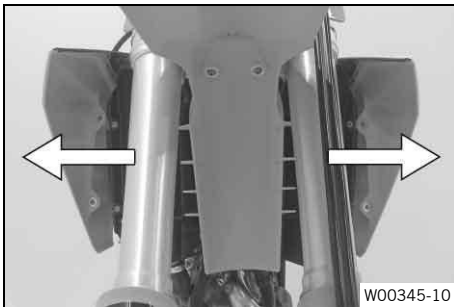

- Pull both spoilers laterally off the radiator and lift off the fuel tank.

12.33 Installing the fuel tank



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



WARNING


Danger of poisoning Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.

Installation procedure


- Check the throttle cable routing. (p. 94)

12 Service work on the chassis

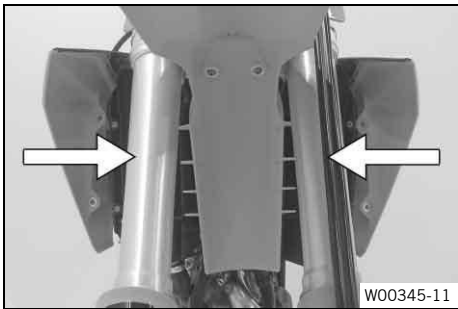

- Position the fuel tank and fit the two spoilers to the sides in front of the radiator bracket.


Make sure that no wires or cables are trapped or damaged.

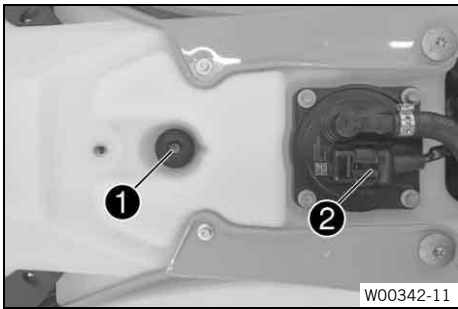

- Attach the fuel tank breather hose.
- Mount and tighten screw 1 with the rubber bushing.


Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)

- Plug in fuel pump socket connector 2.

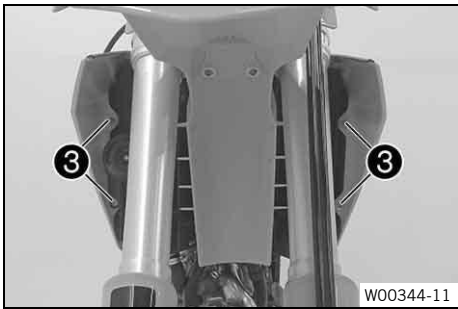

- Position the horn with the horn bracket.
- Mount and tighten screws 3.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)

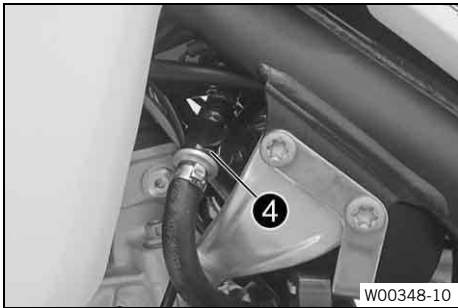

- Remove the wash cap set.
- Clean the quick release coupling thoroughly with compressed air.


Dirt must not enter into the fuel line. Dirt in the fuel line clogs the injector!

- Spray silicone spray onto a lint-free cleaning cloth and lightly lubricate the O-ring of the quick-lock coupling.

Silicone spray (p. 170)

- Join quick release coupling 4.

Route the wire and fuel line at a safe distance from the exhaust system.

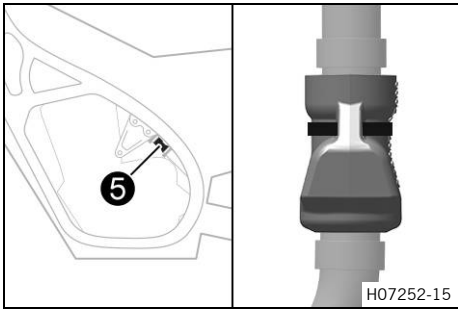


- Mount the protection cap of the fuel line.
- Mount the cable tie of protection cap 5.

Reworking

- Mount the seat.  (p. 78)



12.34 Checking the chain for dirt

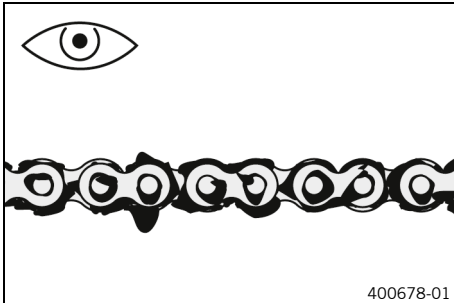

- Check the chain for coarse dirt accumulation.
 - » If the chain is very dirty:
 - Clean the chain.  (p. 89)



12.35 Cleaning the chain



WARNING

Danger of accidents Lubricants on the tires reduces the road grip.

- Remove lubricants from the tires using a suitable cleaning agent.



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Note

The service life of the chain depends largely on its maintenance.

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 65)


Cleaning process

- Rinse off the loose dirt with a gentle jet of water.
- Remove old grease residues with a chain cleaner.

Chain cleaner  (p. 172)

- After drying, apply chain spray.

Off-road chain spray  (p. 169)

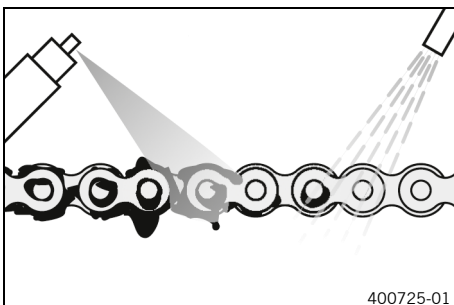

Reworking

- Remove the motorcycle from the lift stand.  (p. 65)

12.36 Checking the chain tension



WARNING

Danger of accidents Incorrect chain tension can damage components and result in an accident.

If the chain tension is too high, the chain, front sprocket, rear sprocket, transmission, and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the front sprocket or the rear sprocket. This can damage the rear wheel or the engine.


- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 65)

Control process

- Pull the chain at the end of the chain slider upward to measure chain tension **A**.

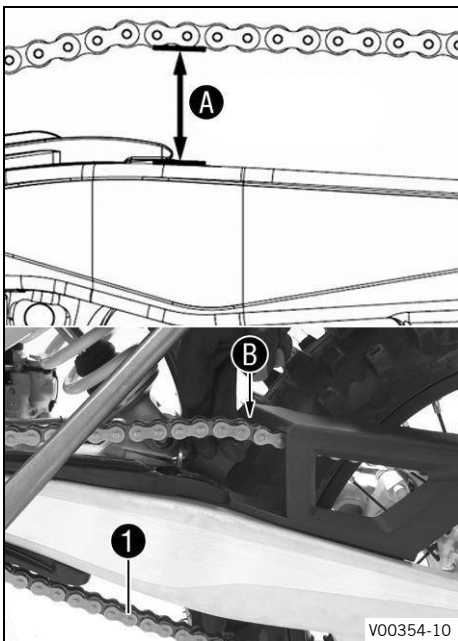

Chain tension	58 mm ... 61 mm (2.28 in ... 2.40 in)
Lower chain section 1 must be taut.	
When the chain guard is mounted, it must be possible to pull up the chain at least to the point where it makes contact with chain guard B .	
Repeat this measurement at different chain positions.	



Note

Chains do not always wear evenly.

- » If the chain tension does not meet the specification:
 - Adjust the chain tension.  (p. 91)

Reworking

- Remove the motorcycle from the lift stand.  (p. 65)

12.37 Adjusting the chain tension



WARNING

Danger of accidents Incorrect chain tension can damage components and result in an accident.

If the chain tension is too high, the chain, front sprocket, rear sprocket, transmission, and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the front sprocket or the rear sprocket. This can damage the rear wheel or the engine.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

Preparatory work

- Raise the motorcycle with a lift stand. (p. 65)
- Check the chain tension. (p. 90)

Adjustment procedure

- Loosen nut ①.
- Loosen nuts ②.
- Adjust the chain tension by turning adjusting screws ③ on the left and right.

Chain tension	58 mm ... 61 mm (2.28 in ... 2.40 in)
Turn adjusting screws ③ on the left and right so that the markings on the left and right chain tension adjusters are in the same position relative to reference marks A. The rear wheel is then correctly aligned.	

- Tighten nuts ②.
- Make sure that chain tension adjusters ④ are fitted correctly on adjusting screws ③.
- Tighten nut ①.


Nut, wheel spindle, rear	
M22	80 Nm (59.0 ft·lb _r)



Note

The wide adjustment range of the chain adjusters enables different secondary ratios with the same chain length.

Chain tension adjusters ④ can be turned by 180°.

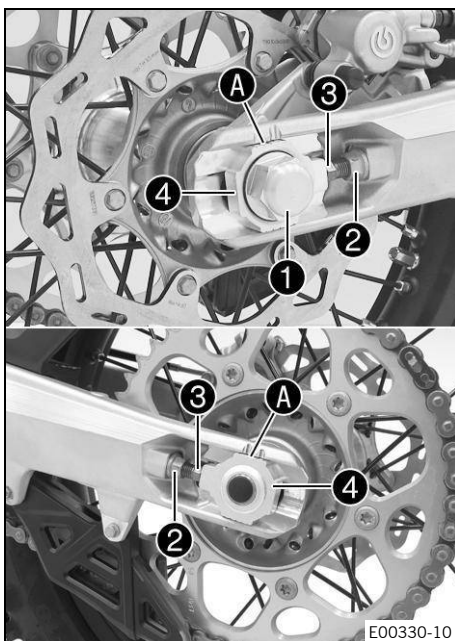

Reworking

- Remove the motorcycle from the lift stand. (p. 65)

12.38 Checking the chain, rear sprocket, front sprocket, and chain guide



Preparatory work

- Raise the motorcycle with a lift stand.  (p. 65)

Control process

- Shift the transmission into the neutral position.
- Check the chain, rear sprocket, and front sprocket for wear.
 - » If the chain, rear sprocket, or front sprocket is worn:
 - Change the drivetrain kit. 

The front sprocket, rear sprocket, and chain should always be replaced together.

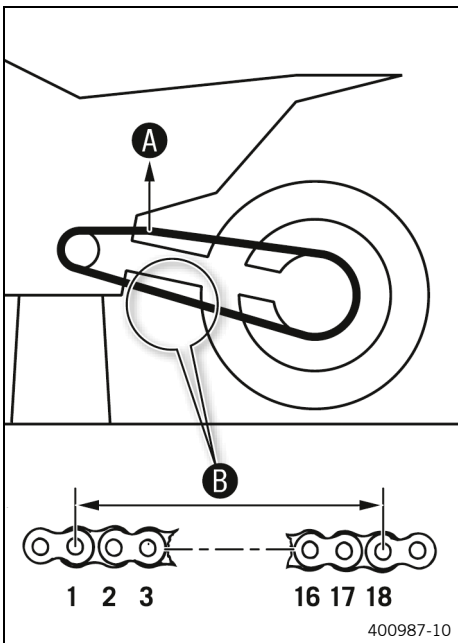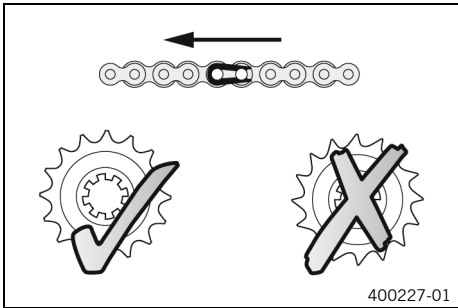

- Pull on the top section of the chain with the specified weight **A**.

Weight, chain wear measurement	10 kg ... 15 kg (22.0 lb ... 33.1 lb)
--------------------------------	--

- Measure distance **B** of chain rollers in the lower chain section.


Maximum distance B of chain rollers at the longest chain section	272 mm (10.71 in)
Repeat this measurement at different chain positions.	

 **Note**
Chains do not always wear evenly.

- » If distance **B** is greater than the specified measurement:
 - Change the drivetrain kit. 


When a new chain is fitted, the rear sprocket and front sprocket should also be replaced.

 **Note**
New chains wear out faster on old, worn sprockets.

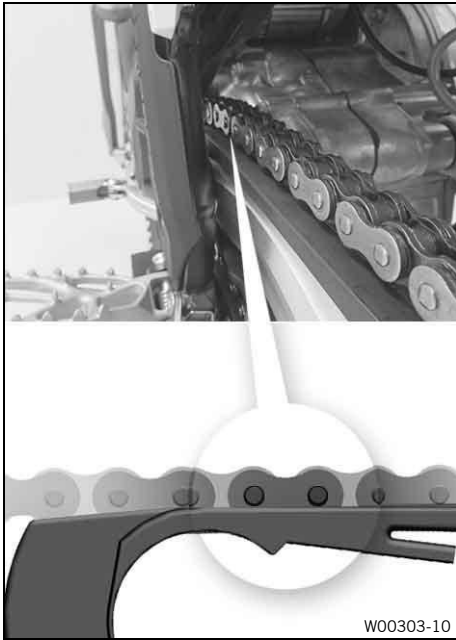


- Check the chain slider at the top for wear.
 - » If the lower edge of the chain pins is in line with, or below, the chain slider:
 - Change the chain slider. 🔧
- Check that the chain slider is firmly seated.
 - » If the chain slider is loose:
 - Tighten the screws of the chain slider.

Screw, chain slider guard	
M6	6 Nm (4.4 ft·lb _f) Loctite® 243

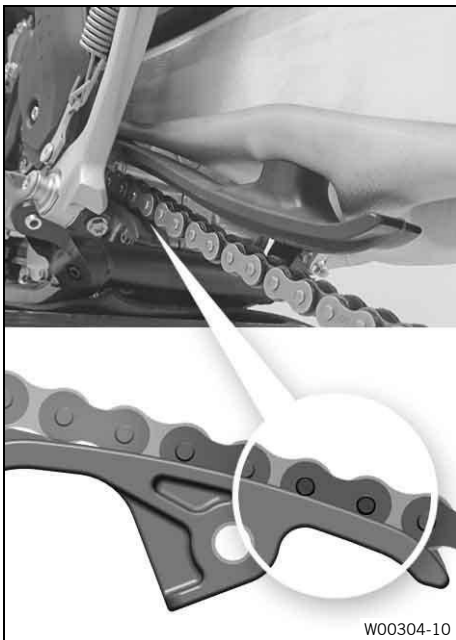

- Check the chain slider for wear.
 - » If the lower edge of the chain pins is in line with or below the chain slider:
 - Change the chain slider. 🔧
- Check that the chain slider is firmly seated.
 - » If the chain slider is loose:
 - Tighten the screw of the chain sliding piece.

Screw, chain slider	
M8	15 Nm (11.1 ft·lb _f)

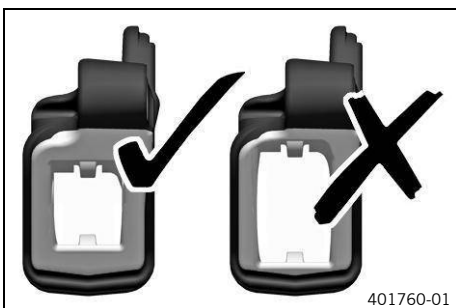

- Check the chain guide for wear.



Note

Wear can be seen on the front of the chain guide.

- » If the light part of the chain guide is worn:
 - Change the chain guide. 🔧

12 Service work on the chassis




- Check that the chain guide is firmly seated.
 - » If the chain guide is loose:
 - Tighten the screws on the chain guide.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _r)
Remaining nuts on chassis	
M6	10 Nm (7.4 ft·lb _r)

Reworking

- Remove the motorcycle from the lift stand. (p. 65)

12.39 Checking the frame

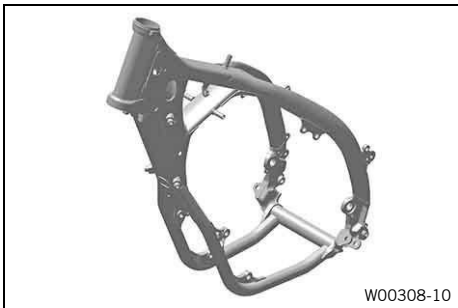

- Check the frame for damage, cracks, and deformation.
 - » If the frame shows signs of damage, cracks, or deformation:
 - Change the frame.

Repairs on the frame are not permitted.

12.40 Checking the swingarm



- Check the swingarm for damage, cracks, and deformation.
 - » If the swingarm shows signs of damage, cracks, or deformation:
 - Change the swingarm.

Repairs on the swingarm are not permitted.

12.41 Checking the throttle cable routing

WARNING

Danger of accidents The throttle cable can become kinked, jammed, or blocked if it has been routed incorrectly.

If the throttle cable is kinked, jammed or blocked, the speed can no longer be controlled.

- Make sure that the throttle cable routing and the play in the throttle cable complies with the specification.

Preparatory work

- Remove the seat.  (p. 78)
- Remove the fuel tank.   (p. 85)

Control process

- Check the throttle cable routing.

Both throttle cables must be routed, side by side, on the back of the handlebars and above the fuel tank bracket, to the throttle valve body. Both throttle cables must be secured behind the rubber strap of the fuel tank support.

- » If the throttle cable routing is not as specified:
 - Correct the throttle cable routing.




Reworking

- Install the fuel tank.   (p. 87)
- Mount the seat.  (p. 78)



12.42 Checking the hand grip

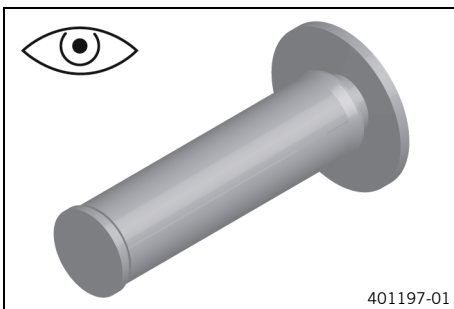

- Check the hand grips on the handlebar for damage, wear, and that they are firmly seated.




Note

The hand grips are vulcanized onto a sleeve on the left and onto the grip tube of the throttle grip on the right. The left sleeve is clamped onto the handlebar.

The hand grip can only be replaced with the sleeve or the gas pipe.

- » If a rubber grip is damaged, worn, or loose:
 - Replace the hand grip.

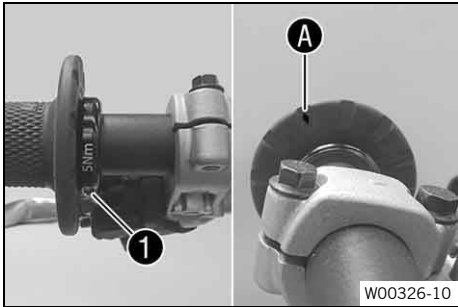

- Check that screw 1 is firmly seated.

Screw, fixed grip	
M4	5 Nm (3.7 ft·lb _r)
Loctite® 243	

Diamond A must be located at the top.

12.43 Checking/correcting the fluid level of hydraulic clutch

WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.

NOTE


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

Note

The fluid level rises with increasing wear of the friction plates.

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

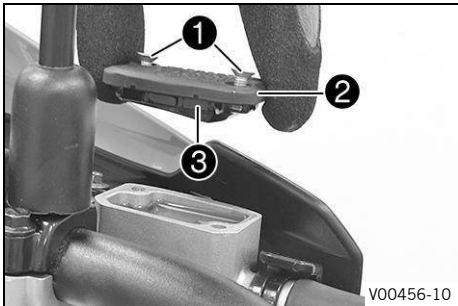

- Move the hydraulic clutch fluid reservoir mounted on the handlebar into a horizontal position.
- Remove 1 screws.
- Take off cover 2 with diaphragm 3.
- Check the fluid level.

Fluid level below reservoir rim	4 mm (0.16 in)
---------------------------------	-------------------


- » If the fluid level does not meet the specifications:
 - Correct the fluid level of the hydraulic clutch.

Brake fluid DOT 4 / DOT 5.1 (p. 170)

- Position the cover with diaphragm.
- Mount and tighten the screws.

Immediately clean up any brake fluid that has overflowed or spilled with water.

12.44 Adjusting the basic position of the clutch lever

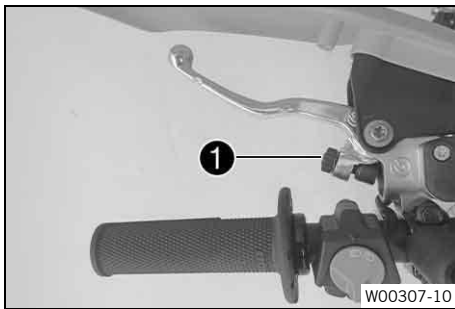

- Adjust the basic position of the clutch lever to your hand size by turning adjusting screw ①.

Only turn the adjusting screw by hand, and do not use force.

Do not make any adjustments while riding.



Note

When the adjusting screw is turned clockwise, the clutch lever moves away from the handlebar.

When the adjusting screw is turned counterclockwise, the clutch lever moves closer to the handlebar.

The range of adjustment is limited.

12.45 Changing the hydraulic clutch fluid



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



NOTE


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.




Note

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

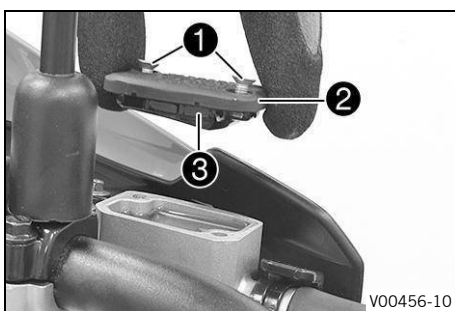

- Move the hydraulic clutch fluid reservoir mounted on the handlebar into a horizontal position.
- Remove ① screws.
- Take off cover ② with diaphragm ③.

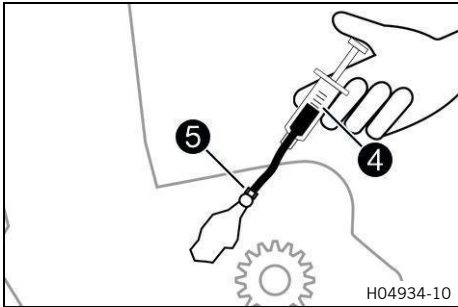

- Fill bleeding syringe 4 with the appropriate hydraulic fluid.

Syringe (50329050000)
Brake fluid DOT 4 / DOT 5.1 (p. 170)
- On the clutch slave cylinder, remove the protection cap, remove bleeder screw 5 and mount bleeding syringe 4.

- Keep pumping the fluid into the system until it comes out of openings 6 of the master cylinder without bubbles.
- Occasionally extract the fluid from the master cylinder reservoir to prevent overflowing.
- Remove the bleeding syringe.
- Mount and tighten the bleeder screw.
- Mount the protection cap.
- Correct the fluid level of the hydraulic clutch.

Fluid level below reservoir rim	4 mm (0.16 in)
---------------------------------	-------------------

- Position the cover with diaphragm.
- Mount and tighten the screws.


Immediately clean up any brake fluid that has overflowed or spilled with water.

13.1 Checking the free travel on the hand brake lever



WARNING

Danger of accidents The brake system fails in the event of overheating.
If there is no free travel on the brake lever, pressure builds up in the brake system.
– Set the free travel on the brake lever as specified.

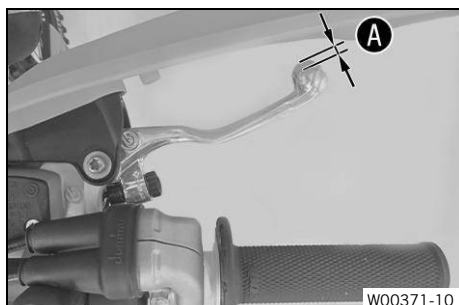


- Push the hand brake lever to the handlebar and check free travel **A**.

Free travel of hand brake lever	$\geq 3 \text{ mm}$ $(\geq 0.12 \text{ in})$
---------------------------------	---

- » If the free travel does not meet the specifications:
 - Adjust the free travel of the handbrake lever. (p. 99)



13.2 Adjusting the free travel of the handbrake lever

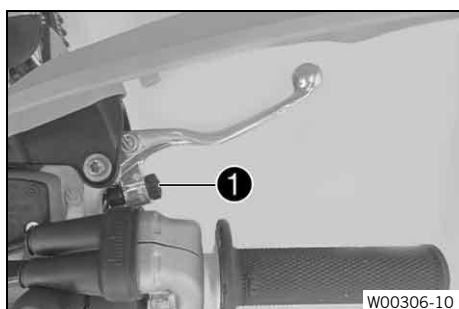

- Check the free travel on the hand brake lever. (p. 99)
- Adjust the free travel of the hand brake lever with adjusting screw **1**.



Note

Turn the adjusting screw clockwise to reduce free travel. The pressure point moves away from the handlebar.
Turn the adjusting screw counterclockwise to increase free travel. The pressure point moves towards the handlebar.
The range of adjustment is limited.

- Only turn the adjusting screw by hand, and do not use force.
- Do not make any adjustments while riding.




13.3 Checking the brake discs



WARNING

Danger of accidents Worn-out brake discs reduce the braking action.
– Make sure that worn-out brake discs are replaced immediately.

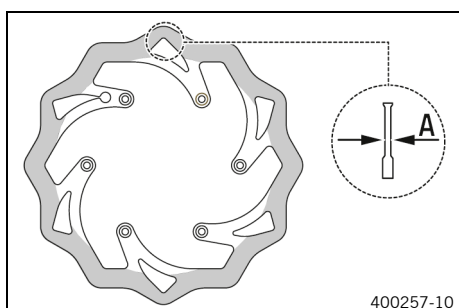

- Check the brake disc thickness of the front and rear brake disc at several places on the disc to see if they conform to measurement **A**.

Brake disc wear limit	
front	2.5 mm (0.098 in)
rear	3.5 mm (0.138 in)



Note

Wear reduces the thickness of the brake discs at the contact surface of the brake pads.

- » If the brake disc thickness is less than the specified value:
 - Change the brake discs of the front brake.
 - Change the brake discs on the rear brake.
- Check the front and rear brake discs for damage, cracks, and deformation.
 - » If the brake disc shows signs of damage, cracks, or deformation:
 - Change the brake discs of the front brake.
 - Change the brake discs on the rear brake.

13.4 Checking the brake fluid level for the front brake




WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

- Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.

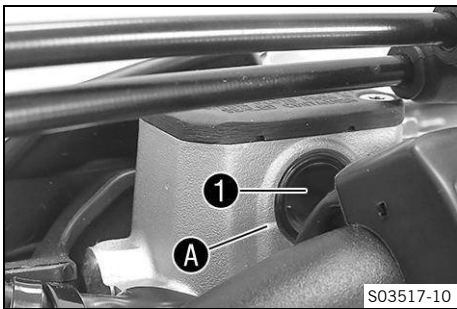

- Move the brake reservoir mounted on the handlebar to a horizontal position.
- Check the brake fluid level in sight glass **1**.
 - » If the brake fluid level has fallen below marking **A**:
 - Add brake fluid for the front brake. (p. 100)

13.5 Adding brake fluid for the front brake



WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

- Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.

**WARNING**

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.

**NOTE**

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

**Note**

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

Preparatory work

- Check that the brake pads of the front brake are secured.
 (p. 101)

Filling procedure


- Move the brake reservoir mounted on the handlebar to a horizontal position.
- Remove **1** screws.
- Take off cover **2** with diaphragm **3**.
- Add brake fluid up to level **A**.

Level A (brake fluid level below reservoir rim)	5 mm (0.20 in)
--	-------------------

Brake fluid DOT 4 / DOT 5.1  (p. 170)

- Position the cover with diaphragm.
- Mount and tighten the screws.

Immediately clean up any brake fluid that has overflowed or spilled with water.

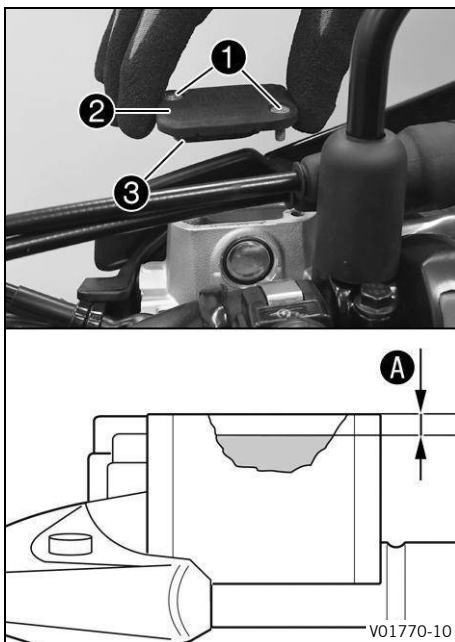


13.6 Checking that the brake pads of the front brake are secured

**WARNING**

Danger of accidents Worn brake pads reduce the brake action.

- Make sure that worn brake pads are replaced immediately.

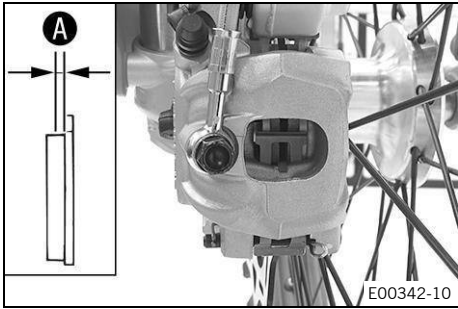

- Check all brake pads on both brake calipers for their lining thickness **A**.

Minimum pad thickness A	≥ 1 mm (≥ 0.04 in)
--------------------------------	-----------------------

 - » If it is less than the minimum thickness:
 - Change the front brake pads. (p. 102)
- Check the brake linings for damage and cracking.
 - » If there is damage or cracking:
 - Change the front brake pads. (p. 102)
- Check that the brake pads are secured.
 - » If the brake pads are not secured correctly:
 - Secure brake pads, replace with new parts if necessary.

13.7 Changing the brake pads of the front brake

WARNING

Danger of accidents Incorrect servicing will cause the brake system to fail.

- Ensure that service work and repairs are performed professionally.

WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.

WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.

WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.

WARNING

Danger of accidents Brake pads which have not been approved alter the braking action.

- Only use brake pads approved and recommended by the vehicle manufacturer.

NOTE


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.




Note


Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

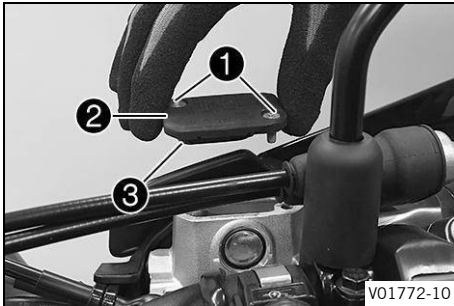


- Move the brake reservoir mounted on the handlebar to a horizontal position.
- Remove **1** screws.
- Take off cover **2** with diaphragm **3**.
- Manually press the brake caliper toward the brake disc to push back the brake pistons. Ensure that brake fluid does not flow out of the brake fluid reservoir; extract some if necessary.

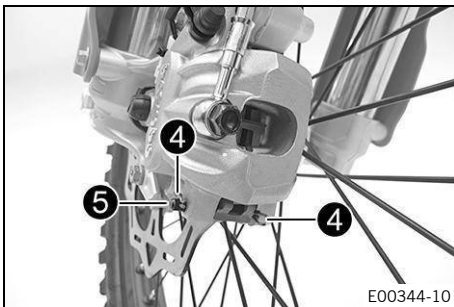

- Remove cotter pin **4**, pull out pin **5**, and remove the brake linings.
- Clean brake caliper and brake caliper support.

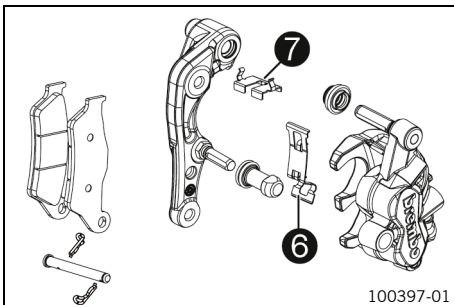

- Check that spring steel clip **6** in the brake caliper and brake pad guide plate **7** in the brake caliper support are properly seated.

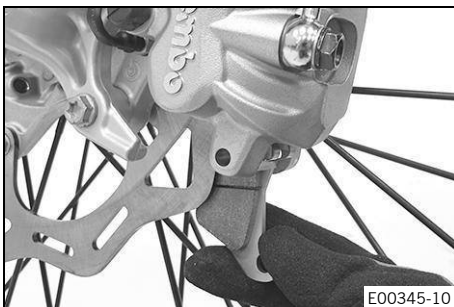


- Insert the new brake linings, insert the pin, and mount the cotter pins.



Note

Always replace brake pads in sets.

- Operate the hand brake lever repeatedly until the brake pads are in contact with the brake disc and a pressure point is reached.

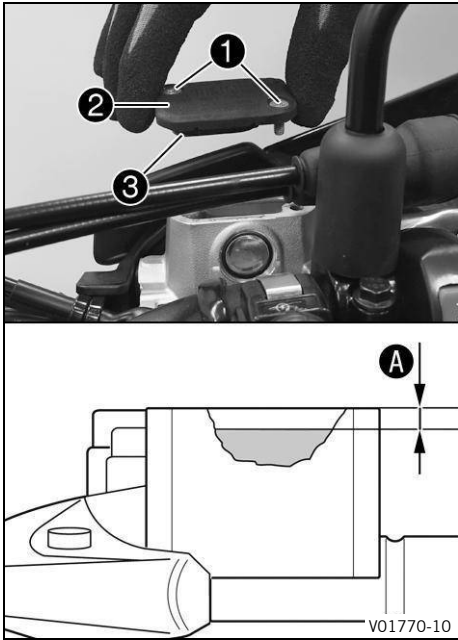

- Correct the brake fluid level to level **A**.

Level A (brake fluid level below reservoir rim)	5 mm (0.20 in)
--	-------------------

Brake fluid DOT 4 / DOT 5.1 (p. 170)	
---------------------------------------	--

- Position cover **2** with diaphragm **3**. Mount and tighten screws **1**.

Immediately clean up any brake fluid that has overflowed or spilled with water.	
---	--


13.8 Checking the free travel of the brake pedal

WARNING

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the brake lever, pressure builds up in the brake system.

- Set the free travel on the brake lever as specified.

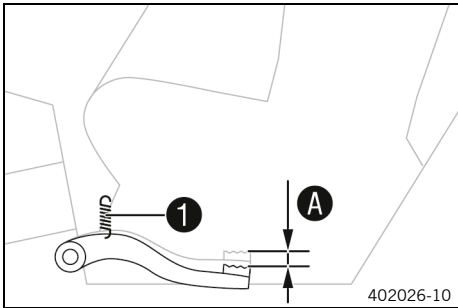

- Detach spring **1**.
- Move the brake pedal back and forth between the end stop and the brake pedal cylinder piston actuation and check free travel **A**.

Free travel of brake pedal	3 mm ... 5 mm (0.12 in ... 0.20 in)
----------------------------	--

- » If the free travel does not meet the specifications:
 - Adjust the basic position of the brake pedal.
- (p. 104)
- Attach spring **1**.


13.9 Adjusting the basic position of the brake pedal

WARNING

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the brake lever, pressure builds up in the brake system.

- Set the free travel on the brake lever as specified.

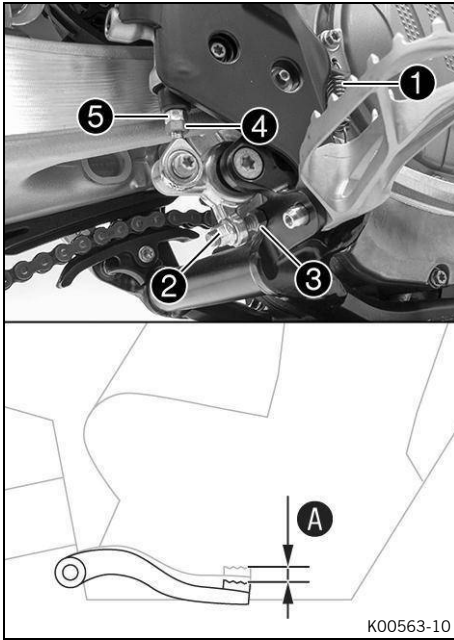

- Detach spring ①.
- Loosen nut ④ and unscrew it with push rod ⑤ until you have maximum free travel.
- To adjust the basic position of the brake pedal to individual requirements, loosen nut ② and turn screw ③ accordingly.



Note

The range of adjustment is limited.

- Turn push rod ⑤ accordingly until you have free travel A. If necessary, adjust the basic position of the brake pedal.

Free travel of brake pedal	3 mm ... 5 mm (0.12 in ... 0.20 in)
----------------------------	--

- Hold screw ③ and tighten nut ②.

Brake pedal stop nut	
M8	20 Nm (14.8 ft·lb _f)

- Hold push rod ⑤ and tighten nut ④.

Remaining nuts on chassis	
M6	10 Nm (7.4 ft·lb _f)

- Attach spring ①.



13.10 Checking the brake fluid level for the rear brake




WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

- Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.

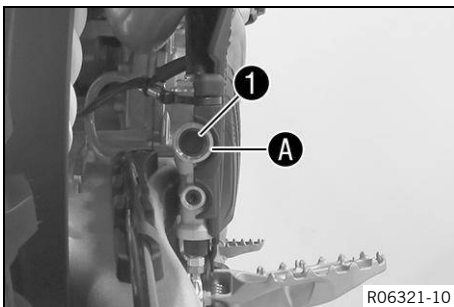

- Stand the vehicle upright.
- Check the brake fluid level in sight glass ①.
 - » If the brake fluid level has fallen below marking A:
 - Add brake fluid for the rear brake.  (p. 106)



13.11 Adding brake fluid for the rear brake



WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

- Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Note


Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.


Preparatory work

- Check that the brake pads of the rear brake are secured.
 (p. 107)
- Remove the frame protector.  (p. 67)

Filling procedure

- Cover the painted parts.
- Remove screw cap **1** with the membrane and the O-ring.

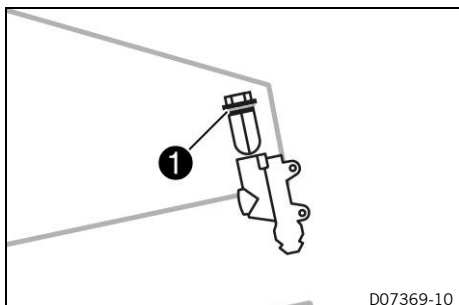

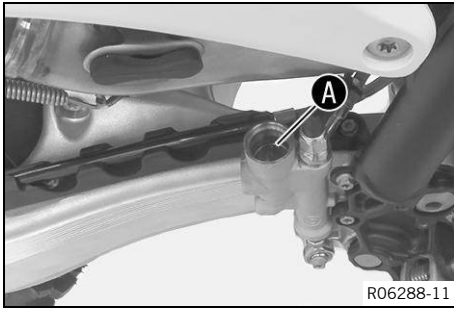

- Stand the vehicle upright.
- Add brake fluid to mark **A**.

Brake fluid DOT 4 / DOT 5.1 (p. 170)

- Mount and tighten the screw cap with the membrane and O-ring.

Immediately clean up any brake fluid that has overflowed or spilled using water.

Reworking

- Install the frame protector. (p. 68)




13.12 Checking that the brake pads of the rear brake are secured



WARNING

Danger of accidents Worn brake pads reduce the brake action.

- Make sure that worn brake pads are replaced immediately.

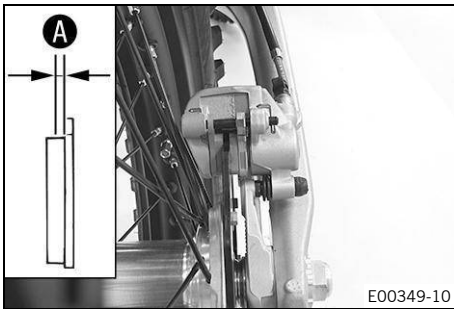

- Check all brake pads on both brake calipers for their lining thickness **A**.

Minimum pad thickness A	$\geq 1 \text{ mm}$ ($\geq 0.04 \text{ in}$)
--------------------------------	---

- » If it is less than the minimum thickness:
 - Change the rear brake pads. (p. 107)
- Check the brake linings for damage and cracking.
 - » If there is damage or cracking:
 - Change the rear brake pads. (p. 107)
- Check that the brake pads are secured.
 - » If the brake pads are not secured correctly:
 - Secure brake pads, replace with new parts if necessary.



13.13 Changing the rear brake pads



WARNING

Danger of accidents Incorrect servicing will cause the brake system to fail.

- Ensure that service work and repairs are performed professionally.



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.



WARNING

Danger of accidents Brake pads which have not been approved alter the braking action.

- Only use brake pads approved and recommended by the vehicle manufacturer.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Note



Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

Preparatory work


- Remove the frame protector.  (p. 67)

Replacement process


- Cover the painted parts.
- Remove screw cap ❶ with the membrane and the O-ring.
- Press the brake piston back to its basic position and make sure that no brake fluid overflows from the brake reservoir, extract some brake fluid if necessary.

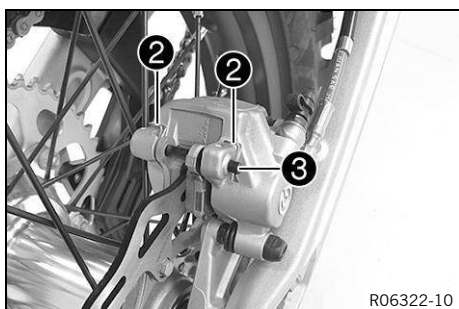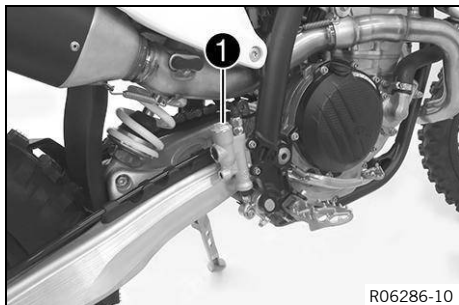


- Remove cotter pin ❷, pull out pin ❸, and remove the brake linings.
- Clean brake caliper and brake caliper support.

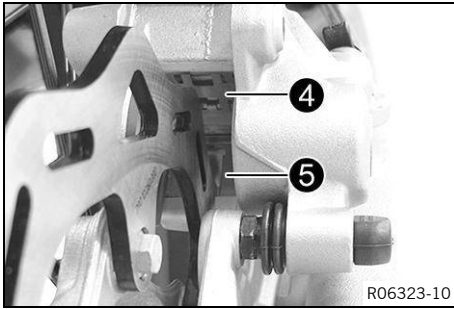

- Check that spring steel clip **4** in the brake caliper and brake pad guide plate **5** in the brake caliper support are properly seated.

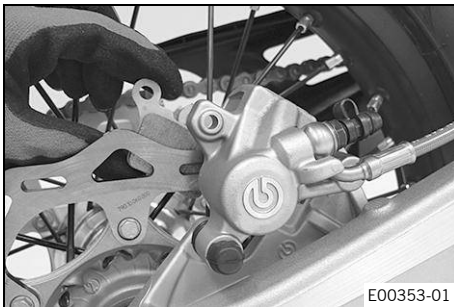

- Insert the new brake linings, insert the pin, and mount the cotter pins.
- Actuate the brake disc repeatedly until the brake pads are in contact with the brake disc and a pressure point is achieved.

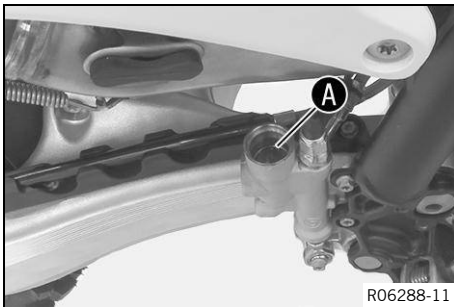

- Correct the brake fluid level to mark **A**.

Brake fluid DOT 4 / DOT 5.1 (p. 170)

- Mount and tighten screw cap **1** with the membrane and O-ring.

Immediately clean up any brake fluid that has overflowed or spilled with water.

Reworking

- Install the frame protector. (p. 68)




14.1 Removing the front wheel

Preparatory work


- Raise the motorcycle with a lift stand.  (p. 65)

Removal process

- Manually press the brake caliper toward the brake disc to push back the brake pistons.

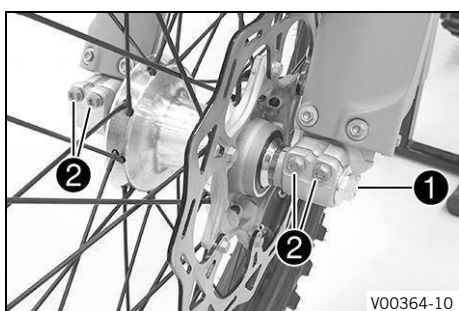

- Loosen screw **1** by four turns.
- Loosen screws **2**.
- Press on screw **1** to push the wheel spindle out of the fork shoe.
- Remove screw **1**.

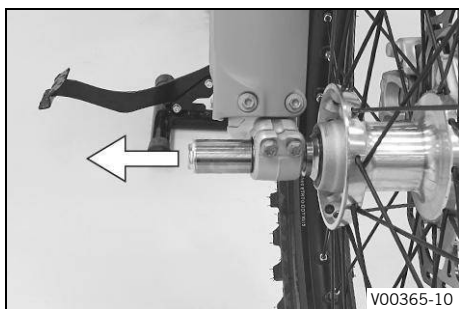


WARNING

Danger of accidents Damaged brake discs reduce the braking action.

- Always lay the wheel down in such a way that the brake disc is not damaged.

- Hold front wheel and remove wheel spindle. Take the front wheel out of the fork.

Do not actuate the hand brake lever when the front wheel is removed.

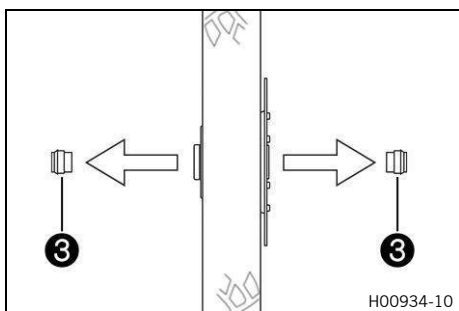

- Remove spacers **3**.


14.2 Installing the front wheel



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.

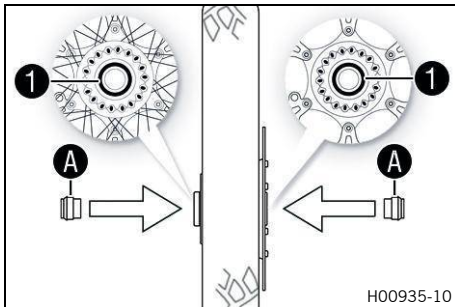

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the front wheel bearing.
- Clean and grease radial shaft seal (1) and contact surfaces (A) on the spacers.

Long-life grease (p. 169)

- Insert spacers.
- Clean and lightly grease the wheel spindle.

Long-life grease (p. 169)

- Position the front wheel and insert the wheel spindle.
 - ✓ The brake pads are positioned correctly.

- Mount and tighten screw (2).


Screw, wheel spindle, front

M20×1.5	35 Nm (25.8 ft·lb _r)
---------	-------------------------------------

- Operate the hand brake lever several times until the brake pads are in contact with the brake disc.
- Remove the motorcycle from the lift stand. (p. 65)
- Operate the front brake and compress the fork a few times firmly.
 - ✓ The fork legs straighten.
- Tighten screws (3).

Screw, fork shoe


M8	15 Nm (11.1 ft·lb _r)
----	-------------------------------------

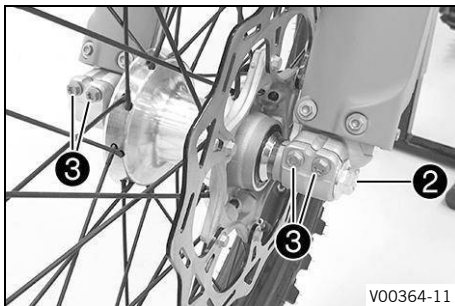

14.3 Removing the rear wheel

Preparatory work

- Raise the motorcycle with a lift stand. (p. 65)

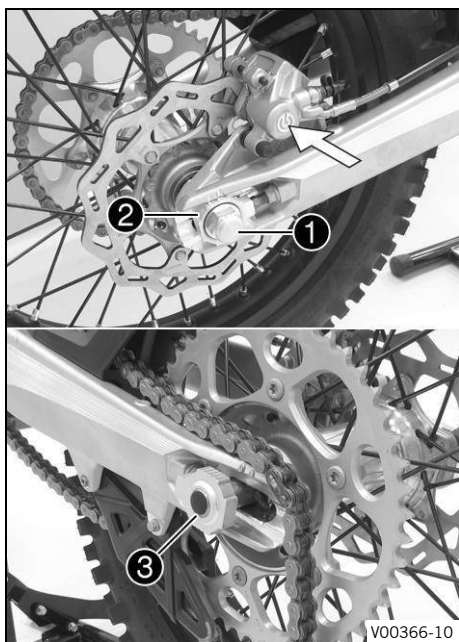

Removal process

- Manually press the brake caliper toward the brake disc to push back the brake pistons.
- Remove nut ①.
- Remove chain tension adjuster ②. Pull out wheel spindle ③ far enough to allow the rear wheel to be pushed forward.
- Push the rear wheel forward as far as possible. Remove the chain from the rear sprocket.

Protect the components against damage by covering them.



WARNING


Danger of accidents Damaged brake discs reduce the braking action.

- Always lay the wheel down in such a way that the brake disc is not damaged.

- Hold the rear wheel and remove wheel spindle. Take the rear wheel out of the swingarm.

Do not actuate the brake pedal when the rear wheel is removed.

- Remove spacers ④.

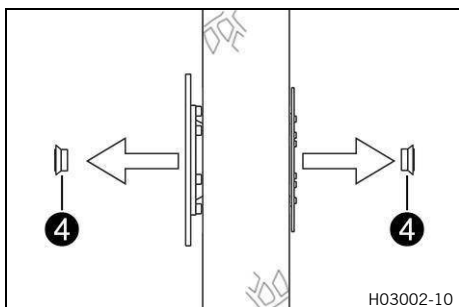

14.4 Installing the rear wheel



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.


- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.


Installation procedure

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the rear wheel bearing.
- Clean and grease radial shaft seal ① and contact surfaces A on the spacers.

Long-life grease (p. 169)

- Insert spacers.

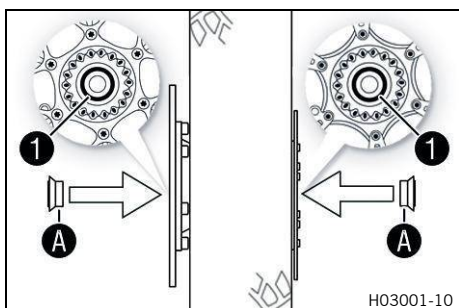

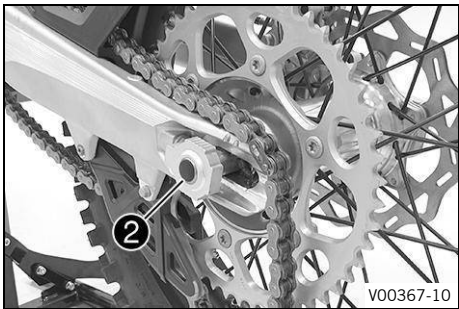

- Clean and lightly grease the wheel spindle.
- Long-life grease  (p. 169)
- Position the rear wheel and insert wheel spindle **2**.
 - ✓ The brake pads are positioned correctly.
 - Attach the chain.



- Position chain tension adjuster **3**. Mount nut **4** but do not tighten yet.
- Make sure that chain tension adjusters **3** are fitted correctly on adjusting screws **5**.
- Check the chain tension.  (p. 90)
- Tighten nut **4**.


Nut, wheel spindle, rear	
M22	80 Nm (59.0 ft·lb _r)

 **Note**

The wide adjustment range of the chain adjusters enables different secondary ratios with the same chain length.

Chain tension adjusters **3** can be turned by 180°.

- Actuate the brake disc repeatedly until the brake pads are in contact with the brake disc and a pressure point is achieved.

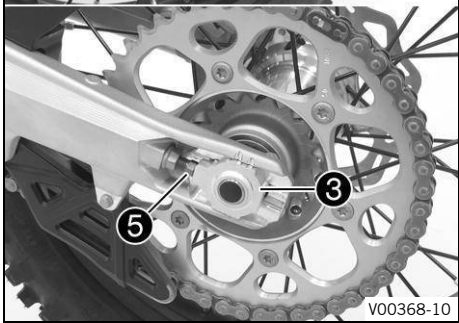

Reworking

- Remove the motorcycle from the lift stand.  (p. 65)

14.5 Checking the tire condition

 **Note**


Only mount tires approved and/or recommended by KTM.

Other tires could have a negative effect on handling characteristics.

The type, condition, and pressure of the tires all have a major impact on the handling of the motorcycle.

The tires mounted on the front and rear wheels must have a similar profile.

Worn tires have a negative effect on handling characteristics, especially on wet surfaces.

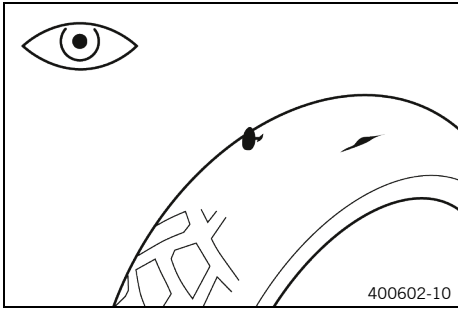


- Check the front and rear tires for cuts, embedded objects, and other damage.
 - » If the tires have cuts, run-in objects, or other damage:
 - Change the tires. 
- Check the tread depth.

Minimum tread depth	$\geq 2\text{ mm}$ ($\geq 0.08\text{ in}$)
---------------------	---

 **Note**
Observe the minimum tread depth required by national law.

- » If the tread depth is less than the minimum tread depth:
 - Change the tires. 
- Check the tire age.

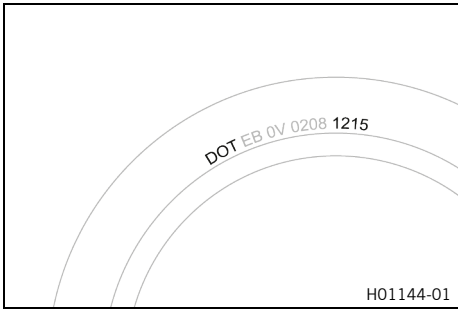


 **Note**
The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the **DOT** number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.
KTM recommends that the tires be changed after 5 years at the latest, regardless of the actual state of wear.

- » If the tires are older than five years:
 - Change the tires. 

14.6 Checking the tire pressure

 **Note**
Low tire pressure leads to abnormal wear and the tire overheating.
Correct tire pressure ensures optimal riding comfort and maximum tire service life.

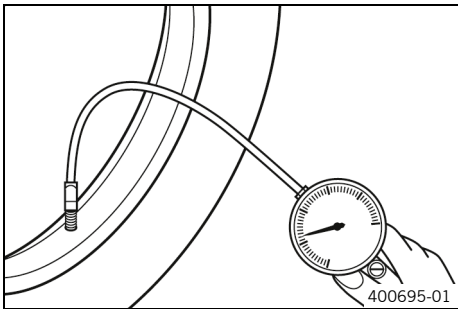

- Remove the protection cap.
- Check the tire pressure when the tires are cold.

Off-road tire pressure	
front	1.0 bar (14.5 psi)
rear	1.0 bar (14.5 psi)

Street tire pressure	
front	2.0 bar (29.0 psi)
rear	2.0 bar (29.0 psi)

- » If the tire pressure does not meet specifications:
 - Correct the tire air pressure.
- Mount the protection cap.

14.7

Checking the spoke tension




WARNING

Danger of accidents Incorrectly tensioned spokes impair the handling characteristic and can result in secondary damage.

If the spokes are too tight, they can break due to being overloaded.

Loose spokes can cause lateral or radial run-out in the wheel and other spokes will loosen as a result.

- Check the spoke tension regularly, especially on a new vehicle.

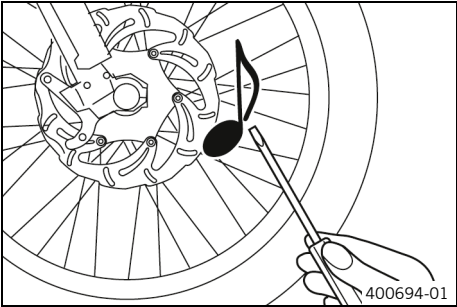

- Briefly tap each spoke with a screwdriver.

You should hear a high-pitched sound.



Note

The frequency of the sound depends on the spoke length and spoke diameter.

If you hear different pitches on different spokes of equal length and diameter, this is an indication of different spoke tensions.

- » If the spoke tension differs:
 - Correct the spoke tension. 
- Check the spoke torque.


Spoke nipple, front wheel	
M4,5	6 Nm (4.4 ft·lb _f)
Spoke nipple, rear wheel	
M4,5	6 Nm (4.4 ft·lb _f)
Torque wrench kit (58429094000)	

15.1 Removing the 12 V battery

- **NOTE**
Environmental hazard 12-V batteries contain environmentally-hazardous materials.
 - Do not dispose of 12-V batteries as household waste.
 - Dispose of 12-V batteries at a collection point for used batteries.
- **NOTE**
Environmental hazard Hazardous substances cause environmental damage.
 - Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

- Preparatory work**
- Remove the seat.  (p. 78)
 - Remove the fuel tank.   (p. 85)

Removal process

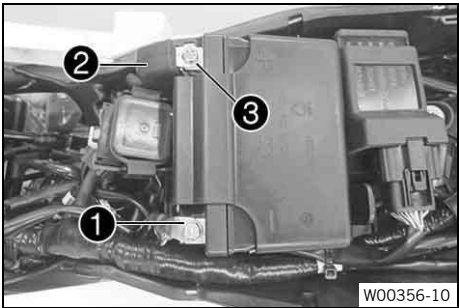

**WARNING**
Risk of injury 12-V batteries contain harmful substances.

- Keep 12-V batteries out of the reach of children.
- Keep the battery away from sparks or open flames.
- Only charge batteries in well-ventilated rooms.
- Maintain a minimum distance from flammable materials when charging 12-V batteries.


Minimum distance	1 m (3 ft – 3 in)
------------------	----------------------


- Do not charge deeply discharged 12– V batteries if the charge is already below the minimum voltage.

Minimum voltage before start- ing charging	9 V
---	-----

- Dispose of 12 V batteries correctly if they have less than the minimum voltage.

- Disconnect negative cable **1** from the 12 V battery.
- Pull back positive terminal cover **2** and disconnect positive cable **3** from the 12-V battery.
- Remove screw **4**.

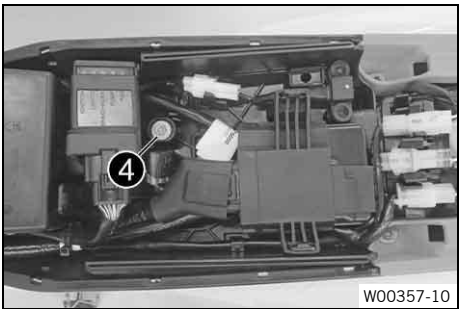

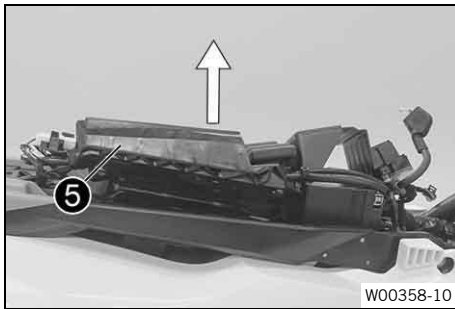


- Pull up battery holding bracket **5** and remove the 12-V battery to the rear.

Pay attention to the wiring harness.

15.2 Installing the 12 V battery

Installation procedure

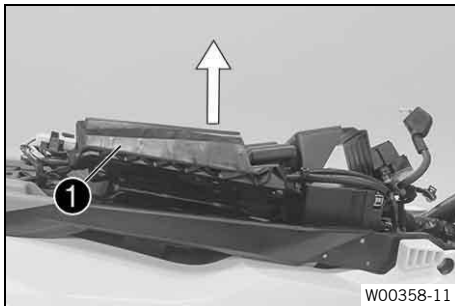

- Pull up battery holding bracket **1**, insert the 12-V battery into the battery compartment with the terminals facing upward and secure with battery holding bracket **1**.

Ensure that the cable is routed correctly.

12-V battery (HJTZ5S-FP-C)




- Mount and tighten screw **2**.

Screw, battery holding bracket

M6

6 Nm
(4.4 ft·lb_f)

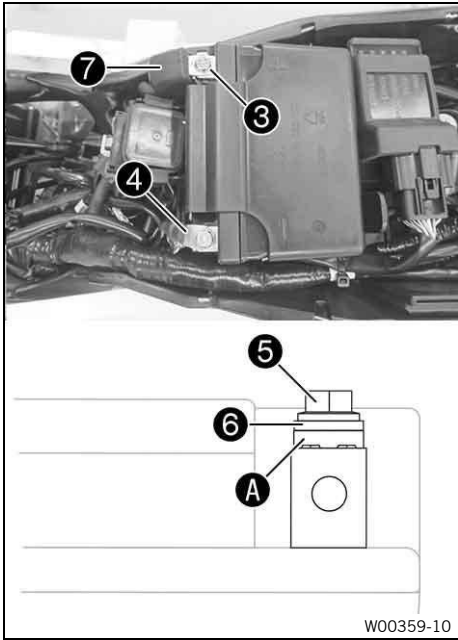

- Connect positive cable ③ to the 12 V battery.

Screw, battery terminal	
M5	2.5 Nm (1.84 ft·lb _f)

- Connect negative cable ④ to the 12 V battery.

Screw, battery terminal	
M5	2.5 Nm (1.84 ft·lb _f)

Contact disks A must be mounted under screws ⑤ and cable lug ⑥ with the claws toward the battery terminal.

- Slide positive terminal cover ⑦ over the positive terminal.

Reworking

- Install the fuel tank. 🛠📖 (p. 87)
- Mount the seat. 📖 (p. 78)

15.3 Charging the 12 V battery 🛠



NOTE

Environmental hazard 12-V batteries contain environmentally-hazardous materials.

- Do not dispose of 12-V batteries as household waste.
- Dispose of 12-V batteries at a collection point for used batteries.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.




Note

Even when there is no load on the 12 V battery, it discharges steadily each day. The state of charge and the method of charging are very important for the service life of the 12 V battery. Rapid recharging with a high charging current shortens the service life of the battery. If the charging current, charging voltage, or charging time is exceeded, the 12 V battery will be destroyed. If the 12 V battery is depleted from starting the vehicle repeatedly, the battery must be charged immediately. If the 12 V battery is left in a discharged state for an extended period, it will become deeply discharged and suffer a loss of capacity, destroying the battery.

Preparatory work

- Remove the seat.  (p. 78)
- Remove the fuel tank.   (p. 85)
- Remove the 12 V battery.   (p. 116)

Filling procedure

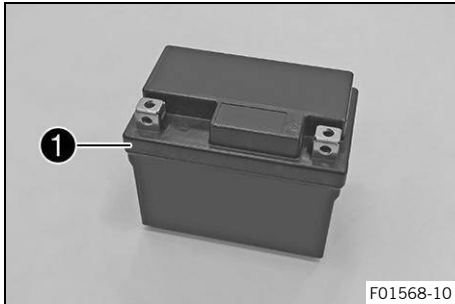

WARNING

Risk of injury 12-V batteries contain harmful substances.

- Keep 12-V batteries out of the reach of children.
- Keep the battery away from sparks or open flames.
- Only charge batteries in well-ventilated rooms.
- Maintain a minimum distance from flammable materials when charging 12-V batteries.

Minimum distance	1 m (3 ft – 3 in)
------------------	----------------------

- Do not charge deeply discharged 12-V batteries if the charge is already below the minimum voltage.

Minimum voltage before starting charging	9 V
--	-----

- Dispose of 12 V batteries correctly if they have less than the minimum voltage.

- Check the battery voltage.

- » Battery voltage:
 - < 9 V
 - Do not charge the 12 V battery.
 - Replace the 12 V battery and dispose of the old 12 V battery properly.
- » If the specifications have been met:
Battery voltage:
 - ≥ 9 V
 - Connect a charger to the 12 V battery. Switch the charger on.

Maximum charging voltage	14.4 V
Minimum charging voltage	3.0 A
Maximum charging time	12 h
Recharge the 12 V battery regularly when the motorcycle is not being used.	6 months
Ideal charging and storage temperature of the lithium-ion battery	10 °C ... 20 °C (50.0 °F ... 68.0 °F)
Battery charger (79629974000)	

**Note**

If the charging current, charging voltage, or charging time is exceeded, the 12-V battery will be destroyed.

If the 12 V battery is left in a discharged state for an extended period, it will become deeply discharged and suffer a loss of capacity, destroying the battery.

The 12 V battery is maintenance-free.

Never remove cover .

**Note**

This battery charger tests whether the 12-V battery retains its voltage. It is also impossible to overcharge the 12-V battery with this battery charger. The charging time may be longer at low temperatures.

**Note**

This battery charger is only suitable for lithium iron phosphate batteries. Read the accompanying **KTM PowerParts** instructions.

- Switch off the charger after charging and disconnect from the 12-V battery.

Reworking

- Install the 12 V battery.   (p. 117)
- Install the fuel tank.   (p. 87)
- Mount the seat.  (p. 78)



15.4 Changing the main fuse



WARNING

Fire hazard Incorrect fuses overload the electrical system.

- Use only fuses with the prescribed amperage.
- Do not bypass or repair fuses.



Note

The main fuse protects all electrical power loads of the vehicle. It is located in the starter relay housing under the seat.

Preparatory work

- Remove the seat. (p. 78)
- Remove the fuel tank. (p. 85)

Replacement process

- Remove protection caps **1**.
- Remove faulty main fuse **2**.



Note

A faulty fuse has a burned-out fuse wire **A**.

A spare fuse **3** is located in the starter relay.


- Insert the main fuse.
- Check that the electrical equipment is functioning properly.



Tip

Insert a new spare fuse so that it is available if needed.


- Mount the protection caps.
- Mount the starter relay onto the holder and route the cable.

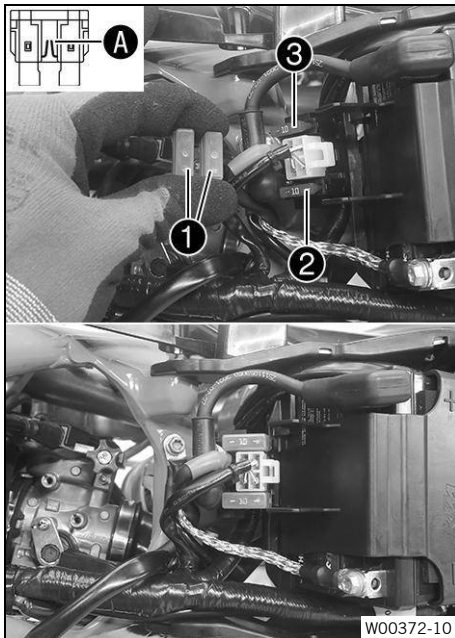


Reworking

- Install the fuel tank. (p. 87)
- Mount the seat. (p. 78)

15.5 Removing the headlight mask with the headlight

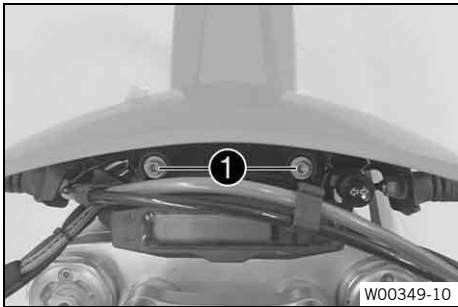

- Loosen screws ❶.
- Slide the headlight mask up and swing it forward.
- Detach the brake line and wiring harness from the headlight mask.


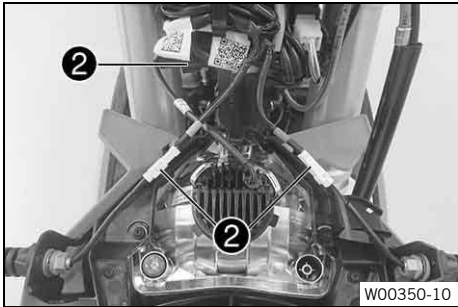


- Detach plug-in connectors ❷ and take off the headlight mask with the headlight.

15.6 Installing the headlight mask with the headlight

Installation procedure

- Join plug-in connectors ❶.

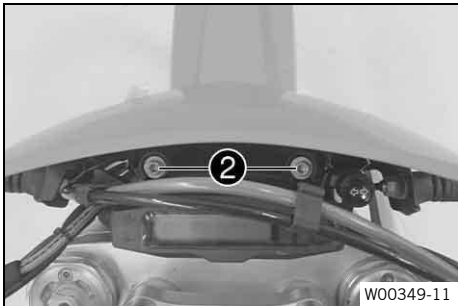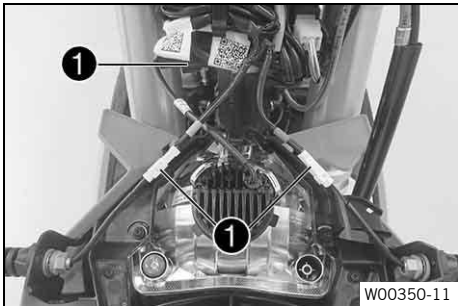

- Position the brake line and wiring harness in the brake line guide.
- Position the headlight mask.
 - ✓ The holding lugs engage in the fender.
- Mount and tighten screws ❷.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _r)

Reworking

- Check the headlight setting. 📖 (p. 123)



15.7 Changing the headlight bulb

Preparatory work

- Remove the headlight mask with the headlight.  (p. 122)

Replacement process

- Turn LED unit **1** counterclockwise all the way and take it out of the reflector.

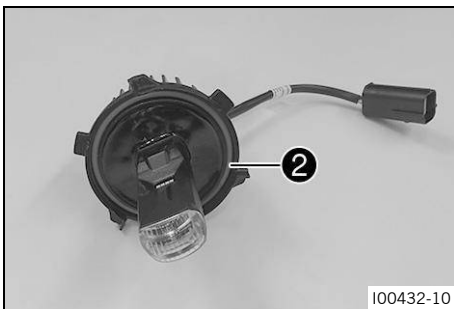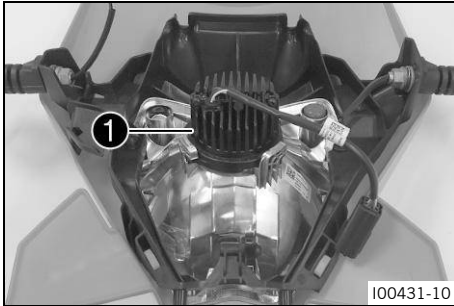

- Insert the LED unit into the reflector and turn it clockwise all the way.

Ensure that O-ring 2 is seated properly.


Low beam (LED)

Reworking

- Install the headlight mask with the headlight.  (p. 122)
- Check the headlight setting.  (p. 123)



15.8 Checking the headlight setting

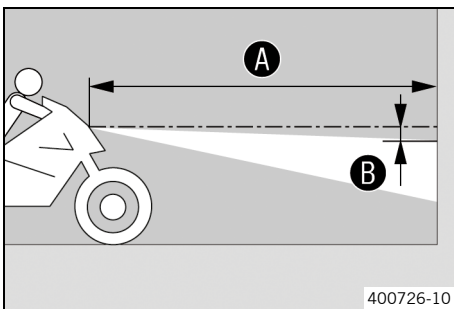

- Park the vehicle on a horizontal surface in front of a light-colored wall and make a mark at the height of the center of the low beam headlight.
- Make another mark at a distance **B** under the first marking.

Distance B	5 cm (2.0 in)
-------------------	------------------

- Position the vehicle vertically at a distance **A** away from the wall.

Distance A	5 m (16 ft – 5 in)
-------------------	-----------------------

- Sit on the motorcycle.
- Switch on the low beam.
- Check the headlight setting.

The boundary between light and dark must be exactly on the lower mark for a motorcycle with rider.
--

- » If the boundary between light and dark does not meet specifications:
 - Adjust headlight range.  (p. 124)
- » If the boundary between light and dark does not meet specifications:
 - Adjust headlight range.  (p. 124)

15.9 Adjusting the headlight range

Preparatory work

- Check the headlight setting.  (p. 123)

Adjustment procedure

- Loosen screw **1**.
- Adjust the headlight range by pivoting the headlight.


The boundary between light and dark must be exactly on the lower mark for a motorcycle with rider (instructions on how to apply the mark: Checking the headlight setting).



Note

A change in weight may require a correction of the headlight range.

- Tighten screw **1**.

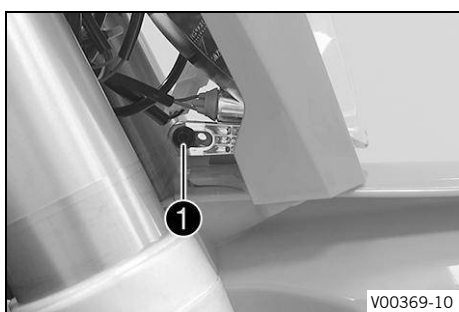

15.10 Changing the turn signal bulb



NOTE

Impairments to reflectors and lamps Grease on the reflector reduces the emitted light.

Grease on the bulb will evaporate due to the heat and be deposited on the reflector.

Grease residue on the bulb reduces heat dissipation and increases the heat of the bulb, thus reducing its service life.


- Clean and degrease the bulbs before mounting.
- Do not touch the bulbs with your bare hands.

Replacement process

- Remove the screw on the rear of the turn signal housing.
- Carefully remove turn signal glass ❶.
- Lightly squeeze orange cap ❷ in the area of the holding lugs and take it off.
- Press the turn signal bulb lightly into the socket, turn it counterclockwise by about 30°, and pull it out of the socket.
- Press the new turn signal bulb carefully into the socket and turn it clockwise until it stops.

Turn signal (RY10W / Socket BAU15s)

- Mount the orange cap.
- Position the turn signal glass.
- Insert the screw and first turn counterclockwise until it engages in the thread with a small jerk. Tighten the screw lightly.

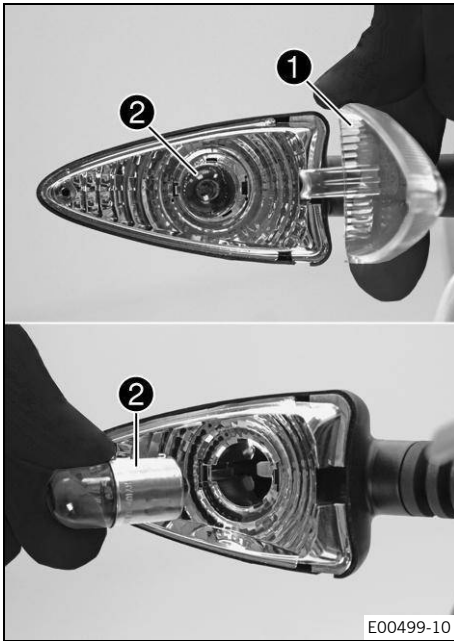

Reworking

- Check that the turn signal system is functioning properly.



15.11 combination instrument battery, changing

Preparatory work

- Remove the headlight mask with the headlight. 📖 (p. 122)

Replacement process


- Remove screws ❶ with the washers.
- Pull the combination instrument upward out of the holder.

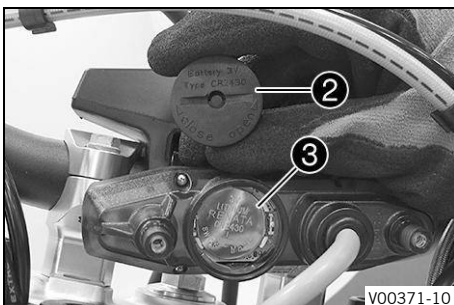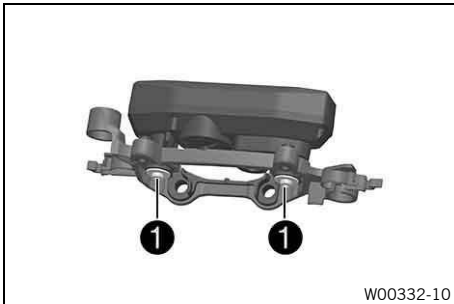

- Using a coin, turn protection cap ❷ all the way counterclockwise and take it off.
- Remove combination instrument battery ❸.
- Insert the combination instrument with the label facing upward.

Button cell (CR 2430)

- Check the O-ring of the protection cap for correct seating.

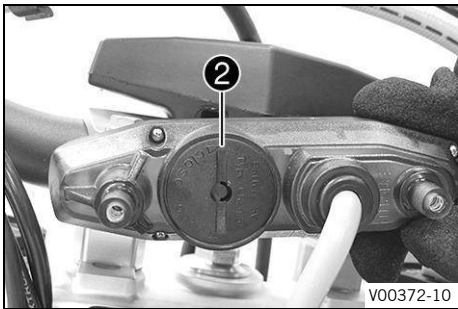


- Position protection cap ❷ and turn all the way clockwise using a coin.
- Press any button on the combination instrument.
 - ✓ The combination instrument is activated.
- Position the combination instrument in the holder.
- Mount and tighten the screws with washers.

Reworking

- Install the headlight mask with the headlight. 📖 (p. 122)
- Check the headlight setting. 📖 (p. 123)
- Set to kilometers or miles. 📖 (p. 30)
- Set the combination instrument. 📖 (p. 31)
- Set the clock. 📖 (p. 31)


15.12 Diagnostic connector

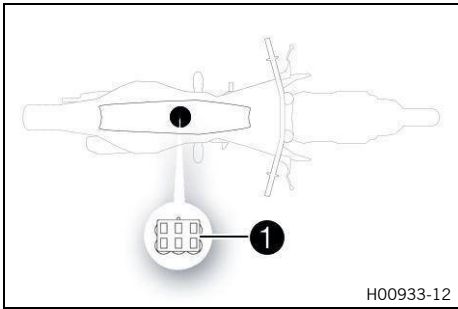

Diagnostics connector ❶ is located under the seat.

15.13 OCU

OCU ❶ is located under the seat.

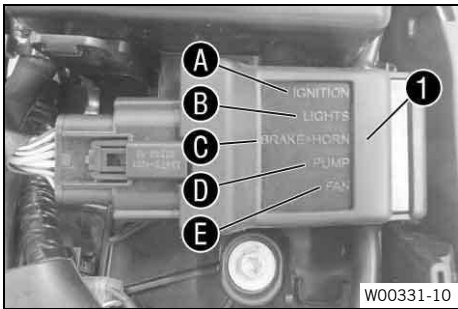


The OCU replaces the electronic fuses and relays. All outputs are switched independently of the signals of the voltage regulator and ECU. The outputs are deactivated individually in the event of overcurrent. This enables easy error detection because the status of each output is indicated via LED lights. The OCU monitors the electronics system completely independently. As soon as an indicated error is rectified, the status light of the OCU changes from red to green.

overview

A	Ignition
B	Light
C	Brake light + horn
D	Fuel pump

E	Radiator fan
----------	--------------

16.1 Cooling system

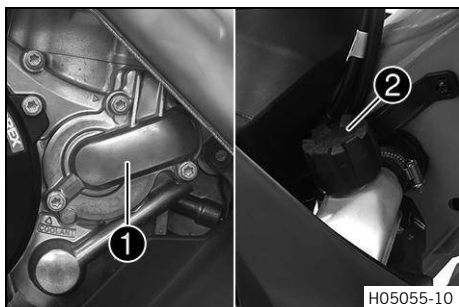

Water pump **1** in the engine circulates the coolant. The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap **2**. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

120 °C
(248.0 °F)

The coolant is cooled by the air stream.

The lower the vehicle speed, the lower the cooling effect. Dirty cooling fins also reduce the cooling effect.

Additional cooling is provided by the radiator fan, which is activated at high temperature.

16.2 Checking the frost protection and coolant level



WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.




WARNING

Health hazard Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

Condition: The engine is cold

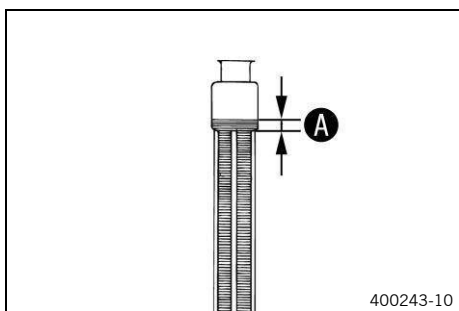

- Stand the motorcycle upright on a level surface.
- Take off the radiator cap.
- Check the frost protection in the coolant.

–45 °C ... –25 °C
(–49.0 °F ... –13.0 °F)

- » If the frost protection in the coolant does not match the specified value:
 - Correct the frost protection in the coolant.
- Check the coolant level in the radiator.

Coolant level A above the radiator fins	10 mm (0.39 in)
--	--------------------

- » If the coolant level does not meet the specifications:
 - Correct the coolant level.

coolant	
Coolant  (p. 170) Antifreeze protection to at least: -25 °C (-13.0 °F)	0.95 l (0.251 liq. gal _{US})

- Mount the radiator cap.



16.3 Checking the coolant level



WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.




WARNING

Health hazard Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

Condition: The engine is cold

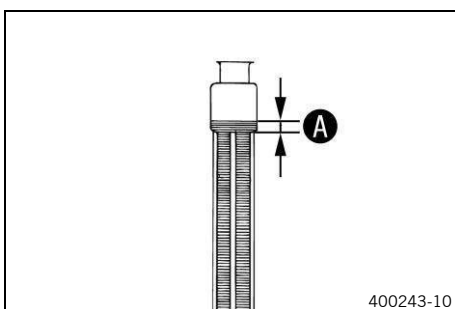

- Stand the motorcycle upright on a level surface.
- Take off the radiator cap.
- Check the coolant level in the radiator.

Coolant level A above the radiator fins	10 mm (0.39 in)
--	--------------------

- » If the coolant level does not meet the specifications:
 - Correct the coolant level.

coolant	
Coolant  (p. 170) Antifreeze protection to at least: -25 °C (-13.0 °F)	0.95 l (0.251 liq. gal _{US})

- Mount the radiator cap.



16.4 Draining the coolant



WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.




WARNING

Health hazard Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

Condition: The engine is cold

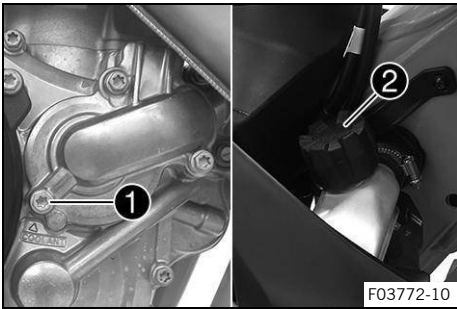

Emptying process

- Stand the motorcycle upright.
- Place an appropriate container under the water pump cover.
- Remove screw ❶ and take off radiator cap ❷.
- Completely drain the coolant.
- Mount screw ❶ with the new sealing ring and tighten.

Screw, water pump cover	
M6	10 Nm (7.4 ft·lb _f)


16.5 Refilling the coolant



WARNING

Health hazard Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

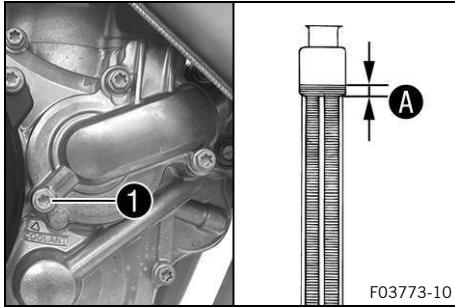

Filling procedure

- Make sure that screw ① is tightened.
- Stand the motorcycle upright.
- Pour coolant in up to level A above the radiator fins.

10 mm
(0.39 in)

coolant

Coolant (p. 170)

Antifreeze protection to at least: -25 °C (-13.0 °F)

0.95 l

(0.251 liq. gal_{US})

- Mount the radiator cap.

Reworking

- Go for a short test ride.
- Check the coolant level. (p. 129)



16.6 Changing the coolant



WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.




WARNING

Health hazard Coolant is harmful to health.


- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

Condition: The engine is cold

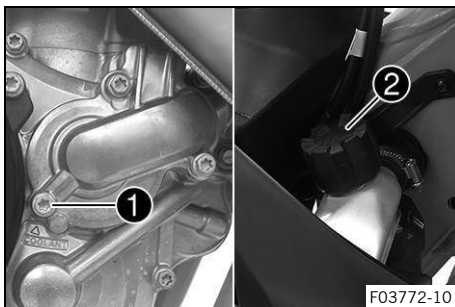

Replacement process

- Stand the motorcycle upright.
- Place an appropriate container under the water pump cover.
- Remove screw ① and take off radiator cap ②.
- Completely drain the coolant.

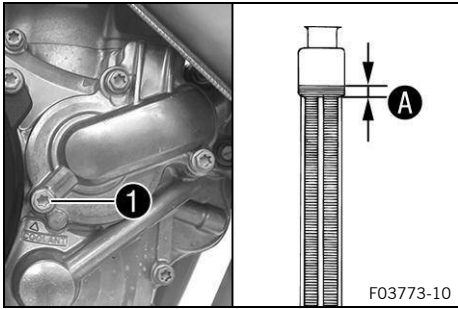

- Mount screw 1 with the new sealing ring and tighten.

Screw, water pump cover	
M6	10 Nm (7.4 ft·lb _r)

- Pour coolant in up to level A above the radiator fins.

10 mm (0.39 in)

coolant	
Coolant (p. 170)	0.95 l
Antifreeze protection to at least: -25 °C (-13.0 °F)	(0.251 liq. gal _{US})


- Mount radiator cap 2.

Reworking

- Go for a short test ride.
- Check the coolant level. (p. 129)



17.1 Checking the play in the throttle cable

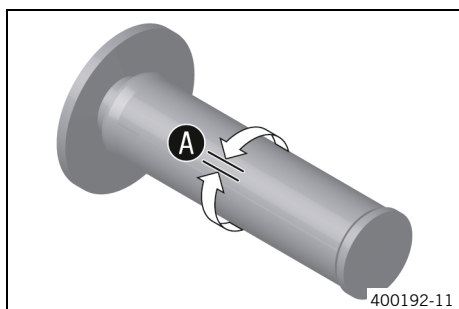

- Check the throttle grip for smooth operation.
- Move the handlebar to the straight-ahead position. Turn the throttle twist grip back and forth slightly and determine the play in throttle cable **A**.

Throttle cable play	3 mm ... 5 mm (0.12 in ... 0.20 in)
---------------------	--

- » If the throttle cable play does not meet the specified value:
 - Adjust the throttle cable play. (p. 133)
- Press the cold start button in all the way to the stop.

When the throttle twist grip is turned forward, the cold start button jumps back to the start position.

- » If the cold start button does not return to its original position:
 - Adjust the throttle cable play. (p. 133)



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and let it run at idle speed. Move the handlebar back and forth over the entire steering range.

The idle speed must not change.

- » If the idle speed changes:
 - Adjust the throttle cable play. (p. 133)



17.2 Adjusting the throttle cable play




Note

If the correct routing of the throttle cables has already been secured, the fuel tank does not need to be removed.

Preparatory work

- Remove the seat. (p. 78)
- Remove the fuel tank. (p. 85)
- Check the throttle cable routing. (p. 94)

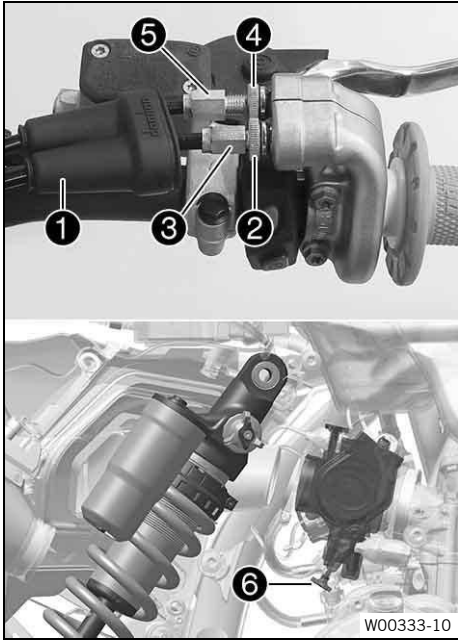

Adjustment procedure

- Move the handlebar to the straight-ahead position.
- Push back boot ①.
- Loosen nut ②.
- Screw adjusting screw ③ in as far as possible.
- Loosen nut ④.
- Press cold start button ⑤ all the way to the stop.
- Turn adjusting screw ⑤ so that the cold start button moves to the basic position when the throttle twist grip is turned forward.
- Tighten nut ④.
- Turn adjusting screw ③ so that there is play in the throttle cable at the throttle twist grip.

Throttle cable play	3 mm ... 5 mm (0.12 in ... 0.20 in)
---------------------	--

- Tighten nut ②.
- Slide on boot ①.
- Check the throttle grip for smooth operation.

Reworking

- Check the play in the throttle cable. 📖 (p. 133)

17.3 Adjusting the characteristic map of the throttle response 🔧


i


Note

On the throttle grip, the characteristic map of the throttle response is changed by changing the guide plate. A guide plate with a different characteristic map is supplied.

Adjustment procedure

- Push back boot ①.
- Remove screws ② and half-shells ③.
- Detach the throttle cables and take off the grip tube.

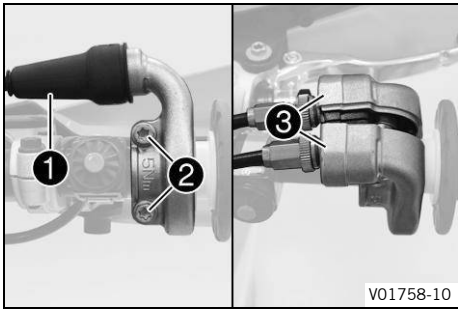

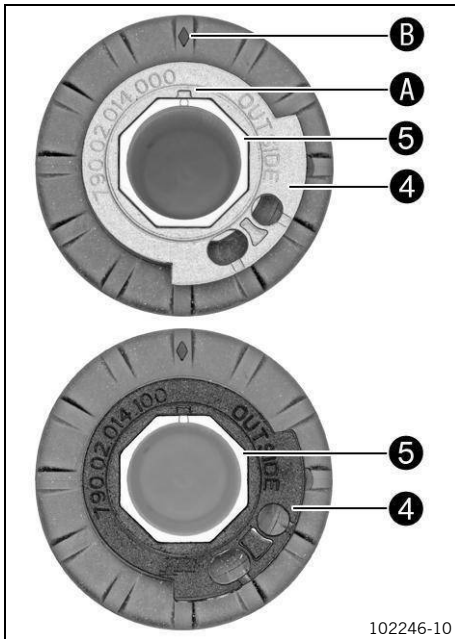

- Remove guide plate ④ from handle tube ⑤.
- Position the required guide plate on the grip tube.

The label **OUTSIDE** must be visible. Marking **A** must be positioned at marking **B**.

Gray guide plate (A48002014000)

Work material (Alternative 1 / 1)

Black guide plate (A46002014000)




Note

The gray guide plate opens the throttle valve more slowly.

The black guide plate opens the throttle valve more quickly.

The gray guide plate is mounted upon delivery.

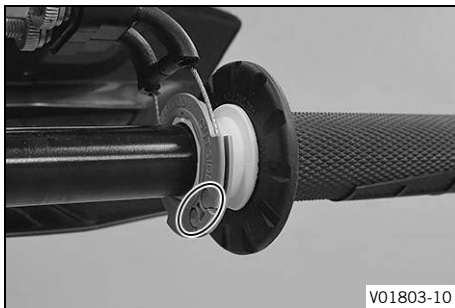

- Clean the outside of the handlebar and the inside of the grip tube. Mount the grip tube on the handlebar.
- Attach the throttle cables to the guide plate and route correctly.
- Position half-shells ③, mount and tighten screws ②.

Screw, throttle twist grip

M6

5 Nm
(3.7 ft·lb_r)

- Slide on sleeve ① and check the throttle grip for ease of movement.

Reworking

- Check the play in the throttle cable. (p. 133)




17.4 Adjusting the idle speed



WARNING

Danger of accidents The engine may suddenly come to a halt if the idle speed is set too low.

- Set the idle speed to the specified value.

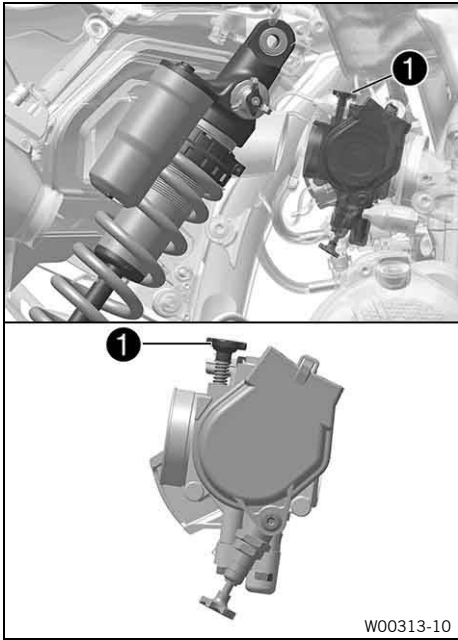

- Run the engine until warm.
- Check whether the cold start button has returned to its basic position.

DANGER
Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Adjust the idle speed by turning idle speed adjusting screw **1**.


Idle speed	1,950 rpm ... 2,050 rpm (32.50 Hz ... 34.17 Hz)
------------	--

Service hour counter with revolution counter (A54012920100)
--

Note
Turning counterclockwise lowers the idle speed.
Turning clockwise increases the idle speed.

17.5 Teaching the throttle valve position

Note
If the control unit detects that the throttle valve position at idle speed needs to be retaught, then the malfunction indicator lamp flashes 2x per second.

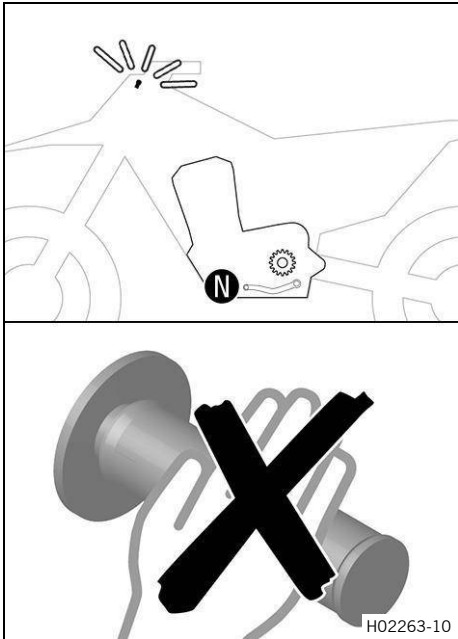

DANGER
Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.


- Allow the vehicle to run at idle speed.
- ✓ The malfunction indicator lamp stops flashing once teaching is completed.

Note
If the engine becomes too warm, perform a cool-down ride at medium speed.
Then do not switch off the engine after this, but leave it running at idle speed until teaching is completed.

17.6 Checking the basic position of the gear shift lever

i Note

When driving, the gear shift lever must not touch the rider's boot when in the basic position.
When the gear shift lever keeps touching the boot, the transmission will be subject to an excessive load.

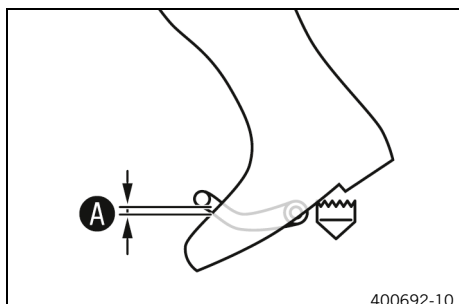

400692-10

- Sit on the vehicle in the riding position and measure the distance **A** between the upper edge of your boot and the shift lever.

Distance between the gear shift lever and upper edge of boot	10 mm ... 20 mm (0.39 in ... 0.79 in)
--	--


» If the distance does not meet the specifications:

- Adjust the basic position of the gear shift lever.

(p. 137)




17.7 Adjusting the basic position of the gear shift lever

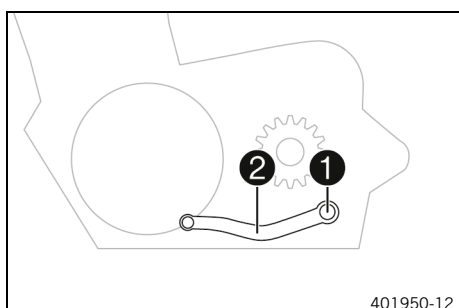

401950-12

- Remove screw **1** with the washer and remove the shift lever **2**.

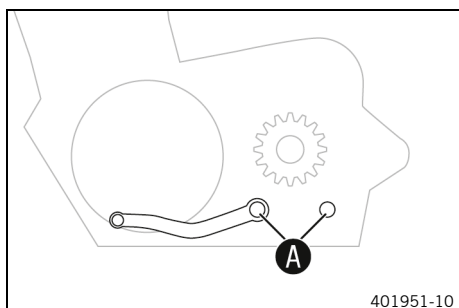

401951-10

- Clean tothing **A** of the gear shift lever and shift shaft.
- Mount shift lever **2** on the shift shaft in the required position and engage the gearing.

The gear shift lever must not come into contact with any other vehicle components during the shift procedure.

i Note

The range of adjustment is limited.

- Mount and tighten screw **1** with the washer.

Screw, shift lever	
M6	14 Nm (10.3 ft·lb.) Loctite® 243



18.1 Changing the fuel screen



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



WARNING

Danger of poisoning Fuel is harmful to health.


- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.




NOTE

Environmental hazard Improper handling of fuel is dangerous to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

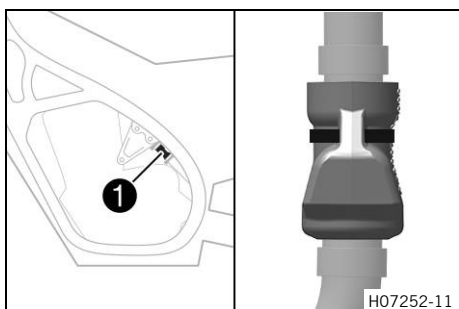

- Remove the cable tie of protection cap ①.
- Remove the protection cap of the fuel line.

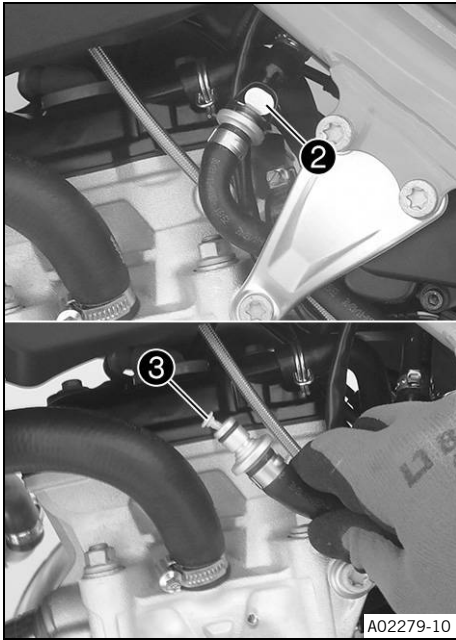

- Clean quick-lock coupling **2** thoroughly with compressed air.

Dirt must not enter into the fuel line. Dirt in the fuel line clogs the injector!

- Disconnect the quick-lock coupling.




Note

Remaining fuel may flow out of the fuel hose.

- Pull fuel screen **3** out of the connecting piece.
- Slide the new fuel screen all the way into the connecting piece.
- Spray silicone spray onto a lint-free cleaning cloth and lightly lubricate the O-ring of the quick-lock coupling.

Silicone spray (p. 170)

- Join quick-lock couplings.

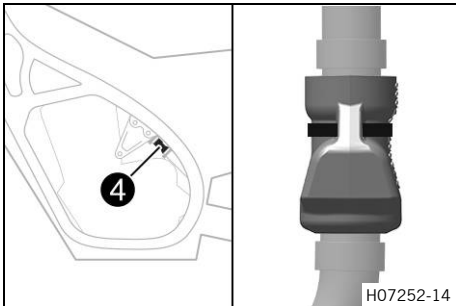

- Mount the protection cap of the fuel line.
- Mount the cable tie of protection cap **4**.



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check the response.

18.2 Checking the engine oil level

Preparatory work

- Stand the motorcycle upright on a level surface.

Control process

Condition: Engine is at operating temperature


- Check the engine oil level.

The engine oil is at a level between lower edge **A** and the middle of level viewer **B**.

After switching off the engine, wait one minute before checking the level.

- » If the engine oil is not up to lower edge **A** of the level viewer:

- Add engine oil. (p. 142)

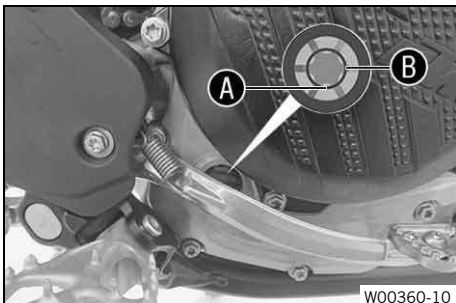

18.3 Changing the engine oil and oil filter, cleaning the oil screens



WARNING

Danger of scalding Engine and gear oil heat up when the motorcycle is operated.

- Wear suitable protective clothing and safety gloves.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Condition: Engine is at operating temperature

Preparatory work

- Park the motorcycle on a level surface.

Replacement process

- Position an appropriate container under the engine.
- Remove screw plug **1** with the oil screen and O-ring.
- Remove oil drain plug **2** with the magnet and seal ring.

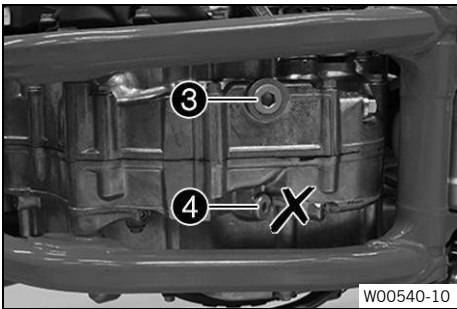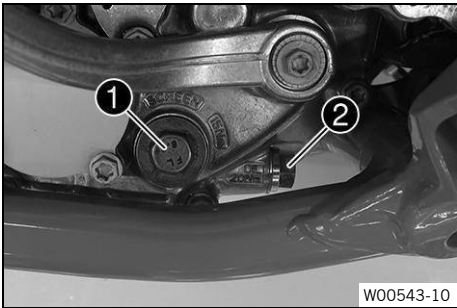


- Remove screw plug **3** with O-ring.


Do not remove screw **4**.

- Allow the engine oil to drain completely.
- Thoroughly clean the parts and the sealing surfaces.
- Mount and tighten screw plug **3** with new O-ring.

Plug, oil screen	
M20×1.5	15 Nm (11.1 ft·lb _f)

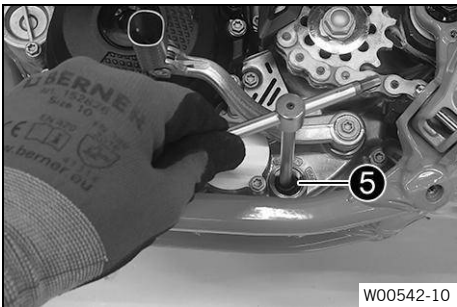

- Position oil screen **5** with the O-rings on a pin wrench.
- Position the pin wrench through the drill hole of the screw plug in the opposite section of the engine case.
- Push the oil screen all the way into the engine case.

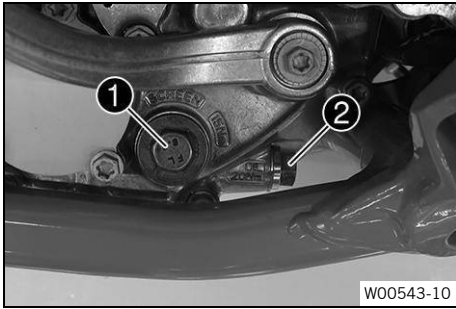


- Mount and tighten screw plug **1** with O-ring.


Plug, oil screen	
M20×1.5	15 Nm (11.1 ft·lb _f)

- Mount and tighten oil drain plug **2** with the magnet and a new seal ring.

Oil drain plug with magnet	
M12×1.5	20 Nm (14.8 ft·lb _f)

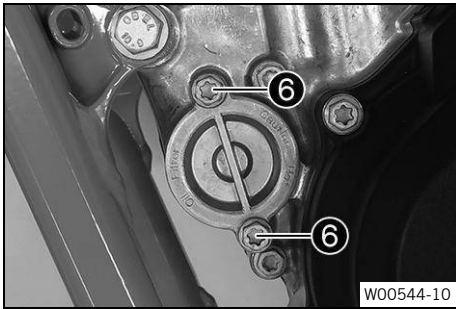


- Remove screws **6**.
- Take off the oil filter cover with the O-ring.

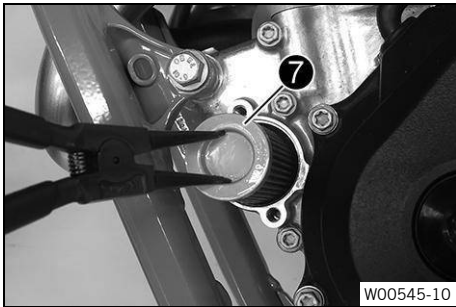

- Pull oil filter **7** out of the oil filter housing.

Lock ring plier (51012011000)

- Allow the engine oil to drain completely.
- Thoroughly clean the parts and the sealing surface.

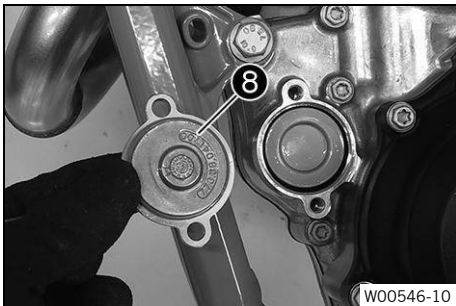


- Lay the motorcycle on its side and fill the oil filter housing to about ¼ full with engine oil.
- Insert the new oil filter into the oil filter housing.
- Oil the O-ring of the oil filter cover and mount it together with oil filter cover **8**.
- Mount and tighten the screws.

Screw, oil filter cover	
M6	10 Nm (7.4 ft·lb _f)

- Stand the motorcycle upright.
- Remove filler plug **9** with the O-ring, and fill up with engine oil.

engine oil	
Engine oil (10W/50) (p. 169) fully synthetic	1.0 l (0.26 liq. gal _{US})

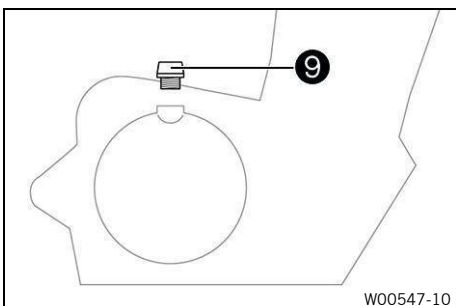

Note
Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

- Mount and tighten the oil plug together with the O-ring.



DANGER
Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.


- Start the engine and check it for leaks.

Reworking

- Check the engine oil level.  (p. 139)

18.4 Adding engine oil

Note
Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

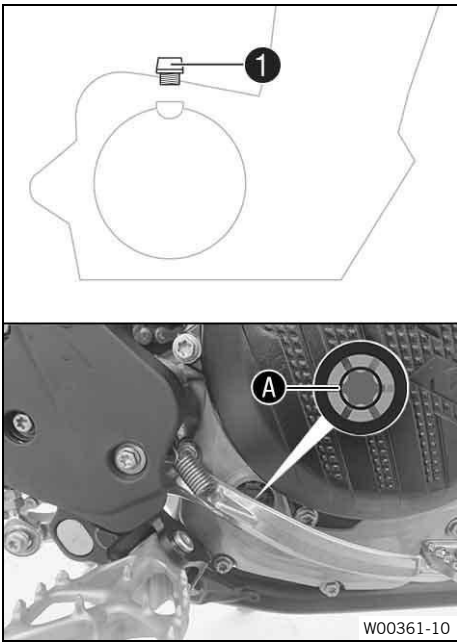

Filling procedure

- Remove oil filler plug **1** with the O-ring from the clutch cover.
- Fill engine oil to the middle **A** of the level viewer.

engine oil	
Engine oil (10W/50)  (p. 169) fully synthetic	1.0 l (0.26 liq. gal _{US})

Note
In order to achieve optimal engine oil performance, it is not advisable to mix different engine oils.
KTM recommends changing the engine oil if necessary.

- Mount and tighten the filler plug together with the O-ring.



DANGER
Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check it for leaks.

Reworking

- Check the engine oil level.  (p. 139)



19.1 Cleaning the motorcycle



NOTE
Material damage Components can be damaged or destroyed if a high-pressure cleaner is used incorrectly. The high pressure forces water into the electrical components, socket connectors, clutch cables, and bearings, etc.

Too high a pressure can cause malfunctions and destroy components.

- Do not direct the water jet directly on to electrical components, socket connectors, clutch cables, or bearings.
- Maintain a minimum distance between the nozzle of the high-pressure cleaner and the component.

Minimum distance	60 cm (23.6 in)
------------------	--------------------




NOTE
Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Note
Clean the motorcycle regularly to maintain its value and appearance over a long period.
Avoid direct sunshine when cleaning the motorcycle.

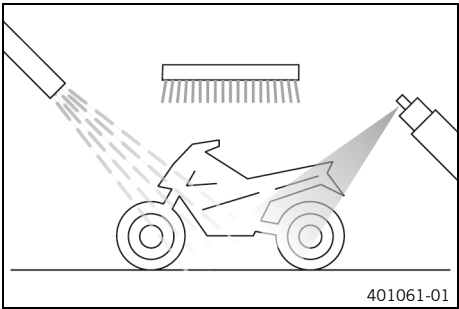

- Close off the exhaust system to keep water from entering.
- Remove the coarse dirt particles with a gentle water jet.
- Spray the heavily soiled parts with a standard commercial motorcycle cleaner and clean using a brush.

Never apply motorcycle cleaner to a dry vehicle; always rinse the vehicle with water first.

Environmentally neutral universal cleaning agent
 (p. 172)



Note
Use warm water containing standard motorcycle cleaner and a soft sponge.

- Clean the motorcycle thoroughly with a soft water jet, then allow to dry.
- Remove the cover from the exhaust system.



WARNING
Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake pads and the brake discs.

- After cleaning, ride the vehicle a short distance until the engine warms up.



Note

The heat produced causes water to evaporate at inaccessible locations in the engine and on the brake system.

- After the motorcycle has cooled off, lubricate all moving parts and pivot points.
- Clean the chain. (p. 89)
- Treat bare metal (except for brake discs and the exhaust system) with an anticorrosive.

Preserving materials (p. 172)

- Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Cleaning agents for plastics, glass, lacquers, metals, windshields and visors (p. 172)

- Lubricate the steering lock.

Universal oil spray (p. 169)

- Grease the ignition switch.

Universal oil spray (p. 169)



19.2 Checks and maintenance steps for winter operation



WARNING

Danger of accidents Salt on the roads impairs the brake system.

- Brake carefully several times to remove salt from the brake linings and the brake discs.



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.


- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.



Note

If you use the vehicle in winter, you must expect salt on the roads. You should therefore take precautions against aggressive road salt.

If the vehicle was operated in road salt, clean it with cold water after riding. Warm water enhances the corrosive effects of salt.

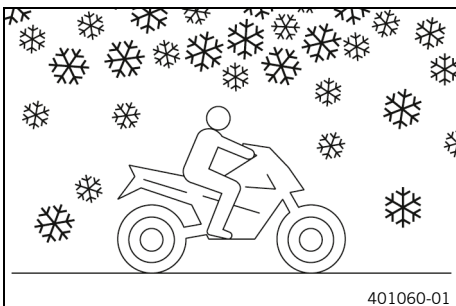

- Clean the motorcycle. (p. 144)
- Clean brake system.

After every trip on salted roads, thoroughly wash the brake calipers and brake pads with cold water and dry carefully. This should be done after the parts are cooled down and while they are installed.

After riding on salted roads, thoroughly clean the vehicle with cold water and dry it well.

- Treat the engine, swingarm, and all other bare or zinc-plated parts (except the brake discs) with a wax-based anticorrosive.

Corrosion inhibitor must not come into contact with the brake discs. This would severely lower the braking effect.

- Clean the chain.  (p. 89)



20.1 Storage


**WARNING****Danger of poisoning** Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.

**Note**

If the vehicle will not be ridden for an extended period, additional steps are recommended.

Before storing the motorcycle, check all parts for function and wear. If service, repairs, or replacements are necessary, you should do this during the storage period (workshops less busy). This allows you to avoid long waiting periods when the next season starts.

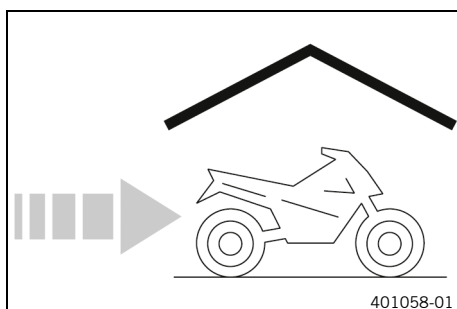

- When refueling for the last time before taking the motorcycle out of service, add fuel additive.

Fuel additive  (p. 168)
--

- Refuel.  (p. 51)

**Tip**

Fill the fuel tank completely as specified, using fuel with the lowest possible ethanol content.

- Clean the motorcycle.  (p. 144)
- Change the engine oil and the oil filter, clean the oil screens.   (p. 140)
- Check the frost protection and coolant level.  (p. 128)
- Check the tire pressure.  (p. 114)
- Remove the 12 V battery.   (p. 116)
- Charge the 12 V battery.   (p. 118)

Storage temperature of the 12 V battery without direct sunlight	0 °C ... 35 °C (32.0 °F ... 95.0 °F)
---	---

- Store the vehicle in a dry location that is not subject to large fluctuations in temperature.

**Note**

KTM recommends jacking up the motorcycle.

- Raise the motorcycle with a lift stand.  (p. 65)


Preferably cover the motorcycle with a tarp or similar cover that is permeable to air. Do not use non-porous materials since they prevent humidity from escaping, and, as a result, contribute to corrosion.



Note

Avoid running the engine of a motorcycle in storage for a short time only. Since the engine cannot warm up properly, the water vapor produced during combustion condenses and causes valves and the exhaust system to rust.

20.2 Preparing for use after storage

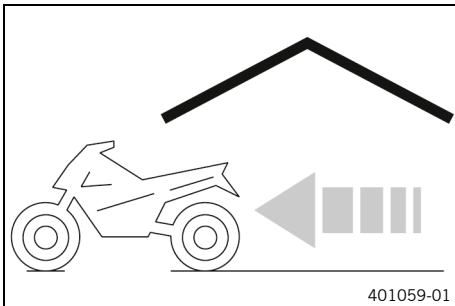

- Remove the motorcycle from the lift stand.  (p. 65)
- Install the 12 V battery.   (p. 117)
- Perform checks and maintenance measures when preparing for use.  (p. 48)
- Take a test ride.

21.1 troubleshooting

Cause	Finding	Remedy		
The engine does not turn over (starter motor)	Operating error 12 V battery discharged Main fuse blown Starter relay defective Starter motor defective	– Carry out the starting procedure.  (p. 48) – Charge the 12 V battery.  –  (p. 118) – Check the charging voltage.  – Check the open-circuit current.  – Check the stator winding of the alternator.  – Change the main fuse.  (p. 121) – Check the starter relay.  – Check the starter motor. 		
The engine turns but does not start	Operating error Quick-lock coupling not joined Error in the circuit, OCU LED A and D lights up. Idle speed is not set correctly Spark plug sooty or wet Plug gap of spark plug too wide Faulty ignition Short-circuit cable in wiring harness frayed, stop button or emergency OFF switch faulty Error in the electronic fuel injection	– Carry out the starting procedure.  (p. 48) – Join quick-lock couplings. – Check the electrical system. – Adjust the idle speed.   (p. 135) – Clean and dry the spark plug and spark plug connector, or change if necessary. – Adjust plug gap.<table border="1" data-bbox="900 963 1313 1037"><tr><td>Plug gap of spark plug</td><td>1.0 mm (0.039 in)</td></tr></table> – Check the ignition system.  – Check the wiring harness. (Visual check). – Check the electrical system. – Read out the fault memory using the diagnostics tool. 	Plug gap of spark plug	1.0 mm (0.039 in)
Plug gap of spark plug	1.0 mm (0.039 in)			
Engine does not speed up	Error in the electronic fuel injection Faulty ignition	– Read out the fault memory using the diagnostics tool.  – Ignition coil - check the secondary winding.  – Check the spark plug connector.  – Check the stator winding of the alternator. 		
Engine has too little power	Air filter is very dirty Fuel filter is very dirty Fuel screen is very dirty Error in the electronic fuel injection Exhaust system leaks, deformed or too little damping material in the silencer Valve clearance too little Faulty ignition	– Clean the air filter and air filter box.   (p. 81) – Change the fuel filter.  – Change the fuel screen.   (p. 138) – Read out the fault memory using the diagnostics tool.  – Check exhaust system for damage. – Change the damping material on the main silencer.   (p. 85) – Adjust the valve clearance. 		

Cause	Finding	Remedy		
		– Ignition coil - check the secondary winding. 🔧 – Check the spark plug connector. 🔧 – Check the stator winding of the alternator. 🔧		
The engine dies during the trip	Lack of fuel Error in the circuit, OCU LED A and D lights up.	– Refuel. 📖 (p. 51) – Check the electrical system.		
Engine overheats	Too little coolant in cooling system Too little air stream Radiator fins very dirty Foam formation in the cooling system Bent radiator hose Thermostat defective Defect in the radiator fan system, OCU LED E lights up.	– Check the transmission and cooling system for leaks. – Check the coolant level. 📖 (p. 129) – Switch off the engine when standing. – Clean the radiator fins. – Drain the coolant. 🔧 📖 (p. 130) – Refill the coolant. 🔧 📖 (p. 130) – Change the radiator hose. 🔧 – Check the thermostat. 🔧 <table border="1"><tr><td>Opening temperature</td><td>70 °C (158.0 °F)</td></tr></table> – Check the radiator fan. 🔧 – Check the electrical system.	Opening temperature	70 °C (158.0 °F)
Opening temperature	70 °C (158.0 °F)			
Malfunction indicator lamp lights up or flashes	Error in the electronic fuel injection	– Check wiring for damage and electrical plug-in connectors for corrosion and damage. – Read out the fault memory using the diagnostics tool. 🔧		
High oil consumption	Engine vent hose bent The engine oil level is too high The engine oil is too thin (low viscosity) Piston and cylinder worn	– Route the vent hose without bends or change it if necessary. – Check the engine oil level. 📖 (p. 139) – Change the engine oil and the oil filter, clean the oil screens. 🔧 📖 (p. 140) – Measure the piston/cylinder mounting clearance. 🔧		
12 V battery discharged	The 12-V battery is not being charged by the alternator unwanted electrical load	– Check the charging voltage. 🔧 – Check the stator winding of the alternator. 🔧 – Check the open-circuit current. 🔧		
Values in combination instrument deleted (time, stop watch, lap times)	The combination instrument battery is empty	– Change combination instrument battery. 📖 (p. 125)		
Fault with the lighting system or horn.	Error in the circuit, OCU LED B or C lights up.	– Check the electrical system.		

22.1 Flash codes

Blink code for malfunction indicator light	 Malfunction indicator light lights up
Error level condition	Lambda sensor heater – circuit fault Time: ≥ 3 s Oxygen sensor heater - input signal too high Time: ≥ 0.1 s Oxygen sensor - failure in circuit Time: ≥ 60 s Oxygen sensor - input signal too high Time: ≥ 60 s Fuel vapor valve – input signal too low Fuel vapor valve – input signal too high THREF – internal malfunction of the engine control unit
Blink code for malfunction indicator light	 02: Malfunction indicator light flashes 2x short
Error level condition	Crankshaft speed sensor – circuit fault The induction manifold pressure sensor delivers a normal signal (engine running), while the crankshaft speed sensor does not generate any signal at all. Time: ≥ 2.0 s
Blink code for malfunction indicator light	 06: Malfunction indicator light flashes 6x short
Error level condition	Throttle valve position sensor circuit A – circuit fault Voltage: ≤ 0.352 V Time: ≥ 3 s Throttle valve position sensor circuit A – input signal too high Voltage: ≥ 4.785 V Time: ≥ 3 s
Blink code for malfunction indicator light	 09: Malfunction indicator light flashes 9x short
Error level condition	Induction manifold pressure sensor – circuit fault Voltage: ≥ 4.121 V Time: ≥ 3 s Induction manifold pressure sensor – input signal too low Voltage: ≤ 0.215 V Time: ≥ 3 s

Blink code for malfunction indicator light	 12: Malfunction indicator light flashes 1x long, 2x short
Error level condition	Coolant temperature sensor – circuit malfunction Voltage: $\geq 4.785\text{ V}$ Time: $\geq 3\text{ s}$ Coolant temperature sensor – input signal too low Voltage: $\leq 0.137\text{ V}$ Time: $\geq 3\text{ s}$
Blink code for malfunction indicator light	 13: Malfunction indicator light flashes 1x long, 3x short
Error level condition	Intake air temperature sensor - circuit fault Voltage: $\geq 4.824\text{ V}$ Time: $\geq 3\text{ s}$ Intake air temperature sensor – input signal too low Voltage: $\leq 0.195\text{ V}$ Time: $\geq 3\text{ s}$
Blink code for malfunction indicator light	 15: Failure indicator light flashes 1x long, 5x short
Error level condition	Tilt sensor – input signal too low Voltage: $\leq 0.176\text{ V}$ Time: $\geq 25.5\text{ s}$ Tilt sensor – open / input signal too high Voltage: $\geq 4.57\text{ V}$ Time: $\geq 25.5\text{ s}$
Blink code for malfunction indicator light	 21: Malfunction indicator light flashes 2x long, 1x short
Error level condition	Battery voltage – input voltage too high Engine control unit power supply: $\geq 15.98\text{ V}$ Time: $\geq 2\text{ s}$
Blink code for malfunction indicator light	 22: Failure indicator light flashes 2x long, 2x short
Error level condition	Gear position sensor – input signal too low Time: $\geq 0.1\text{ s}$ Gear position sensor – input signal too high Time: $\geq 0.1\text{ s}$ Gear position sensor malfunction

Blink code for malfunction indicator light	 33: Malfunction indicator lamp flashes 3x long, 3x short
Error level condition	Injection valve cylinder 1 – circuit fault Time: ≥ 2.0 s
Blink code for malfunction indicator light	 37: Malfunction indicator light flashes 3x long, 7x short
Error level condition	Ignition coil – circuit fault Time: ≥ 2.0 s
Blink code for malfunction indicator light	 41: Malfunction indicator light flashes 4x long, 1x short
Error level condition	Fuel pump controller – short circuit to ground/open circuit The engine is switched off: ≥ 3 s Fuel pump controller – open circuit/short circuit to plus The engine is switched off: ≥ 3 s
Blink code for malfunction indicator light	 43: Failure indicator light flashes 4x long, 3x short
Error level condition	Radiator fan control – short circuit to ground or open circuit Radiator fan control – short circuit to plus
Blink code for malfunction indicator light	 65: Failure indicator light flashes 6x long, 5x short
Error level condition	EEPROM – malfunction Read data and write data are different.

23.1 Engine

23.1.1 Technical data - engine

Design	1-cylinder 4-stroke engine, water-cooled
Displacement	349.7 cm ³ (21.340 in ³)
Stroke	57.5 mm (2.264 in)
Bore	88 mm (3.46 in)
Compression ratio	13.7:1
Control	DOHC, four valves controlled via cam lever, drive via timing chain
Valve diameter, intake	40.40 mm (1.5906 in)
Valve diameter, exhaust	40.40 mm (1.5906 in)
Valve clearance	
Intake at: 20 °C (68.0 °F)	0.08 mm ... 0.15 mm (0.0031 in ... 0.0059 in)
Exhaust at: 20 °C (68.0 °F)	0.12 mm ... 0.19 mm (0.0047 in ... 0.0075 in)
Crankshaft bearing	2-cylinder roller bearing
Big (bottom) end bearing	Plain bearing
Wrist pin bearing	Bearing bush
Piston	Forged light alloy
Piston rings	1 compression ring, 1 oil scraper ring
Engine lubrication	Pressure circulation lubrication with 2 trochoidal pumps
Primary transmission	24:72
Clutch	Multidisc clutch in oil bath/hydraulically activated/damped
Transmission	6 speed transmission, claw shift
Gear ratios	
1st gear	13:33
2nd Gear	16:30
3rd Gear	18:26
4th Gear	22:26
5th Gear	23:23
6th Gear	26:22
Alternator	14 V 200 W (0.268 hp)
Ignition system	Contactless controlled fully electronic ignition with digital ignition adjustment
Spark plug	NGK LMAR9AI-10

Plug gap of spark plug	1.0 mm (0.039 in)
Cooling	Liquid cooling, permanent circulation of coolant by water pump
Starting aid	Starter motor
Idle speed	1,950 rpm ... 2,050 rpm (32.50 Hz ... 34.17 Hz)

23.1.2 Capacities - engine

engine oil	
Engine oil (10W/50)  (p. 169) fully synthetic	1.0 l (0.26 liq. gal _{US})
coolant	
Coolant  (p. 170) Antifreeze protection to at least: -25 °C (-13.0 °F)	0.95 l (0.251 liq. gal _{US})

23.2 Chassis

23.2.1 Technical data - chassis

Frame	Central tube frame made of chrome molybdenum steel tubing
Fork	WP XPLOR Closed Cartridge
Suspension travel:	
front	300 mm (11.81 in)
rear	310 mm (12.20 in)
Triple clamp offset	22 mm (0.87 in)
Shock absorber	WP PDS
Brake system	Disc brakes, floating brake calipers
Brake discs diameter	
front	260 mm (10.24 in)
rear	220 mm (8.66 in)
Brake disc wear limit	
front	2.5 mm (0.098 in)
rear	3.5 mm (0.138 in)
Street tire pressure	
front	2.0 bar (29.0 psi)
rear	2.0 bar (29.0 psi)

23 Technical specifications

Final drive	14:48
Chain	5/8 x 1/4"
Rear sprockets available	• 48 teeth • 50 teeth • 52 teeth
Steering head angle	63.9° (1.115 rad)
Wheelbase	1,488 ±10 mm (58.58 ±0.39 in)
Seat Height unloaded	963 mm (37.91 in)
Ground clearance unloaded	347 mm (13.66 in)
Weight without fuel approx.	107 kg (235.9 lb)
Maximum permissible front axle load	145 kg (319.7 lb)
Maximum permissible rear axle load	190 kg (418.9 lb)
Maximum permissible total weight	335 kg (738.5 lb)

23.2.2 Technical data - tires

Street tire pressure	
front	1.8 bar (26.1 psi)
rear	1.8 bar (26.1 psi)

Tire front	Rear tire
90/90 - 21 M/C 54S M+S TT Continental TKC80	140/80 - 18 M/C 65R M+S TT Continental TKC80
The tires specified represent one of the possible series production tires. For alternative manufacturers, if any, contact an authorized dealer or qualified tire dealership. If local road approval regulations apply, these and the respective technical specifications must be observed.	

23.2.3 Capacities - vehicle

Total fuel tank capacity, approx.	
Super unleaded (ROZ 95)  (p. 168)	8.5 l (2.25 liq. gal _{US})

23.3 Electrics

23.3.1 Battery

12-V battery	HJTZ5S-FP-C	Lithium-ion battery Battery voltage: 12 V Nominal capacity: 2.0 Ah Maintenance-free
Button cell	CR 2430	Battery voltage: 3 V

23.3.2 Fuses

Fuse	58011109120	20 A
------	-------------	------

23.3.3 Lamps

Dashboard illumination and indicator lights	LED	
Low beam	LED	
Parking light	LED	
high beam	LED	
Turn signal	RY10W / Sockel BAU15s	12 V 10 W (0.013 hp)
Brake light	LED	
Tail light	LED	
License plate lighting	LED	

23.4 Fork

23.4.1 Technical data - fork

Fork part number	A490C167Z402000
Compression damping	
Comfort	17 clicks
Standard	15 clicks
Sport	7 clicks
Rebound damping	
Comfort	19 clicks
Standard	17 clicks
Sport	9 clicks
Spring length with preload spacer(s)	457 mm (17.99 in)
Spring rate	
Weight of rider: 65 kg ... 75 kg (143.3 lb ... 165.3 lb)	46 N/mm (262.7 lb _f /in)
Weight of rider: 75 kg ... 85 kg (165.3 lb ... 187.4 lb)	48 N/mm (274.1 lb _f /in)

23 Technical specifications

Weight of rider: 85 kg ... 95 kg (187.4 lb ... 209.4 lb)	50 N/mm (285.5 lb _f /in)
Fork length	940 mm (37.01 in)

23.4.2 Capacities - fork

Oil capacity, outer assembly	
Fork oil (48601166S1) (SAE 4)  (p. 169)	350 ml (11.83 fl. oz _{US})
Oil capacity, cartridge	
Fork oil (48601166S1) (SAE 4)  (p. 169)	175 ml (5.92 fl. oz _{US})

23.5 Shock absorber

23.5.1 Technical data - shock absorber

Shock absorber part number	A490C467Z305000
Low-speed compression damping	
Comfort	18 clicks
Standard	15 clicks
Sport	12 clicks
High-speed compression damping	
Comfort	2.5 turns (900°)
Standard	2 turns (720°)
Sport	1.5 turns (540°)
Rebound damping	
Comfort	18 clicks
Standard	15 clicks
Sport	12 clicks
Preload	7 mm (0.28 in)
Spring rate	
Weight of rider: 65 kg ... 75 kg (143.3 lb ... 165.3 lb)	69 N/mm (394.0 lb _f /in)
Weight of rider: 75 kg ... 85 kg (165.3 lb ... 187.4 lb)	72 N/mm (411.1 lb _f /in)
Weight of rider: 85 kg ... 95 kg (187.4 lb ... 209.4 lb)	75 N/mm (428.3 lb _f /in)
Spring length	225 mm (8.86 in)
Gas assisted	10 bar (145 psi)

Static sag	38 mm (1.50 in)
Rider sag	110 mm (4.33 in)
Installation position	402.7 mm (15.854 in)

23.5.2 Capacities - shock absorber

Oil capacity, shock absorber	
Shock absorber oil (50180751S1) (SAE 2.5)  (p. 170)	Fill to the maximum mark

23.6 Tightening torque

23.6.1 Engine tightening torques

Oil nozzle for main bearing lubrication	M4	2 Nm (1.5 ft·lb _r) Loctite® 243
Oil nozzle for clutch lubrication	M4	2 Nm (1.5 ft·lb _r) Loctite® 243
Screw, oil nozzle bent for piston cooling	M4	2.5 Nm (1.84 ft·lb _r) Loctite® 243
Jet, crank chamber ventilation	M4	2 Nm (1.5 ft·lb _r) Loctite® 243
Hose clip, intake flange	M4	3 Nm (2.2 ft·lb _r)
Detent arm screw	M5	6 Nm (4.4 ft·lb _r) Loctite® 243
Screw, gear position sensor	M5	5 Nm (3.7 ft·lb _r) Loctite® 243
Screw, clutch spring	M5	6 Nm (4.4 ft·lb _r)
Suction/pressure pump oil pump cover screw	M5	6 Nm (4.4 ft·lb _r) Loctite® 243
Oil pump idler gear fuse screw	M5	6 Nm (4.4 ft·lb _r) Loctite® 243
Oil nozzle for piston cooling	M5	2 Nm (1.5 ft·lb _r) Loctite® 243

23 Technical specifications

Screw, bearing retainer	M5	6 Nm (4.4 ft·lb _f) Loctite® 243
Stator screw	M5	6 Nm (4.4 ft·lb _f) Loctite® 2701
Alternator cover grub screw	M5	2 Nm (1.5 ft·lb _f) Loctite® 243
Shift star screw	M6	10 Nm (7.4 ft·lb _f) Loctite® 243
Exhaust flange screw	M6	10 Nm (7.4 ft·lb _f) Loctite® 243
Screw, guide rail	M6	10 Nm (7.4 ft·lb _f) Loctite® 243
Screw, timing chain failure protection	M6	10 Nm (7.4 ft·lb _f) Loctite® 243
Screw, starter motor	M6	10 Nm (7.4 ft·lb _f)
Screw, outer clutch cover	M6	10 Nm (7.4 ft·lb _f)
Screw, inner clutch cover	M6	10 Nm (7.4 ft·lb _f)
Screw, clutch slave cylinder	M6	10 Nm (7.4 ft·lb _f)
Screw, engine case	M6	10 Nm (7.4 ft·lb _f)
Screw, oil filter cover	M6	10 Nm (7.4 ft·lb _f)
Screw, shift lever	M6	14 Nm (10.3 ft·lb _f) Loctite® 243
Screw, starter motor - intermediate gear	M6	10 Nm (7.4 ft·lb _f) Loctite® 243
Screw, valve cover	M6	8 Nm (5.9 ft·lb _f)
Stud, cylinder head	M6	6 Nm (4.4 ft·lb _f) Loctite® 243
Nut, cylinder head	M6	10 Nm (7.4 ft·lb _f)
Screw, water pump cover	M6	10 Nm (7.4 ft·lb _f)

Nut, water pump impeller		M6	6 Nm (4.4 ft·lb _f) Loctite® 243
Screw, ignition cover		M6	10 Nm (7.4 ft·lb _f)
Fuel vapor retention system connection screw		M6	5 Nm (3.7 ft·lb _f) Loctite® 243
Screw, fuel vapor retention system lock		M6	5 Nm (3.7 ft·lb _f) Loctite® 243
Autodecompressor screw plug		M7×1	15 Nm (11.1 ft·lb _f) Loctite® 243
Screw, camshaft bearing bridge M7×1 Engine oil	1.		5 Nm (3.7 ft·lb _f)
	2.		14 Nm (10.3 ft·lb _f)
Slide rail screw		M8	15 Nm (11.1 ft·lb _f) Loctite® 243
Crankshaft clamp screw plug		M8	10 Nm (7.4 ft·lb _f)
Crankshaft fixing screw		M8	hand-tight
Screw plug, cam lever shaft		M10×1	10 Nm (7.4 ft·lb _f)
Front sprocket screw		M10	60 Nm (44.3 ft·lb _f) Loctite® 243
Chain tension adjuster finger follower shaft plug		M10×1	8 Nm (5.9 ft·lb _f)
Screw, rotor		M10×1	70 Nm (51.6 ft·lb _f) Engine oil
Coolant temperature sensor		M10×1.25	12 Nm (8.9 ft·lb _f)
Oil channel screw plug		M10×1	15 Nm (11.1 ft·lb _f) Loctite® 243
Stud, cylinder head		M10×1.25	20 Nm (14.8 ft·lb _f) Loctite® 243
Nut, cylinder head M10×1.25 Engine oil	1.		10 Nm (7.4 ft·lb _f)
	2.		30 Nm (22.1 ft·lb _f)

Nut, cylinder head M10×1.25 Engine oil	3.	180° (3.14 rad)
Spark plug M10×1		12 Nm (8.9 ft·lb _f)
Oil drain plug with magnet M12×1.5		20 Nm (14.8 ft·lb _f)
Pressure control valve plug M12×1.5		20 Nm (14.8 ft·lb _f)
Oil drain plug M14×1.5		15 Nm (11.1 ft·lb _f)
Nut, inner clutch hub M18×1.5		100 Nm (73.8 ft·lb _f)
Nut, primary gear wheel M18LH×1.5		120 Nm (88.5 ft·lb _f) Loctite® 243
Plug, oil screen M20×1.5		15 Nm (11.1 ft·lb _f)
Screw plug, timing chain tensioner M24×1.5		40 Nm (29.5 ft·lb _f)
Oil plug M24×3		hand-tight
Screw plug, alternator cover M24×1.5		18 Nm (13.3 ft·lb _f) Loctite® 243

23.6.2 Chassis tightening torques

Screw, air boot on throttle body		2.8 Nm (2.07 ft·lb _f)
Hose connector, active carbon filter		3.8 Nm (2.80 ft·lb _f)
Mushroom head screw for spoiler and seat		2.5 Nm (1.84 ft·lb _f)
Screw, radiator hoses clip		2.4 Nm (1.77 ft·lb _f)
Screw, fixed grip M4		5 Nm (3.7 ft·lb _f) Loctite® 243
Screw, hose clamp, throttle body M4		5 Nm (3.7 ft·lb _f)
Remaining nuts on chassis M5		5 Nm (3.7 ft·lb _f)
Remaining screws on chassis M5		5 Nm (3.7 ft·lb _f)
Screw, battery terminal M5		2.5 Nm (1.84 ft·lb _f)

Screw, light switch	M5	1 Nm (0.7 ft·lb _f)
Screw, turn signal switch	M5	1 Nm (0.7 ft·lb _f)
Screw, intake air temperature sensor	M5	2.7 Nm (1.99 ft·lb _f)
Screw, frame protector	M5	3 Nm (2.2 ft·lb _f)
Screw, throttle body cover	M5	2.6 Nm (1.92 ft·lb _f)
Nut, starter motor	M6	4 Nm (3.0 ft·lb _f)
Remaining nuts on chassis	M6	10 Nm (7.4 ft·lb _f)
Remaining screws on chassis	M6	10 Nm (7.4 ft·lb _f)
Screw, throttle twist grip	M6	5 Nm (3.7 ft·lb _f)
Screw, rear brake disc	M6	14 Nm (10.3 ft·lb _f) Loctite® 243
Screw, front brake disc	M6	14 Nm (10.3 ft·lb _f) Loctite® 243
Screw, chain slider guard	M6	6 Nm (4.4 ft·lb _f) Loctite® 243
Screw, ball joint of push rod on brake cylinder	M6	10 Nm (7.4 ft·lb _f) Loctite® 243
Fender screw	M6	12 Nm (8.9 ft·lb _f)
Screw, seat installation	M6	8 Nm (5.9 ft·lb _f)
Brake line guide screw on swingarm	M6	4.5 Nm (3.32 ft·lb _f) Loctite® 243
Screw, connector support incl. dashboard	M6	5 Nm (3.7 ft·lb _f)
Screw, ground wire on frame	M6	10 Nm (7.4 ft·lb _f)
Screw, starter cable to starter relay	M6	6 Nm (4.4 ft·lb _f)
Screw, hand lever	M6	5 Nm (3.7 ft·lb _f)
Screw, battery holding bracket	M6	6 Nm (4.4 ft·lb _f)

23 Technical specifications

Screw, fuel tank spoiler on radiator	M6	6 Nm (4.4 ft·lb _f)
Nut, throttle cable on throttle body	M6	3 Nm (2.2 ft·lb _f)
Screw, chain guide	M6	10 Nm (7.4 ft·lb _f) Loctite® 243
Nut, rear sprocket screw	M8	35 Nm (25.8 ft·lb _f) Loctite® 2701
Nut, rim lock	M8	12 Nm (8.9 ft·lb _f)
Brake pedal stop nut	M8	20 Nm (14.8 ft·lb _f)
Remaining nuts on chassis	M8	25 Nm (18.4 ft·lb _f)
Remaining screws on chassis	M8	25 Nm (18.4 ft·lb _f)
Screw, front brake caliper	M8	25 Nm (18.4 ft·lb _f) Loctite® 243
Screw, top triple clamp	M8	20 Nm (14.8 ft·lb _f)
Screw, bottom triple clamp	M8	15 Nm (11.1 ft·lb _f)
Screw, fork shoe	M8	15 Nm (11.1 ft·lb _f)
Screw, upper steering stem	M8	20 Nm (14.8 ft·lb _f) Loctite® 243
Screw, manifold	M8	15 Nm (11.1 ft·lb _f)
Handlebar clamp screw	M8	20 Nm (14.8 ft·lb _f)
Screw, chain slider	M8	15 Nm (11.1 ft·lb _f)
Screw, engine brace on engine	M8×20	25 Nm (18.4 ft·lb _f) Loctite® 243
Screw, subframe, top	M8	35 Nm (25.8 ft·lb _f) Loctite® 243
Screw, side stand attachment	M8	33 Nm (24.3 ft·lb _f) Loctite® 2701
Screw, subframe, bottom	M8	30 Nm (22.1 ft·lb _f) Loctite® 2701

Screw, engine brace on frame	M8×15	25 Nm (18.4 ft·lb _r) Loctite® 2701
Screw, front sprocket cover	M8	15 Nm (11.1 ft·lb _r)
Screw, wheel speed sensor on fork shoe	M8×1.25	4.5 Nm (3.32 ft·lb _r)
Screw, brake caliper on brake caliper bracket	M10	45 Nm (33.2 ft·lb _r) Loctite® 243
Engine bracket screw	M10	60 Nm (44.3 ft·lb _r)
Remaining nuts on chassis	M10	45 Nm (33.2 ft·lb _r)
Remaining screws on chassis	M10	45 Nm (33.2 ft·lb _r)
Screw, handlebar mount	M10	40 Nm (29.5 ft·lb _r) Loctite® 243
Screw, sprocket	M10	60 Nm (44.3 ft·lb _r) Loctite® 2701
Top shock absorber screw	M12	80 Nm (59.0 ft·lb _r) Loctite® 2701
Bottom shock absorber screw	M12	80 Nm (59.0 ft·lb _r) Loctite® 2701
Nut, swingarm pivot	M16×1.5	100 Nm (73.8 ft·lb _r)
Screw, top steering head	M20×1.5	12 Nm (8.9 ft·lb _r)
Screw, wheel spindle, front	M20×1.5	35 Nm (25.8 ft·lb _r)
Nut, wheel spindle, rear	M22	80 Nm (59.0 ft·lb _r)
Screw-in nozzle, cooling system	M24×1.5	7.5 Nm (5.53 ft·lb _r) Loctite® 243
Outer diaphragm fitting	EJOT PT® – 35×25	0.8 Nm (0.59 ft·lb _r)
Inner diaphragm fitting	EJOT PT® – 35×25	1 Nm (0.7 ft·lb _r)
Spoke nipple, front wheel	M4,5	6 Nm (4.4 ft·lb _r)
Spoke nipple, rear wheel	M4,5	6 Nm (4.4 ft·lb _r)

23 Technical specifications

Screw, intake air temperature sensor	EJOT PT® – 50×18	0.7 Nm (0.52 ft·lb _f)
Screw, emergency OFF switch	EJOT PT® – K50×18	2 Nm (1.5 ft·lb _f)
Screw, pressure regulator	EJOT PT® – K60×25 – Z	2.3 Nm (1.70 ft·lb _f)
Screw, seat installation	EJOT EJOFORM® – K60×23/18	2.5 Nm (1.84 ft·lb _f)
Remaining screws on chassis	EJOT PT® – K60×25 – Z	2 Nm (1.5 ft·lb _f)
Screw, fuel pump	EJOT PT® – M60×30	2.5 Nm (1.84 ft·lb _f)
Screw, air filter box on subframe	EJOT PT® – 60×20	5 Nm (3.7 ft·lb _f)

A Technical terms

OBD	On-board diagnosis	Vehicle system, which monitors the specified parameters of the vehicle electronics
-----	--------------------	--

B Fuels

Super unleaded

Standards

- ROZ 95 → DIN EN 228

Fuel additive

Recommended supplier

MOTOREX®

- FUEL STABILIZER

C Operating supplies

Off-road chain spray

Recommended supplier

MOTOREX®

- CHAINLUBE OFF ROAD

Fork oil

Order details

- 48601166S1

Standards

- SAE 4 → SAE

Universal oil spray

Recommended supplier

MOTOREX®

- JOKER 440 SYNTHETIC

Long-life grease

Recommended supplier

MOTOREX®

- Bike Grease 2000

Engine oil

Recommended supplier

MOTOREX®

- CROSS POWER 4T

Standards

→ JASO T903 MA2

- 10W/50 → SAE

Properties

- fully synthetic

Engine oil

Recommended supplier

MOTOREX®

- TOP SPEED 4T

Standards

→ JASO T903 MA2

- 15W/50 → SAE

Properties

- Partially synthetic

High viscosity grease

Recommended supplier

SKF®

- LGHB 2

Silicone spray

Recommended supplier

MOTOREX®

- SILICONE SPRAY

Shock absorber oil

Order details

- 50180751S1

Standards

- SAE 2.5 → SAE

Oil for foam air filter

Recommended supplier

MOTOREX®

- RACING BIO AIR FILTER OIL

Brake fluid DOT 4 / DOT 5.1

Recommended supplier

Castrol

- REACT PERFORMANCE DOT 4

MOTOREX®

- BRAKE FLUID DOT 5.1

Standards

→ DOT

Coolant

Recommended supplier

MOTOREX®

- COOLANT M3.0

Properties

- | | |
|-------------------------------------|----------------------|
| • Antifreeze protection to at least | -25 °C
(-13.0 °F) |
|-------------------------------------|----------------------|

D Cleaning agents

Chain cleaner

Recommended supplier

MOTOREX®

- CHAIN CLEAN

Preserving materials

Recommended supplier

MOTOREX®

- MOTO PROTECT

Air filter cleaning agent

Recommended supplier

MOTOREX®

- RACING BIO AIR FILTER CLEANER

Cleaning agents for plastics, glass, lacquers, metals, windshields and visors

Recommended supplier

MOTOREX®

- QUICK CLEANER

Environmentally neutral universal cleaning agent

Recommended supplier

MOTOREX®

- MOTO CLEAN UNIVERSAL

E Icons**E.1 Symbol colors****E.1.1 Yellow and orange symbols**

Yellow and orange symbols indicate a malfunction status that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.

	Failure indicator light lights up/flashs yellow.
	Fuel level warning light lights up yellow.

E.1.2 Green and blue symbols

Green and blue symbols convey information.

	Turn signal indicator light flashes green.
	The high beam indicator light lights up blue.

1	
12 V battery	
charging	118
installation	117
removing	116
starting power	44
A	
Accessories	16
Air filter	
cleaning	81
installing	81
removing	80
Air filter box	
cleaning	81
Air filter box cover	
installing	80
preparing for securing	82
removing	79
Auxiliary substances	16
B	
Battery	157
Brake discs	
checking	99
Brake fluid	
adding front brake	100
adding to rear brake	106
Brake fluid level	
checking on front brake	100
checking on rear brake	105
Brake lining retainers	
checking on front brake	101
checking on rear brake	107
Brake pad	
checking on front brake	101
Brake pads	
changing on the rear brake	107
checking on rear brake	107
of the front brake, changing	102
Brake pedal	
adjusting the basic position	104
checking the free travel	104
C	
Chain	
checking	92
cleaning	89
Chain guide	
checking	92

Chain tension	
adjusting	91
checking	90
Characteristic map of the throttle response	
adjusting	134
Checking basic chassis setting with	
rider's weight	56
Clothing	12
Clutch	
changing fluid	97
checking/correcting fluid level	96
Clutch lever	
adjusting the basic position	97
Compression damping	
adjusting the fork	62
Coolant	
antifreeze and coolant level, checking	128
changing	131
draining	130
level, checking	129
refilling	130
Customer service	16
D	
Dashboard	
adjusting	31
combination instrument battery, chang-	
ing	125
overview	29
setting kilometers or miles	30
setting the clock	31
viewing the lap time	32
Defined use	13
Diagnostic connector	126
Difficult operating conditions	45
dry sand	45
high temperatures	47
low temperature	47
muddy surfaces	46
slow speed	47
snow	47
wet sand	46
wet surfaces	46
E	
Engine	
running in	44
Engine oil	
adding	142
changing	140

Engine oil level			
checking	139	Handbrake lever	
Environment	13	checking the free travel	99
F		free travel, adjusting	99
Figures	16	Handlebar position	63
Fork legs		adjusting	63
bleeding	65	Headlight	
checking basic setting	62	adjusting headlight range	124
cleaning the dust boots	66	Headlight bulb	
installing	69	changing	123
removing	68	Headlight mask with headlight	
Fork protector		installation	122
installation	67	removing	122
removing	67	Headlight setting	
Frame		checking	123
checking	94	High-speed compression damping	
Frame protector		adjusting the shock absorber	57
installation	68	I	
removing	67	Idle speed	
Front fender		adjusting	135
installation	75	Idle speed adjustment screw	25
removing	74	Ignition lock	23
Front sprocket		Implied warranty	16
checking	92	Improper use	14
Front wheel		Intended use	13
installing	111	L	
removing	110	Lamps	157
Frost protection		Lower triple clamp	
checking	128	installation	70
Fuel screen		removing	69
changing	138	Low-speed compression damping	
Fuel tank		adjusting the shock absorber	56
installation	87	M	
removing	85	Main fuse	
Fuel tank cap		changing	121
closing	25	Manufacturer's warranty	16
opening	24	Motorcycle	
Fuse		cleaning	144
changing the main fuse	121	raising with lift stand	65
Fuses	157	removing from lift stand	65
G		Muffler	
Gear shift lever		changing damping material	85
adjusting the basic position	137	clean spark arrestor	83
checking the basic position	137	installation	83
H		removing	82
Hand grip		O	
checking	95	OCU	126

Oil filter		
changing	140	
Oil screens		
cleaning	140	
Owner's manual	13	
P		
Preparing for use		
after storage	148	
checks and maintenance measures when preparing for use	48	
notes on preparing for first use	43	
Protective clothing	12	
R		
Rear sprocket		
checking	92	
Rear wheel		
installation	112	
removing	111	
Rebound damping		
adjusting the fork	62	
adjusting the shock absorber	57	
Refueling		
fuel	51	
Resources	16	
Rider sag		
adjusting	61	
S		
Safe use	12	
Seat		
mounting	78	
removing	78	
Service	16	
Shock absorber		
adjusting the spring preload	60	
checking static sag	59	
checking the rider sag	59	
installation	76	
removing	75	
Spare parts	16	
Spoke tension		
checking	115	
Starting	48	
Starting performance of lithium-ion batteries at low temperatures	44	
Steering		
locking	28	
unlocking	28	
Steering head bearing		
lubricating	74	
Steering head bearing play		
adjusting	73	
checking	72	
Storage	147	
Swingarm		
checking	94	
T		
Technical specifications		
tires	156	
Throttle cable play		
adjusting	133	
checking	133	
Throttle cable routing		
checking	94	
Throttle valve position		
programming	136	
Tire condition		
checking	113	
Tire pressure		
checking	114	
Transportation	51	
Turn signal bulb		
changing	124	
V		
Vehicle identification number	19	
VIN	19	
W		
Winter operation		
checks and maintenance steps	145	
Work rules	12	



3240242en

24/07/2025

